

Pilot's Operating Handbook And FAA Approved Airplane Flight Manual <u>SKYHAVVK</u> SP



Model 172S NAV III Avionics - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On SERIAL NUMBER 172511011 REGISTRATION NUMBER D-EESP

This publication includes the material required to be furnished to the pilot by 14 CFR 23.

APPROVED BY

DATE OF APPROVAL 20 December 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA ORIGINAL ISSUE - 20 DECEMBER 2007 REVISION 1 - 12 JANUARY 2009 U.S.



PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS

SERIALS 172S10468, 172S10507, 172S10640 AND 172S10656 AND ON

ORIGINAL ISSUE - 20 DECEMBER 2007

REVISION 1 - 12 JANUARY 2009

PART NUMBER: 172SPHBUS-01

172SPHBUS-01

U.S.

i/ii

CONGRATULATIONS

Congratulations on your purchase and welcome to Cessna ownership! Your Cessna has been designed and constructed to give you the most in performance, value and comfort.

This Pilot's Operating Handbook has been prepared as a guide to help you get the most utility from your airplane. It contains information about your airplane's equipment, operating procedures, performance and suggested service and care. Please study it carefully and use it as a reference.

The worldwide Cessna Organization and Cessna Customer Service are prepared to serve you. The following services are offered by each Cessna Service Station:

- THE CESSNA AIRPLANE WARRANTIES, which provide coverage for parts and labor, are upheld through Cessna Service Stations worldwide. Warranty provisions and other important information are contained in the Customer Care Program Handbook supplied with your airplane. The Customer Care Card assigned to you at delivery will establish your eligibility under warranty and should be presented to your local Cessna Service Station at the time of warranty service.
- FACTORY TRAINED PERSONNEL to provide you with courteous, expert service.
- FACTORY APPROVED SERVICE EQUIPMENT to provide you efficient and accurate workmanship.
- A STOCK OF GENUINE CESSNA SERVICE PARTS are available when you need them.
- THE LATEST AUTHORITATIVE INFORMATION FOR SERVICING CESSNA AIRPLANES. Cessna Service Stations have all of the current Maintenance Manuals, Illustrated Parts Catalogs and various other support publications produced by Cessna Aircraft Company.

A current Cessna Service Station Directory accompanies your new airplane. The Directory is revised annually, and a current copy can be obtained from your nearest Cessna Service Station.

We urge all Cessna owners/operators to utilize the benefits available within the Cessna Organization.

172SPHBUS-00

U.S.

iii

PERFORMANCE - SPECIFICATIONS

*SPEED:
Maximum at Sea Level
CRUISE: Recommended lean mixture with fuel allowance for engine start, taxi, takeoff, climb and 45 minutes reserve.
75% Power at 8500 FeetRange - 518 NM53 Gallons Usable FuelTime - 4.26 HOURSRange, 45% Power at 10,000 FeetRange - 638 NM53 Gallons Usable FuelTime - 6.72 HOURS
RATE OF CLIMB AT SEA LEVEL
SERVICE CEILING 14,000 FEET
TAKEOFF PERFORMANCE: Ground Roll
LANDING PERFORMANCE: Ground Roll
STALL SPEED: Flaps UP, Power Idle
MAXIMUM WEIGHT: Ramp

PERFORMANCE - SPECIFICATIONS (Continued)

STANDARD EMPTY WEIGHT 1663 POUNDS
MAXIMUM USEFUL LOAD
BAGGAGE ALLOWANCE 120 POUNDS
WING LOADING 14.7 lbs/sq. ft.
POWER LOADING
FUEL CAPACITY
OIL CAPACITY 8 QUARTS
ENGINE: Textron Lycoming IO-360-L2A 180 BHP at 2700 RPM
PBOPELLEB.

NOTE

*Speed performance is shown for an airplane equipped with speed fairings which increase the speeds by approximately 2 knots. There is a corresponding difference in range, while all other performance figures are unchanged when speed fairings are installed.

The above performance figures are based on airplane weights at 2550 pounds, standard atmospheric conditions, level, hard-surfaced dry runways and no wind. They are calculated values derived from flight tests conducted by Cessna Aircraft Company under carefully documented conditions and will vary with individual airplanes and numerous factors affecting flight performance.

INTRODUCTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

COVERAGE

The Pilot's Operating Handbook (POH) in the airplane at the time of delivery from Cessna Aircraft Company contains information applicable to the Model 172S Nav III airplanes by serial number and registration number shown on the Title Page. This POH is applicable to 172S airplanes, Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On, equipped with the NAV III Avionics Option and Garmin GFC 700 Automatic Flight Control System (AFCS) (if installed). All information is based on data available at the time of publication.

This POH consists of nine sections that cover all operational aspects of a standard equipped airplane. Section 9 contains the supplements which provide amended operating limitations, operating procedures, performance data and other necessary information for airplanes conducting special operations for both standard and optional equipment installed in the airplane.

Supplements are individual documents, and may be issued or revised without regard to revision dates which apply to the POH itself. These supplements contain a Log of Effective Pages, which should be used to determine the status of each supplement.

U.S.

ORIGINAL ISSUE AND REVISIONS

This Pilot's Operating Handbook and FAA Approved Airplane Flight Manual is comprised of the original issue and any subsequent revisions. To make sure that information in this manual is current, the revisions must be incorporated as they are issued. As revisions are issued, they will be noted in the Log of Effective Pages.

The part number of this manual has also been designed to further aid the owner/operator in determining the revision level of any POH. Refer to the example below for a breakdown:



It is the responsibility of the owner to maintain this POH in a current status when it is being used for operational purposes. Owners should contact a Cessna Service Station whenever the revision status of their POH is in question.

Revisions are distributed to owners of U.S. Registered aircraft according to FAA records at the time of revision issuance, and to Internationally Registered aircraft according to Cessna Owner Advisory records at the time of issuance. Revisions should be read carefully upon receipt and incorporated in this POH.

REVISION FILING INSTRUCTIONS

REGULAR REVISIONS

Pages to be removed or inserted in the Pilots' Operating Handbook and FAA Approved Airplane Flight Manual are determined by the Log of Effective Pages located in this section. This log contains the page number and revision level for each page within the POH. As revisions to the POH occur, the revision level on effected pages is updated. When two pages display the same page number, the page with the latest revision level shall be inserted into the POH. The revision level on the Log Of Effective Pages shall also agree with the revision level of the page in question.

TEMPORARY REVISIONS

Under limited circumstances, temporary revisions to the POH may be issued. These temporary revisions are to be filed in the applicable section in accordance with filing instructions appearing on the first page of the temporary revision.

Temporary Revisions will remain current until they have either been incorporated into the next POH revision or another temporary revision has been issued that supersedes that temporary revision. Each temporary revision is issued with a current List of Temporary Revisions that is to be inserted opposite the first page of the Log of Effective Pages in the front of the POH and will supersede any previously issued List of Temporary Revisions. This list is used to track the status of temporary revisions issued against this POH and is to be removed and discarded at the next revision to the POH. Removal of temporary revisions from the POH is accomplished per the removal instructions on each temporary revision.

IDENTIFYING REVISED MATERIAL

A bar will extend the full length of deleted, new, or revised text added on new or previously existing pages. This bar will be located adjacent to the applicable text in the margin on the left side of the page.

A bar in the footer will indicate a revision to the header/footer, a new page, format or spelling/grammar changes and/or that information has slipped to or from that page.

A bar located adjacent to the figure number in the margin on the left side of the page will be used to indicate that the figure number only has changed.

An asterisk located at the end of a figure number will be used to indicate that an illustration has been revised or is all new material (Ex: Figure $3-4^*$).

All revised pages will carry the revision number opposite the page number on the applicable page. A list of revisions is located at the beginning of the Log Of Effective Pages.

ix

WARNINGS, CAUTIONS AND NOTES

Throughout the text, warnings, cautions and notes pertaining to airplane handling and operations are utilized. These adjuncts to the text are used to highlight or emphasize important points.

WARNING

OPERATING PROCEDURES, TECHNIQUES, ETC., WHICH CAN RESULT IN PERSONAL INJURY OR LOSS OF LIFE IF NOT CAREFULLY FOLLOWED.

CAUTION

OPERATION PROCEDURES, TECHNIQUES, ETC., WHICH CAN RESULT IN DAMAGE TO EQUIPMENT IF NOT CAREFULLY FOLLOWED.

NOTE

An operating procedure, technique, etc., which is considered essential to emphasize.

LOG OF EFFECTIVE PAGES

Use this page to determine the currency and applicability of your POH.

Pages affected by the current revision are indicated by an asterisk (*) preceding the pages listed under the Page Number column.

Revision Level	Date of Issue
Original Issue	20 December 2007

nuary	2009
ļ	nuary

Page Number	Page Status	Revision Number
* Title	Revised	1
Assignment Record	Original	0
* i/ii	Revised	1
iii thru x	Original	0
* xi thru xii	Revised	1
xiii/xiv	Original	0
1-1/1-2 thru 1-30	Original	0
2-1/2-2 thru 2-5	Original	0
* 2-6	Revised	1
2-7 thru 2-21	Original	0
* 2-22	Revised	1
2-23 thru 2-28	Original	0
3-1	Original	0
* 3-2	Revised	1
3-3 thru 3-22	Original	0
* 3-23	Revised	1
3-24 thru 3-39/3-40	Original	0

(Continued Next Page)

172SPHBUS-01

U.S.

xi

LOG OF EFFECTIVE PAGES (Continued)

Page Number	Page Status	Revision Number
4-1	Original	0
* 4-2	Revised	1
4-3 thru 4-11	Original	0
* 4-12 thru 4-13	Revised	1
4-14 thru 4-26	Original	0
* 4-27 thru 4-40	Revised	1
4-41 thru 4-48	Original	0
5-1/5-2 thru 5-10	Original	0
* 5-11	Revised	1
5-12	Original	0
* 5-13	Revised	1
5-14 thru 5-24	Original	0
6-1/6-2 thru 6-18	Original	0
* 6-19 thru 6-24	Revised	1
7-1 thru 7-25	Original	0
* 7-26	Revised	1
7-27 thru 7-48	Original	0
* 7-49	Revised	1
7-50 thru 7-80	Original	0
8-1 thru 8-25/8-26	Original	0
9-1/9-2	Original	0

APPROVED BY

DISG.CE RLS

DATE OF APPROVAL 12 January 2009

INTRODUCTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

TABLE OF CONTENTS

SECTION	SE	EC	TIC	ON
---------	----	----	-----	----

GENERAL1
LIMITATIONS
EMERGENCY PROCEDURES
NORMAL PROCEDURES4
PERFORMANCE
WEIGHT AND BALANCE/EQUIPMENT LIST 6
AIRPLANE AND SYSTEM DESCRIPTION
HANDLING, SERVICE AND MAINTENANCE 8
SUPPLEMENTS9

SECTION 1 GENERAL

GENERAL

TABLE OF CONTENTS

Maximum Certificated Weights1-8 Weight In Baggage Compartment - Normal Category. 1-8 Standard Airplane Weights1-9 Cabin And Entry Dimensions1-9 Baggage Space And Entry Dimensions1-9 Symbols, Abbreviations And Terminology1-10 General Airspeed Terminology And Symbols1-10 Meteorological Terminology1-11 Engine Power Terminology 1-11 Airplane Performance And Flight Planning Terminology.....1-13 Weight And Balance Terminology1-14 Weight Conversions1-17 Length Conversions1-19 Distance Conversions1-23 Volume To Weight Conversion1-29 Quick Conversions1-30

Page

172SPHBUS-00

U.S. 1-1/1-2

B3079

SECTION 1 GENERAL

THREE VIEW - NORMAL GROUND ATTITUDE





0510T1002 0510T1003

Figure 1-1 (Sheet 1 of 2)

172SPHBUS-00

U.S.

THREE VIEW - NORMAL GROUND ATTITUDE



0510T1006

NOTE

- Wing span shown with standard strobe lights installed.
- Wheel base length is 65.0 inches.
- Propeller ground clearance is 11.25 inches.
- Wing area is 174.0 square feet.
- Minimum turning radius (*pivot point to outboard wing tip) is 27.0 feet, 5.50 inches.
- Normal ground attitude is shown with nose strut showing approximately 2 inches of strut, and wings level.

Figure 1-1 (Sheet 2)

INTRODUCTION

This POH contains 9 sections, and includes the material required to be furnished to the pilot by 14 CFR 23. It also contains supplemental data supplied by Cessna Aircraft Company.

Section 1 provides basic data and information of general interest. It also contains definitions or explanations of symbols, abbreviations, and terminology commonly used.

DESCRIPTIVE DATA

ENGINE

Number of Engines: 1 Engine Manufacturer: Textron Lycoming Engine Model Number: IO-360-L2A Engine Type: Normally aspirated, direct drive, air-cooled, horizontally opposed, fuel injected, four cylinder engine with 360.0 cu. in. displacement. Horsepower Rating and Engine Speed: 180 rated BHP at 2700 RPM

PROPELLER

Propeller Manufacturer: McCauley Propeller Systems Propeller Model Number: 1A170E/JHA7660 Number of Blades: 2 Propeller Diameter: 76 inches Propeller Type: Fixed pitch

(Continued Next Page)

172SPHBUS-00

U.S.

1-5

DESCRIPTIVE DATA (Continued)

FUEL

WARNING

USE OF UNAPPROVED FUELS MAY RESULT IN DAMAGE TO THE ENGINE AND FUEL SYSTEM COMPONENTS, RESULTING IN POSSIBLE ENGINE FAILURE.

Approved Fuel Grades (and Colors): 100LL Grade Aviation Fuel (Blue) 100 Grade Aviation Fuel (Green)

NOTE

Isopropyl alcohol or Diethylene Glycol Monomethyl Ether (DiEGME) may be added to the fuel supply. Additive concentrations shall not exceed 1% for isopropyl alcohol or 0.10% to 0.15% for DiEGME. Refer to Section 8 for additional information.

FUEL CAPACITY

Total Capacity	56.0 U.S. GALLONS
Total Usable	53.0 U.S. GALLONS
Total Capacity Each Tank	28.0 U.S. GALLONS
Total Usable Each Tank	26.5 U.S. GALLONS

NOTE

To ensure maximum fuel capacity and minimize crossfeeding when refueling, always park the airplane in a wings level, normal ground attitude and place the fuel selector in the LEFT or RIGHT position. Refer to Figure 1-1 for normal ground attitude dimensions.

(Continued Next Page)

172SPHBUS-00

U.S.

DESCRIPTIVE DATA (Continued)

OIL

OIL SPECIFICATION

MIL-L-6082 or SAE J1966 Aviation Grade Straight Mineral Oil: Used when the airplane was delivered from the factory and should be used to replenish the supply during the first 25 hours. This oil should be drained and the filter changed after the first 25 hours of operation. Refill the engine with MIL-L-6082 or SAE J1966 Aviation Grade Straight Mineral Oil and continue to use until a total of 50 hours has accumulated or oil consumption has stabilized.

MIL-L-22851 or SAE J1899 Aviation Grade Ashless Dispersant Oil: Oil conforming to Textron Lycoming Service Instruction No 1014, and all revisions and supplements thereto, **must be used** after first 50 hours or oil consumption has stabilized.

Recommended viscosity for temperature range:

Temperature	MIL-L-6082 or SAE J1966 Straight Mineral Oil SAE Grade	MIL-L-22851 or SAE J1899 Ashless Dispersant Oil SAE Grade					
Above 27°C (80°F)	60	60					
Above 16°C (60°F)	50	40 or 50					
-1°C (30°F) to 32°C (90°F)	40	40					
-18°C (0°F) to 21°C (70°F)	30	30, 40 or 20W-40					
Below -12°C (10°F)	20	30 or 20W-30					
-18°C (0°F) to 32°C (90°F)	20W-50	20W-50 or 15W-50					
All Temperatures		15W-50 or 20W-50					

NOTE

When operating temperatures overlap, use the lighter grade of oil.

OIL CAPACITY

Sump		•		•	•	•		•	•	•		•		•	•	•		•		•			•			a.	•	8	U.S.	QUARTS
Total.	•		•			•	•	•	•						•		•		•		÷		•	•				9	U.S.	QUARTS

(Continued Next Page)

172SPHBUS-00

U.S.

DESCRIPTIVE DATA (Continued)

MAXIMUM CERTIFICATED WEIGHTS

WEIGHT IN BAGGAGE COMPARTMENT, NORMAL CATEGORY

Baggage Area A (Station 82 to 108)	120 POUNDS
	Refer to note below.
Baggage Area B (Station 108 to 142)	50 POUNDS
	Refer to note below.

NOTE

The maximum allowable combined weight capacity for baggage in areas A and B is 120 pounds.

WEIGHT IN BAGGAGE COMPARTMENT, UTILITY CATEGORY

In this category, the rear seat must not be occupied and the baggage compartment must be empty.

DESCRIPTIVE DATA (Continued)

STANDARD AIRPLANE WEIGHTS

Standard Empty Weight	1663 POUNDS
Maximum Useful Load, Normal Category	. 895 POUNDS
Maximum Useful Load, Utility Category	. 545 POUNDS

CABIN AND ENTRY DIMENSIONS

Detailed dimensions of the cabin interior and entry door openings are illustrated in Section 6.

BAGGAGE SPACE AND ENTRY DIMENSIONS

Dimensions of the baggage area and baggage door opening are illustrated in detail in Section 6.

SPECIFIC LOADINGS

Wing Loading	 •••	4.10	 	 	•	• •				•		14	1.7	lbs.	/sq.	ft.
Power Loading	 		 	 									14	1.2 1	bs/H	IP

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY

GENERAL AIRSPEED TERMINOLOGY AND SYMBOLS

- KCAS **Knots Calibrated Airspeed** is indicated airspeed corrected for position and instrument error and expressed in knots. Knots calibrated airspeed is equal to KTAS in standard atmosphere at sea level.
- KIAS **Knots Indicated Airspeed** is the speed shown on the airspeed indicator and expressed in knots.
- KTAS **Knots True Airspeed** is the airspeed expressed in knots relative to undisturbed air which is KCAS corrected for altitude and temperature.
- V_A **Maneuvering Speed** is the maximum speed at which full or abrupt control movements may be used without overstressing the airframe.
- V_{FE} Maximum Flap Extended Speed is the highest speed permissible with wing flaps in a prescribed extended position.
- V_{NO} Maximum Structural Cruising Speed is the speed that should not be exceeded except in smooth air, then only with caution.
- V_{NE} Never Exceed Speed is the speed limit that may not be exceeded at any time.
- V_S Stalling Speed or the minimum steady flight speed is the minimum speed at which the airplane is controllable.
- V_{SO} Stalling Speed or the minimum steady flight speed is the minimum speed at which the airplane is controllable in the landing configuration at the most forward center of gravity.
- V_x Best Angle of Climb Speed is the speed which results in the greatest gain of altitude in a given horizontal distance.
- V_Y Best Rate of Climb Speed is the speed which results in the greatest gain in altitude in a given time.

(Continued Next Page)

1-10 U.S.

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Continued)

METEOROLOGICAL TERMINOLOGY

- OAT **Outside Air Temperature** is the free air static temperature. It may be expressed in either degrees Celsius or degrees Fahrenheit.
- Standard
- Temperature Standard Temperature is 15°C at sea level pressure altitude and decreases by 2°C for each 1000 feet of altitude.

Pressure Altitude

Pressure Altitude is the altitude read from an altimeter when the altimeter's barometric scale has been set to 29.92 inches of mercury (1013 mb).

ENGINE POWER TERMINOLOGY

- BHP Brake Horsepower is the power developed by the engine.
- RPM Revolutions Per Minute is engine speed.
- Static RPM Static RPM is engine speed attained during a full throttle engine runup when the airplane is on the ground and stationary.

Lean Mixture

Decreased proportion of fuel in the fuel-air mixture supplied to the engine. As air density decreases, the amount of fuel required by the engine decreases for a given throttle setting. Adjusting the fuel-air mixture to provide a smaller portion of fuel is known as "leaning" the mixture.

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Continued)

ENGINE POWER TERMINOLOGY (Continued)

Rich	
Mixture	Increased proportion of fuel in the fuel-air mixture supplied to the engine. As air density increases, the amount of fuel required by the engine increases for a given throttle setting. Adjusting the fuel-air mixture to provide a greater portion of fuel is known as "richening" the mixture.
Full	
Rich	Mixture control full forward (pushed in, full control travel, toward the panel).
Idle	
Cutoff	Mixture control full aft (pulled out, full control travel, away from the panel).
Full	
Throttle	Throttle full forward (pushed in, full control travel, toward the panel). Also known as "full open" throttle.
Closed	
Throttle	Throttle full aft (pulled out, full control travel, away from the panel). Also known as the throttle "idle" position.

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Continued)

AIRPLANE PERFORMANCE AND FLIGHT PLANNING TERMINOLOGY

Demonstrated Crosswind Velocity

Demonstrated Crosswind Velocity is the velocity of the crosswind component for which adequate control of the airplane during takeoff and landing was actually demonstrated during certification tests. The value shown is not considered to be limiting.

Usable Fuel

Usable Fuel is the fuel available for flight planning.

Unusable Fuel

GPH

Unusable Fuel is the quantity of fuel that can not be safely used in flight.

Gallons Per Hour is the amount of fuel consumed per hour.

NMPG **Nautical Miles Per Gallon** is the distance which can be expected per gallon of fuel consumed at a specific engine power setting and/or flight configuration.

g g is acceleration due to gravity.

Course Datum

Course Datum is the compass reference used by the autopilot, along with course deviation, to provide lateral control when tracking a navigation signal.

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Continued)

WEIGHT AND BALANCE TERMINOLOGY

Deference	
Datum	Reference Datum is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.
Station	Station is a location along the airplane fuselage given in terms of the distance from the reference datum.
Arm	Arm is the horizontal distance from the reference datum to the center of gravity (C.G.) of an item.
Moment	Moment is the product of the weight of an item multiplied by its arm. (Moment divided by the constant 1000 is used in this POH to simplify balance calculations by reducing the number of digits.)
Center of	
(C.G.)	Center of Gravity is the point at which an airplane, or equipment, would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane.
C.G. Arm	Center of Gravity Arm is the arm obtained by adding the airplane's individual moments and dividing the sum by the total weight.
C.G. Limits	Center of Gravity Limits are the extreme center of gravity locations within which the airplane must be operated at a given weight.
Standard	4
Empty Weight	Standard Empty Weight is the weight of a standard airplane, including unusable fuel, full operating fluids and full engine oil.

SECTION 1 GENERAL

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Continued)

WEIGHT AND BALANCE TERMINOLOGY (Continued)

Basic Empty Weight

Basic Empty Weight is the standard empty weight plus the weight of optional equipment.

Useful Load **Useful Load** is the difference between ramp weight and the basic empty weight.

MAC **MAC (Mean Aerodynamic Chord)** is a chord of an imaginary rectangular airfoil having the same pitching moments throughout the flight range as that of the actual wing.

Maximum Ramp Weight

Maximum Ramp Weight is the maximum weight approved for ground maneuver, and includes the weight of fuel used for start, taxi and runup.

Maximum Takeoff Weight

Maximum Takeoff Weight is the maximum weight approved for the start of the takeoff roll.

Maximum Landing Weight

Tare

Maximum Landing Weight is the maximum weight approved for the landing touchdown.

Tare is the weight of chocks, blocks, stands, etc. used when weighing an airplane, and is included in the scale readings. Tare is deducted from the scale reading to obtain the actual (net) airplane weight.

METRIC/IMPERIAL/U.S. CONVERSION CHARTS

The following charts have been provided to help international operators convert U.S. measurement supplied with the Pilot's Operating Handbook into metric and imperial measurements.

The standard followed for measurement units shown is the National Institute of Standards Technology (NIST), Publication 811, "Guide for the Use of the International System of Units (SI)."

Please refer to the following pages for these charts.

WEIGHT CONVERSIONS

B5719

(Kilograms x 2.205 = Pounds) (Pounds x .454 = Kilograms)

Kilograms into Pounds Kilogrammes en Livres

_											
	kg	0	1	2	3	4	5	6	7	8	9
		lb.									
	0		2.205	4.409	6.614	8.819	11.023	13.228	15.432	17.637	19.842
	10	22.046	24.251	26.456	28.660	30.865	33.069	35.274	37.479	39.683	41.888
	20	44.093	46.297	48.502	50.706	52.911	55.116	57.320	59.525	61.729	63.934
	30	66.139	68.343	70.548	72.753	74.957	77.162	79.366	81.571	83.776	85.980
	40	88.185	90.390	92.594	94.799	97.003	99.208	101.41	103.62	105.82	108.03
	50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
	60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
	70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
	80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
	90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26
	100	220.46	222.67	224.87	227.08	229.28	231.49	233.69	235.90	238.10	240.30

Pounds into Kilograms Livres en Kilogrammes

lb.	0	1	2	3	4	5	6	7	8	9
	kg									
0		0.454	0.907	1.361	1.814	2.268	2.722	3.175	3.629	4.082
10	4.536	4.990	5.443	5.897	6.350	6.804	7.257	7.711	8.165	8.618
20	9.072	9.525	9.979	10.433	10.886	11.340	11.793	12.247	12.701	13.154
30	13.608	14.061	14.515	14.969	15.422	15.876	16.329	16.783	17.237	17.690
40	18.144	18.597	19.051	19.504	19.958	20.412	20.865	21.319	21.772	22.226
50	22.680	23.133	23.587	24.040	24.494	24.948	25.401	25.855	26.303	26.762
60	27.216	27.669	28.123	28.576	29.030	29.484	29.937	30.391	30.844	31.298
70	31.752	32.205	32.659	33.112	33.566	34.019	34.473	34.927	35.380	35.834
80	36.287	36.741	37.195	37.648	38.102	38.555	39.009	39.463	39.916	40.370
90	40.823	41.277	41.731	42.184	42.638	43.091	43.545	43.999	44.452	44.906
100	45.359	45.813	46.266	46.720	47.174	47.627	48.081	48.534	48.988	49.442

Figure 1-2 (Sheet 1 of 2)

CESSNA MODEL 172S NAV III GFC 700 AFCS

WEIGHT CONVERSIONS

B3061

(Kilograms x 2.205 = Pounds)

(Pounds x .454 = Kilograms) KILOGRAMS

POUNDS	KILOGR	AMS	
220	100		
210 —	95		
200 —	90		
190 —	- 85		
180 —	80		
170 —	- 75		
160 —	70		
150	65		
140 —	60		
130 —	- 60		
120	- 55		
110	50		
100	- 45		
90	40		
80 — 70 —	35		
60	30		
50	- 25		
40 —	20		
30			
20 —			
10 —	5		
o —	L_o (Jnits x 10, 1	100, etc.



172SPHBUS-00

0585T1027

1-18

U.S.

LENGTH CONVERSIONS

B5720

(Meters x 3.281 = Feet) (Feet x .305 = Meters)

Meters into Feet Metres en Pieds

m	0	1	2	3	4	5	6	7	8	9
	feet									
0		3.281	6.562	9.842	13.123	16.404	19.685	22.956	26.247	29.528
10	32.808	36.089	39.370	42.651	45.932	49.212	52.493	55.774	59.055	62.336
20	65.617	68.897	72.178	75.459	78.740	82.021	85.302	88.582	91.863	95.144
30	98.425	101.71	104.99	108.27	111.55	114.83	118.11	121.39	124.67	127.95
40	131.23	134.51	137.79	141.08	144.36	147.64	150.92	154.20	157.48	160.76
50	164.04	167.32	170.60	173.86	177.16	180.45	183.73	187.01	190.29	193.57
60	195.85	200.13	203.41	206.69	209.97	213.25	216.53	219.82	223.10	226.38
70	229.66	232.94	236.22	239.50	242.78	246.06	249.34	252.62	255.90	259.19
80	262.47	265.75	269.03	272.31	275.59	278.87	282.15	285.43	288.71	291.58
90	295.27	298.56	301.84	305.12	308.40	311.68	314.96	318.24	321.52	324.80
100	328.08	331.36	334.64	337.93	341.21	344.49	347.77	351.05	354.33	357.61

Feet into Meters Pieds en Metres

ft	0	1	2	3	4	5	6	7	8	9
	m	m	m	m	m	m	m	m	m	m
0		0.305	0.610	0.914	1.219	1.524	1.829	2.134	2.438	2.743
10	3.048	3.353	3.658	3.962	4.267	4.572	4.877	5.182	5.486	5.791
20	6.096	6.401	6.706	7.010	7.315	7.620	7.925	8.230	8.534	8.839
30	9.144	9.449	9.754	10.058	10.363	10.668	10.973	11.278	11.582	11.887
40	12.192	12.497	12.802	13.106	13.411	13.716	14.021	14.326	14.630	14.935
50	15.240	15.545	15.850	16.154	16.459	16.754	17.069	17.374	17.678	17.983
60	18.288	18.593	18.898	19.202	19.507	19.812	20.117	20.422	20.726	21.031
70	21.336	21.641	21.946	22.250	22.555	22.860	23.165	23.470	23.774	24.079
80	24.384	24.689	24.994	25.298	25.603	25.908	26.213	26.518	26.822	27.127
90	27.432	27.737	28.042	28.346	28.651	28.956	29.261	29.566	29.870	30.175
100	30.480	30.785	31.090	31.394	31.699	32.004	32.309	32.614	32.918	33.223

Figure 1-3 (Sheet 1 of 4)

CESSNA MODEL 172S NAV III GFC 700 AFCS

LENGTH CONVERSIONS

B3062

(Feet x .305 = Meters) (Meters x 3.281 = Feet) METERS FEET - 100 320 95 300 - 90 280 -85 80 260 -75 240 70 220 65 200 -60 - 55 180 - 50 160 45 140 40 120 35 100 -30 25 80 20 60 -15 40 10 20 5 Units x 10, 100, etc. 0-0

0585T1027



LENGTH CONVERSIONS

B5721

(Centimeters x .394 = Inches) (Inches x 2.54 = Centimeters)

Centimeters into Inches Centimetres en Pouces

cm	0	1	2	3	4	5	6	7	8	9
	in.									
0		0.394	0.787	1.181	1.575	1.969	2.362	2.756	3.150	3.543
10	3.937	4.331	4.724	5.118	5.512	5.906	6.299	6.693	7.087	7.480
20	7.874	8.268	8.661	9.055	9.449	9.843	10.236	10.630	11.024	11.417
30	11.811	12.205	12.598	12.992	13.386	13.780	14.173	14.567	14.961	15.354
40	15.748	16.142	16.535	16.929	17.323	17.717	18.110	18.504	18.898	19.291
50	19.685	20.079	20.472	20.866	21.260	21.654	22.047	22.441	22.835	23.228
60	23.622	24.016	24.409	24.803	25.197	25.591	25.984	26.378	26.772	27.164
70	27.559	27.953	28.346	28.740	29.134	29.528	29.921	30.315	30.709	31.102
80	31.496	31.890	32.283	32.677	33.071	33.465	33.858	34.252	34.646	35.039
90	35.433	35.827	36.220	36.614	37.008	37.402	37.795	38.189	38.583	38.976
100	39.370	39.764	40.157	40.551	40.945	41.339	41.732	42.126	42.520	42.913

Inches into Centimeters Pouces en Centimetres

in.	0	1	2	3	4	5	6	7	8	9
	cm									
0		2.54	5.08	7.62	10.16	12.70	15.24	17.78	20.32	22.96
10	25.40	27.94	30.48	33.02	35.56	38.10	40.64	43.18	45.72	48.26
20	50.80	53.34	55.88	58.42	60.96	63.50	66.04	68.58	71.12	73.66
30	76.20	78.74	81.28	83.82	86.36	88.90	91.44	93.98	96.52	99.06
40	101.60	104.14	106.68	109.22	111.76	114.30	116.84	119.38	121.92	124.46
50	127.00	129.54	132.08	134.62	137.16	139.70	142.24	144.78	147.32	149.86
60	152.40	154.94	157.48	160.02	162.56	165.10	167.64	170.18	172.72	175.26
70	177.80	180.34	182.88	185.42	187.96	190.50	193.04	195.58	198.12	200.66
80	203.20	205.74	208.28	210.82	213.36	215.90	218.44	220.98	223.52	226.06
90	228.60	231.14	233.68	236.22	238.76	241.30	243.84	246.38	248.92	251.46
100	254.00	256.54	259.08	261.62	264.16	266.70	269.24	271.78	274.32	276.86

Figure 1-3 (Sheet 3)

R3083

LENGTH CONVERSIONS





172SPHBUS-00

1-22

DISTANCE CONVERSIONS

B3084

(Statute Miles x 1.609 = Kilometers) (Statute Miles x .869 = Nautical Miles) (Nautical Miles x 1.852 = Kilometers)

(Kilometers x .622 = Statute Miles) (Nautical Miles x 1.15 = Statute Miles) (Kilometers x .54 = Nautical Miles)

STATUTE	NAUTICAL		KII OMETEDS
MILES	115-100	MILES 100 7	REOWETERS
	110 - 95	95 - 180	
	105-90	90-170	
	100 - 85	85-160	
	95 - 80	80 - 150	
	90 - 00	75 - 140	
	85 - 75	75 140	
	80 - 70	70-130	
	75 + 65	65 + 120	
	70-60	60-110	
	65 - 55	55-100	
	60 - 50	50-	
	55 - 55	50 - 90	
	50-45	⁴⁵ – 80	
	45-40	40 - 70	
	40 - 35	35 - 70	
	35-30	30 - 60	
	30-25	25 - 50	
	25-20	20 - 40	
	20-15	15 30	
	15 - 15	10 20	9
	10-10	10 - 20	
	5+5	5-10	Inite v 10, 100, etc.
	0⊥0	0⊥0 ^C	0585T1029

Figure 1-4

172SPHBUS-00

U.S. 1-23
SECTION 1 GENERAL

VOLUME CONVERSIONS

B5722

(Imperial Gallons x 4.546 = Liters) (Liters x .22 = Imperial Gallons)

Liters	into Imperial Gallons
Litres	en Gallons Imperial

Lt	0	1	2	3	4	5	6	7	8	9
	IG									
0		0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1,980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.960	4.180
20	4.400	4.620	4.840	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.779
50	10.999	11.219	11.439	11.659	11.879	12.099	12.319	12.539	12.759	12.979
60	13.199	13.419	13.639	13.859	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.038	18.258	18.478	18.698	18.918	19.138	19.358	19.578
90	19.798	20.018	20.238	20.458	20.678	20.898	21.118	21.338	21.558	21.778
100	21.998	22.218	22.438	22.658	22.878	23.098	23.318	23.537	23.757	23.977

Imperial Gallons into Liters Gallons Imperial en Litres

IG	0	1	2	3	4	5	6	7	8	9
	Lt									
0		4.546	9.092	13.638	18.184	22.730	27.276	31.822	36.368	40.914
10	45.460	50.006	54.552	59.097	63.643	68.189	72.735	77.281	81.827	86.373
20	90.919	95.465	100.01	104.56	109.10	113.65	118.20	122.74	127.29	131.83
30	136.38	140.93	145.47	150.02	154.56	159.11	163.66	168.20	172.75	177.29
40	181.84	186.38	190.93	195.48	200.02	204.57	209.11	213.66	218.21	222.75
50	227.30	231.84	236.39	240.94	245.48	250.03	254.57	259.12	263.67	268.21
60	272.76	277.30	281.85	286.40	290.94	295.49	300.03	304.58	309.13	313.67
70	318.22	322.76	327.31	331.86	336.40	340.95	345.49	350.04	354.59	359.13
80	363.68	368.22	372.77	377.32	381.86	386.41	390.95	395.50	400.04	404.59
90	409.14	413.68	418.23	422.77	427.32	431.87	436.41	440.96	445.50	450.05
100	454.60	459.14	463.69	468.23	472.78	477.33	481.87	486.42	490.96	495.51

Figure 1-5 (Sheet 1 of 3)

172SPHBUS-00

RIGAR



VOLUME CONVERSIONS

(Imperial Gallons X 4.546 = Liters) (Liters X .22 = Imperial Gallons)



Units x 10, 100, etc.

Figure 1-5 (Sheet 2)

0585T1032

172SPHBUS-00

U.S.

B3086

VOLUME CONVERSIONS

(Imperial Gallons x 1.2 = U.S. Gallons) (U.S. Gallons x .883 = Imperial Gallons) (U.S. Gallons x 3.785 = Liters) (Liters x .264 = U.S. Gallons)

IMPERIAL	U.S.	
GALLONS	GALLONS	LITERS
100 120	1	00 - 380
95 115		95 — 360
90 - 110		90 — 340
85 - 100		85 - 320
80 - 95		80 - 300
75 90		75-280
70 85		70 - 260
65 - 80		65 - 240
60 - 75		60 - 220
55 - 65		55 - 220
50 - 60		50 - 200
45 55		45 -
40 - 50		40 - 160
35 - 45		35 - 140
30 - 40		30 - 120
25 - 30		25 - 100
20 - 25		20 - 80
15 - 20		15 - 60
¹⁵ – 15		
10 - 10		10 40
5 - 5		5 - 20
o⊥ o		0 0 _{0585T1033}

Figure 1-5 (Sheet 3)

172SPHBUS-00

GFC 700 AFCS

TEN NS

B3087

EMPERATURE CONVERSION

$$(F - 32) \times 5/9 = C$$
 $C \times 9/5 + 32 = F$
 $F \circ C$
 -40
 -40
 320
 -160
 -30
 340
 -10
 -20
 400
 -10
 -20
 400
 -200
 10
 -10
 420
 -220
 400
 -220
 400
 -220
 400
 -220
 400
 -220
 400
 -220
 -200
 10
 -10
 -20
 400
 -220
 -200
 -20
 -20
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -200
 -20

920 500 940 500 960 520 980 520 1000 540 1020 540 1040 560 300 - 150 310 - 160

190 190

260 - 130 270 - 130 280 - 140 290 - 140

260-

0585T1034

Figure 1-6

172SPHBUS-00

780 - - - 420 800 - - - 420 820 - - - 440 840 - - - 460 880 - - - 460 880 - - - 480

SECTION 1 GENERAL

CESSNA MODEL 172S NAV III GFC 700 AFCS

PRESSURE CONVERSION

HECTOPASCALS TO INCHES OF MERCURY

B3995

1056 -	31.2
1052	- 31.1
1048	- 31.0
1044	- 30.9
1040	30.8
1040	- 30.7
1030	30.0
1032 -	- 30.4
1028	- 30.3
1024	- 30.2
1020	- 30.1
1016	30.0
1012	29.9
1008	29.8
1004	- 29.7
1000	- 29.6
006	- 29.5
000	29.4
992	29.3
988 -	- 29 1
984	- 29.0
980 -	- 28.9
976	- 28.8
972 -	28.7
968	- 28.6
964	28.5
960	-28.4
956	- 28.3
952	28.2
018	28.1
340	20.0

HECTOPASCALS (MILLIBARS) INCHES

Figure 1-7

172SPHBUS-00

SECTION 1 GENERAL

VOLUME TO WEIGHT CONVERSION



Units x 10, 100, etc.

Figure 1-8

172SPHBUS-00

0585T1030

SECTION 1 GENERAL

CESSNA MODEL 172S NAV III GFC 700 AFCS



QUICK CONVERSIONS



SECTION 2 OPERATING LIMITATIONS

OPERATING LIMITATIONS

TABLE OF CONTENTS

Page

Introduction
Airspeed Limitations
Airspeed Indicator Markings
Powerplant Limitations
Powerplant Instrument Markings
Weight Limits
Normal Category
Maximum Weight in Baggage Compartment - Normal Category .2-8
Utility Category
Maximum Weight in Baggage Compartment - Utility Category 2-8
Center Of Gravity Limits
Normal Category
Utility Category
Maneuver Limits
Normal Category
Utility Category
Flight Load Factor Limits 2-11
Normal Category
Utility Category
Kinds Of Operations Limits
Kinds Of Operations Equipment List
Fuel Limitations
Flap Limitations
System Limitations
Aux Audio System
12V Power System
G1000 Limitations
Garmin GFC 700 AFCS (if installed)2-21
Terrain Awareness and Warning System (TAWS-B)2-22
Placards

FAA APPROVED 172SPHBUS-00

U.S. 2-1/2-2

SECTION 2 OPERATING LIMITATIONS

INTRODUCTION

Section 2 includes operating limitations, instrument markings, and basic placards necessary for the safe operation of the airplane, its engine, standard systems and standard equipment. The limitations included in this section and in Section 9 have been approved by the Federal Aviation Administration. Observance of these operating limitations is required by Federal Aviation Regulations.

NOTE

- Refer to Supplements, Section 9 of this Pilot's Operating Handbook for amended operating limitations, operating procedures, performance data and other necessary information for airplanes equipped with specific options.
- The airspeeds listed in Figure 2-1, Airspeed Limitations, and Figure 2-2, Airspeed Indicator Markings, are based on Airspeed Calibration data shown in Section 5 with the normal static source. If the alternate static source is being used, ample margins should be observed to allow for the airspeed calibration variations between the normal and alternate static sources as shown in Section 5.

The Cessna Model No. 172S is certificated under FAA Type Certificate No. 3A12.

AIRSPEED LIMITATIONS

Airspeed limitations and their operational significance are shown in Figure 2-1. Maneuvering speeds shown apply to normal category operations. The utility category maneuvering speed is 98 KIAS at 2200 pounds.

SYMBOL	SPEED	KCAS	KIAS	REMARKS
V _{NE}	Never Exceed Speed	160	163	Do not exceed this speed in any operation.
V _{NO}	Maximum Structural Cruising Speed	126	129	Do not exceed this speed except in smooth air, and then only with caution.
V _A	Maneuvering Speed: 2550 Pounds 2200 Pounds 1900 Pounds	102 95 88	105 98 90	Do not make full or abrupt control movements above this speed.
V _{FE}	Maximum Flap Extended Speed: FLAPS 10° FLAPS 10° to FULL	107 85	110 85	Do not exceed this speed with flaps down.
	Maximum Window Open Speed	160	163	Do not exceed this speed with windows open.

AIRSPEED LIMITATIONS

Figure 2-1

AIRSPEED INDICATOR MARKINGS

Airspeed indicator markings and their color code significance are shown in Figure 2-2.

AIRSPEED INDICATOR MARKINGS

MARKING	KIAS VALUE OR RANGE	SIGNIFICANCE										
Red Arc*	20 - 40	Low airspeed warning.										
White Arc	40 - 85	Full Flap Operating Range. Lower limit is maximum weight V_{SO} in landing configuration. Upper limit is maximum speed permissible with flaps extended.										
Green Arc	48 - 129	Normal Operating Range. Lower limit is maximum weight V_{S1} at most forward C.G. with flaps retracted. Upper limit is maximum structural cruising speed.										
Yellow Arc	129 - 163	Operations must be conducted with caution and only in smooth air.										
Red Line	163	Maximum speed for all operations.										

*G1000 airspeed indicator only.

Figure 2-2

FAA APPROVED 172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

POWERPLANT LIMITATIONS

Engine Manufacturer: Textron Lycoming

Engine Model Number: IO-360-L2A

Maximum Power: 180 BHP Rating

Engine Operating Limits for Takeoff and Continuous	s Operations:
Maximum Engine Speed:	

NOTE

The static RPM range at full throttle is 2300 - 2400 RPM.

Maximum Oil Temperature	: :		 •••	 	×	•	•	•				 2	24	15	50	F	(118°C)
Oil Pressure, Minimum:		•	 •	 			•			•		 ÷		•			.20 PSI
Oil Pressure, Maximum: .		•	 •••									 ÷					115 PSI

CAUTION

ENGINE OPERATION WITH INDICATED OIL PRESSURE BELOW THE GREEN BAND RANGE WHILE IN CRUISE OR CLIMB CONFIGURATION IS CONSIDERED ABNORMAL. REFER TO SECTION 3, AMPLIFIED EMERGENCY PROCEDURES, "LOW OIL PRESSURE".

Fuel Grade: Refer to Fuel Limitations

Oil Grade (Specification):

MIL-L-6082 or SAE J1966 Aviation Grade Straight Mineral Oil or MIL-L-22851 or SAE J1899 Ashless Dispersant Oil. Oil must comply with the latest revision and/or supplement for Textron Lycoming Service Instruction No. 1014, **must be used**.

Propeller Manufacturer: McCauley Propeller Systems Propeller Model Number: 1A170E/JHA7660

Propeller Diameter:

Maximum										•	•	•	•				•		•	•	•	•							•			•	.7	6	1	N	CI	HE	Ξ	3
Minimum	•	•	•	•	•	•	•	•	•	•	•	•	•	•	ł	•	•	•	•	•	•		•	•		•		•	•		•	•	.7	5	1	N	CI	HE	Ξ	3

Powerplant instrument markings and their color code significance are shown in Figure 2-3. Operation with indications in the red range is prohibited. Avoid operating with indicators in the yellow range.

INSTRUMENT	RED LINE (MIN)	RED ARC (LWR)	YELLOW ARC	GREEN ARC (NORMAL OPERATING RANGE)	RED ARC (UPR)
Tachometer Sea Level 5000 Feet 10,000 Feet				2100 to 2500 2100 to 2600 2100 to 2700 RPM	2700* to 3000 RPM
Cylinder Head Temperature				200 to 500°F	
Oil Temperature				100 to 245°F	245* to 250°F
Oil Pressure		0 to 20 PSI		50 to 90 PSI	115* to 120 PSI
Fuel Quantity	0 (1.5 Gallons Unusable Each Tank)		0 to 5 Gallons	5 to 24 Gallons	
Fuel Flow				0 to 12 GPH	
Vacuum Indicator				4.5 to 5.5 in.hg.	

POWERPLANT INSTRUMENT MARKINGS

*Maximum operating limit is lower end of red arc.

Figure 2-3

CESSNA MODEL 172S NAV III GFC 700 AFCS

WEIGHT LIMITS

NORMAL CATEGORY

Maximum Ramp Weight:	. 2558 POUNDS
Maximum Takeoff Weight:	. 2550 POUNDS
Maximum Landing Weight:	.2550 POUNDS

MAXIMUM WEIGHT IN BAGGAGE COMPARTMENT - NORMAL CATEGORY:

Baggage Area A - Station 82 to 108: .	
	Refer to note below.
Baggage Area B - Station 108 to 142:	
	Refer to note below.

NOTE

The maximum allowable combined weight capacity for baggage in areas A and B is 120 pounds.

UTILITY CATEGORY

Maximum Ramp Weight:	2208 POUNDS
Maximum Takeoff Weight:	2200 POUNDS
Maximum Landing Weight:	2200 POUNDS

MAXIMUM WEIGHT IN BAGGAGE COMPARTMENT - UTILITY CATEGORY:

The baggage compartment must be empty and rear seat must not be occupied.

CENTER OF GRAVITY LIMITS

NORMAL CATEGORY

Center Of Gravity Range:

- Forward: 35.0 inches aft of datum at 1950 pounds or less, with straight line variation to 41.0 inches aft of datum at 2550 pounds.
- Aft: 47.3 inches aft of datum at all weights.

Reference Datum: Lower portion of front face of firewall.

UTILITY CATEGORY

Center of Gravity Range:

- Forward: 35.0 inches aft of datum at 1950 pounds or less, with straight line variation to 37.5 inches aft of datum at 2200 pounds.
- Aft: 40.5 inches aft of datum at all weights.

Reference Datum: Lower portion of front face of firewall.

MANEUVER LIMITS

NORMAL CATEGORY

This airplane is certificated in both the normal and utility category. The normal category is applicable to aircraft intended for non aerobatic operations. These include any maneuvers incidental to normal flying, stalls (except whip stalls), lazy eights, chandelles, and turns in which the angle of bank is not more than 60°.

NORMAL CATEGORY MANEUVERS AND RECOMMENDED ENTRY SPEED*

Chandelles	105 KNOTS
Lazy Eights	105 KNOTS
Steep Turns	. 95 KNOTS
Stalls (Except Whip Stalls)Slow	Deceleration

* Abrupt use of the controls is prohibited above 105 KNOTS.

UTILITY CATEGORY

This airplane is not designed for purely aerobatic flight. However, in the acquisition of various certificates such as commercial pilot and flight instructor, certain maneuvers are required by the FAA. All of these maneuvers are permitted in this airplane when operated in the utility category.

In the utility category, the rear seat must not be occupied and the baggage compartment must be empty.

UTILITY CATEGORY MANEUVERS AND RECOMMENDED ENTRY SPEED*

Chandelles	105 KNOTS
Lazy Eights	105 KNOTS
Steep Turns	. 95 KNOTS
Spins Slow	Deceleration
Stalls (Except Whip Stalls)Slow	Deceleration

* Abrupt use of the controls is prohibited above 98 KNOTS.

(Continued Next Page)

SECTION 2 OPERATING LIMITATIONS

MANEUVER LIMITS (Continued)

UTILITY CATEGORY (Continued)

Aerobatics that may impose high loads should not be attempted. The important thing to bear in mind in flight maneuvers is that the airplane is clean in aerodynamic design and will build up speed quickly with the nose down. Proper speed control is an essential requirement for execution of any maneuver, and care should always be exercised to avoid excessive speed which in turn can impose excessive loads. In the execution of all maneuvers, avoid abrupt use of controls.

FLIGHT LOAD FACTOR LIMITS

NORMAL CATEGORY

Flight Load Factors (Maximum Takeoff Weight - 2550 POUNDS):	
*Flaps UP:+3.8g, -1.5	2g
*Flaps FULL:	0g

* The design load factors are 150% of the above, and in all cases, the structure meets or exceeds design loads.

UTILITY CATEGORY

Flight Load Factors (Maximum	n Takeoff Weight - 2200 POUNDS):
*Flaps UP:	+4.4g, -1.76g
*Flaps FULL:	·····+3.0g

* The design load factors are 150% of the above, and in all cases, the structure meets or exceeds design loads.

KINDS OF OPERATIONS LIMITS

The Cessna 172S Nav III airplane is approved for day and night, VFR and IFR operations. Flight into known icing conditions is prohibited.

The minimum equipment for approved operations required under the Operating Rules are defined by 14 CFR 91 and 14 CFR 135, as applicable.

The following Kinds of Operations Equipment List (KOEL) identifies the equipment required to be operational for airplane airworthiness in the listed kind of operations.

KINDS OF OPERATIONS EQUIPMENT LIST

System, Instrument, Equipment and/or Function	VFR DAY	VFR N-GHT	I FR DAY	-FR N-GHT	COMMENTS
PLACARDS AND MARKINGS	-				
1 - 172S Nav III - GFC 700 AFCS POH/AFM	1	1	1	1	Accessible to pilot in flight.
2 - Garmin G1000 Cockpit Reference Guide	1	1	1	1	Accessible to pilot in flight.
AIR CONDITIONING	- Company		A CARE AND	12/2	Contraction of
1 - Forward Avionics Fan	1	1	1	1	
2 - PFD Fan	0	0	0	0	
3 - MFD Fan	0	0	0	0	
4 - Aft Avionics Fan	1	1	1	1	
COMMUNICATIONS			A CARLES	Non and the	and the second second
1 - VHF COM	0	0	1	1	
ELECTRICAL POWER					
1 - 24V Main Battery	1	1	1	1	
2 - 28V Alternator	1	1	1	1	
3 - 24V Standby Battery	0	*	•		* Refer to Note 1.
4 - Main Ammeter	1	1	1	1	
5 - Standby Ammeter	0		*	*	* Refer to Note 1.

NOTE

 The European Aviation Safety Agency (EASA) requires the 24V Standby Battery and Standby Ammeter to successfully complete the pre-flight check before operating the airplane in VFR night, IFR day, or IFR night conditions in Europe. Correct operation of the 24V Standby Battery and Standby Ammeter is recommended for all other operations.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

KINDS OF OPERATION	S E	QUIF	'MEI	NT L	IST (Continued)
	KIN	D OF C	PERA	TION	
System, Instrument, Equipment and/or Function	V F R D A Y	V F R N I G H T	I F R D A Y	I F R N I G H T	COMMENTS
EQUIPMENT AND FURNISHINGS		Second 1	Res Constant		
1 - Seat Belt Assembly	1	1	1	1	Each Seat Occupant
2 - Shoulder Harness	1	1	1	1	Front Seat Occupants
FLIGHT CONTROLS	(and the				Postal Dallar and Street of the
1 - Flap Position Indicator	1	1	1	1	
2 - Flap Motor	1	1	1	1	
3 - Elevator Trim System	1	1	1	1	
4 - Elevator Trim Indicator	1	1	1	1	
FUEL SYSTEM					No. of the second second
1 - Electric Fuel Pump	1	1	1	1	
2 - Fuel Quantity Indicator - L Tank	1	1	1	1	
3 - Fuel Quantity Indicator - R Tank	1	1	1	1	
ICE AND RAIN PROTECTION					
1 - Alternate Static Air Source	0	0	1	1	
2 - Alternate Induction Air System	0	0	1	1	
INDICATING/RECORDING SYSTEM					
1 - Stall Warning System	1	1	1	1	
2 - System Annunciator and Warning Displays	1	1	1	1	
LANDING GEAR					
1 - Wheel Fairings	0	0	0	0	Removable

(Continued Next Page)

SECTION 2 OPERATING LIMITATIONS

KINDS OF OPERATIO	NS	EQU	IPM	ENT	LISI (Continued
	KINE	OFO	PERAT		
	V F B	V F R	l F B	I F R	
		N		N	
	D		D		
	A	G H	A	G н	
and/or Function		Т	· ·	Ť	COMMENTS
LIGHTING					
1 - PFD Bezel Lighting	0	0	0	1	And share were
2 - PFD Backlighting	*	1	1	1	*Refer to Note 2.
3 - MFD Bezel Lighting	0	0	0	1	
4 - MFD Backlighting	*	1	1	1	*Refer to Note 3.
5 - Switch and Circuit Breaker Panel Lighting	0	1	0	1	
6 - Standby Airspeed Indicator Internal Lighting	0	1	0	1	
7 - Standby Altimeter Internal Lighting	0	1	0	1	
8 - Non-stabilized Magnetic Compass Internal Lighting	0	1	0	1	
9 - Standby Attitude Indicator Internal Lighting	0	1	0	1	
10 - Cockpit Flood Light	0	1	0	1	
11 - Aircraft Position (NAV) Lights	0	1	1	1	
12 - STROBE Light System	1	1	1	1	
13 - BEACON Light	0	0	0	0	
14 - TAXI Light	0	0	0	0	
15 - LAND (Landing) Light	0	1	0	1	Operations for hire only.

NOTE

- 2. PFD backlighting is required for day VFR flight if MFD backlighting has failed. Display backup mode must be active so engine indicators are shown.
- 3. MFD backlighting is required for day VFR flight if PFD backlighting has failed. Display backup mode must be active so flight instruments are shown.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

KINDS OF OPERATIO	ONS	EQU	IPM	ENT	LIST (Contin	nued)
	KINI	O OF C	PERA			
	V F R	V F R	I F R	l F R		
		N		N		
	A	Ġ	A	G		
System, Instrument, Equipment and/or Function	Y	H T	Y	H T	COMMENT	s
NAVIGATION AND PITOT- STATIC SYSTEM						
1 - G1000 Airspeed Indicator	1	1	1	1		
2 - Standby Airspeed Indicator	0	0	1	1		
3 - G1000 Altimeter	1	1	1	1		
4 - Standby Altimeter	0	0	1	1		
5 - G1000 Vertical Speed Indicator	0	0	0	0		
6 - G1000 Attitude Indicator	0	0	1	1		
7 - Standby Attitude Indicator	0	0	1	1		
8 - G1000 Directional Indicator (HSI)	0	0	1	1		
9 - G1000 Turn Coordinator	0	0	1	1		
10 - Non-stabilized Magnetic Compass	1	1	1	1.		
11 - VHF Navigation Radio (VOR/LOC/GS)	0	0	A/R	A/R	As Required Procedure.	Per
12 - GPS Receiver/Navigator	0	0	A/R	A/R	As Required Procedure.	Per
13 - Marker Beacon Receiver	0	0	A/R	A/R	As Required Procedure.	Per
14 - Blind Altitude Encoder	A/R	A/R	1	1	As Required Procedure.	Per
15 - Clock	0	0	1	1		
16 - GFC 700 AFCS (if installed)	0	0	0	0		

(Continued Next Page)

FAA APPROVED 172SPHBUS-00

SECTION 2 OPERATING LIMITATIONS

KINDS OF OPERATIC)NS	EQU	IPM	ENT	LIST (Continued)
	KIN	D OF C	PERA	TION	
	V F B	V F R	I F B	I F R	
_	D	N I C	D	N I O	
System, Instrument, Equipment and/or Function	Ŷ	H T	Ŷ	H T	COMMENTS
VACUUM	S		the second	and and a second	
1 - Engine Driven Vacuum Pump	0	0	1	1	
2 - Vacuum Indicator	0	0	1	1	
ENGINE FUEL AND CONTROL	a water and		an a sain	-	
1 - Fuel Flow Indicator	1	1	1	1	
ENGINE INDICATING		A THE REAL			State of the second second
1 - Tachometer (RPM)	1	1	1	1	
2 - Cylinder Head Temperature (CHT) Indicator	0	0	0	0	
3 - Oil Pressure Indicator	1	1	1	1	
4 - Oil Temperature Indicator	1	1	1	1	
ENGINE OIL				No.	
1 - Engine Crankcase Dipstick	1	1	1	1	

CESSNA MODEL 172S NAV III GFC 700 AFCS

.

FUEL LIMITATIONS

Iotal Fuel:	
	(28.0 GALLONS per tank)
Usable Fuel (all flight conditions):	
	(26.5 GALLONS per tank)
Unusable Fuel:	
	(1.5 GALLONS per tank)

NOTE

To ensure maximum fuel capacity and minimize crossfeeding when refueling, always park the airplane in a wings level, normal ground attitude and place the fuel selector in the LEFT or RIGHT position. Refer to Figure 1-1 for normal ground attitude definition.

Takeoff and land with the fuel selector valve handle in the BOTH position.

Maximum slip or skid duration with one tank dry: 30 seconds

Operation on either LEFT or RIGHT tank limited to level flight only.

With 1/4 tank or less, prolonged uncoordinated flight is prohibited when operating on either left or right tank.

Fuel remaining in the tank after the fuel quantity indicator reads 0 (red line) cannot be safely used in flight.

Approved Fuel Grades (And Colors):

100LL Grade Aviation Fuel (Blue)100 Grade Aviation Fuel (Green)

FLAP LIMITATIONS

Approved Takeoff Range:	 	• •	 •	 •			 •		•	U	⊃ t	0 1	0°
Approved Landing Range:	 								.ι	JP t	0	FUL	LL

SYSTEM LIMITATIONS

AUX AUDIO SYSTEM

Use of the AUX AUDIO IN entertainment input is prohibited during takeoff and landing.

Use of the AUX AUDIO IN entertainment audio input and portable electronic devices (PED), such as cellular telephones, games, cassette, CD or MP3 players, is prohibited under IFR unless the operator of the airplane has determined that the use of the Aux Audio System and the connected portable electronic device(s) will not cause interference with the navigation or communication system of the airplane.

12V POWER SYSTEM

The 12 Volt Power System (POWER OUTLET 12V - 10A) is not certified for supplying power to flight-critical communications or navigation devices.

Use of the 12 Volt Power System is prohibited during takeoff and landing.

Use of the 12 Volt Power System is prohibited under IFR unless the operator of the airplane has determined that the use of the 12 VDC power supply and connected portable electronic device(s) will not cause interference with the navigation or communication systems of the airplane.

G1000 LIMITATIONS

The current Garmin G1000 Cockpit Reference Guide (CRG) Part Number and System Software Version that must be available to the pilot during flight are displayed on the MFD AUX group, SYSTEM STATUS page.

GPS based IFR enroute, oceanic and terminal navigation is prohibited unless the pilot verifies the currency of the database or verifies each selected waypoint for accuracy by reference to current approved data.

RNAV/GPS instrument approaches must be accomplished in accordance with approved instrument approach procedures that are retrieved from the G1000 navigation database. The G1000 database must incorporate the current update cycle.

Use of the NAVIGATION MAP page for pilotage navigation is prohibited. The Navigation Map is intended only to enhance situational awareness. Navigation is to be conducted using only current charts, data and authorized navigation facilities.

Use of the TRAFFIC MAP to maneuver the airplane to avoid traffic is prohibited. The Traffic Information System (TIS) is intended for advisory use only. TIS is intended only to help the pilot to visually locate traffic. It is the responsibility of the pilot to see and maneuver to avoid traffic.

Use of the TERRAIN PROXIMITY information for primary terrain avoidance is prohibited. The Terrain Proximity map is intended only to enhance situational awareness. It is the pilot's responsibility to provide terrain clearance at all times.

Navigation using the G1000 is not authorized north of 70° North latitude or south of 70° South latitude due to unsuitability of the magnetic fields near the Earth's poles. In addition, operations are not authorized in the following two regions:

- 1. North of 65° North latitude between longitude 75° W and 120° W (Northern Canada).
- 2. South of 55° South latitude between longitude 120° E and 165° E (region south of Australia and New Zealand).

(Continued Next Page)

G1000 LIMITATIONS (Continued)

The COM 1/2 (split COM) function of the Audio Panel is not approved for use. During COM 1/2 operation, transmission by one crew member inhibits reception by the other crew member.

The fuel quantity, fuel used and fuel remaining functions of the G1000 are supplemental information only and must be verified by the pilot.

GARMIN GFC 700 AFCS (if installed)

- 1. The GFC 700 AFCS preflight test must be successfully completed prior to use of the autopilot, flight director or manual electric trim.
- 2. A pilot, with the seat belt fastened, must occupy the left pilot's seat during all autopilot operations.
- 3. The autopilot must be off during all takeoff and landings.
- Autopilot maximum engagement speed 150 KIAS. Autopilot minimum engagement speed - 70 KIAS. Electric Trim maximum operating speed - 163 KIAS.
- 5. Maximum fuel imbalance with autopilot engaged 90 pounds.
- The autopilot must be disengaged below 200 feet AGL during approach operations and below 800 feet AGL during all other operations.
- ILS approaches using the autopilot/flight director are limited to Category I approaches only.
- 8. Use of the autopilot is prohibited when the audio panel is inoperative (since the aural alert will not be provided when autopilot is disengaged).
- 9. Use of the autopilot is prohibited when conducting missed approach procedures until an established rate of climb that ensures all altitude requirements of the procedure will be met.

(Continued Next Page)

G1000 LIMITATIONS (Continued)

TERRAIN AWARENESS AND WARNING SYSTEM (TAWS-B)

Use of the Terrain Awareness and Warning System (TAWS-B) to navigate to avoid terrain or obstacles is prohibited. TAWS-B is only approved as an aid to help the pilot to see-and-avoid terrain or obstacles.

TAWS-B must be inhibited when landing at a location not included in the airport database.

Use of TAWS-B is prohibited when operating using the QFE altimeter setting (altimeter indicates 0 feet altitude when the airplane is on the runway).

The pilot is authorized to deviate from the current ATC clearance only to the extent necessary to comply with TAWS-B warnings.

The geographic area of the TAWS-B database must match the geographic area in which the airplane is being operated.

Serials 172S10468 and 172S10507 thru 172S10775 not incorporating SB08-34-03

Flight operations are prohibited over large bodies of sea level water if that flight is conducted under operating regulations that require a functioning TAWS.

CAUTION

TAWS-B FORWARD LOOKING TERRAIN AVOIDANCE (FLTA) IS NOT AVAILABLE WHEN FLYING OVER THE OPEN OCEAN/SEA (SPECIFICALLY ANY BODY OF WATER AT SEA LEVEL, MORE THAN 6NM FROM ANY TERRAIN FEATURES) UNTIL TERRAIN DATABASE 08T2 OR LATER IS INSTALLED. DO NOT USE TAWS-B INFORMATION FOR PRIMARY TERRAIN AVOIDANCE. TAWS-B IS INTENDED ONLY TO ENHANCE SITUATIONAL AWARENESS.

SECTION 2 OPERATING LIMITATIONS

PLACARDS

The following information must be displayed in the form of composite or individual placards.

 In full view of the pilot: (The "DAY-NIGHT-VFR-IFR" entry, shown on the example below, will vary with installed equipment).

B7641

B6143

The markings and placards installed in this airplane contain operating limitations which must be complied with when operating this airplane in the Normal Category. Other operating limitations which must be complied with when operating this airplane in this category or in the Utility Category are contained in the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. Normal Category - No acrobatic maneuvers, including spins, approved. Utility Category - No acrobatic maneuvers approved, except those listed in the Pilot's Operating Handbook. Baggage compartment and rear seat must not be occupied. Spin Recovery · Opposite rudder · forward elevator · neutralize controls. Flight into known icing conditions prohibited. This airplane is certified for the following flight operations as of date of original airworthiness certificate: DAY - NIGHT - VFR - IFR

2. On control lock:



(Continued Next Page)



PLACARDS (Continued)

3. On the fuel selector valve:

B7652



4. Near both fuel tank filler cap:

B7645



(Continued Next Page)

PLACARDS (Continued)

- 5. On flap control indicator:
- B7646



6. In baggage compartment:

87647

120 POUNDS MAXIMUM BAGGAGE FORWARD OF BAGGAGE DOOR LATCH

50 POUNDS MAXIMUM BAGGAGE AFT OF BAGGAGE DOOR LATCH

MAXIMUM 120 POUNDS COMBINED FOR ADDITIONAL LOADING INSTRUCTIONS SEE WEIGHT AND BALANCE DATA

(Continued Next Page)

FAA APPROVED 172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

 A calibration card must be provided to indicate the accuracy of the magnetic compass in 30° increments.





8. Molded on the oil filler cap/dipstick:



Silk-screened on the instrument panel directly above the PFD:

87938

B7648

MANEUVERING SPEED: 105 KIAS

(Continued Next Page)

FAA APPROVED 172SPHBUS-00

PLACARDS (Continued)

10. Silk-screened on the upper right instrument panel:

B6151

SMOKING PROHIBITED

11. On auxiliary power plug door and second placard on battery box:

B6152

B6153



12. On the upper right side of the aft cabin partition:

EMERGENCY LOCATOR TRANSMITTER INSTALLED AFT OF THIS PARTITION. MUST BE SERVICED IN ACCORDANCE WITH FAR PART 91.207

or

B7651

EMERGENCY LOCATOR TRANSMITTER INSTALLED AFT OF THIS PARTITION. MUST BE SERVICED IN ACCORDANCE WITH 14 CFR 91.207

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

13. On the center overhead flood light control switch:



and the second

Page

EMERGENCY PROCEDURES TABLE OF CONTENTS

Introduction
Airspeeds For Emergency Operations
EMERGENCY PROCEDURES
ENGINE FAILURES 3-6 Engine Failure During Takeoff Roll 3-6 Engine Failure Immediately After Takeoff 3-6 Engine Failure During Flight (Restart Procedures) 3-7
FORCED LANDINGS 3-8 Emergency Landing Without Engine Power 3-8 Precautionary Landing With Engine Power 3-8 Ditching 3-8
FIRES3-10During Start On Ground3-10Engine Fire In Flight3-11Electrical Fire In Flight3-11Cabin Fire3-12Wing Fire3-13
ICING
STATIC SOURCE BLOCKAGE
EXCESSIVE FUEL VAPOR

(Continued Next Page)

172SPHBUS-00

SECTION 3 EMERGENCY PROCEDURES

TABLE OF CONTENTS (Continued)

	F	2	a	je	9
--	---	---	---	----	---

ABNORMAL LANDINGS	3-16
Landing With A Flat Main Tire	3-16
Landing With A Flat Nose Tire	3-16
ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS High Volts Annunciator Comes On or	3-17
M BATT AMPS More Than 40	3-17
LOW VOLTS Annunciator Comes On Below 1000 RPM LOW VOLTS Annunciator Comes On or	3-19
Does Not Go Off at Higher RPM	3-19
AIR DATA SYSTEM FAILURE	3-21
Red X - PFD Airspeed Indicator	3-21
Red X - PFD Altitude Indicator	3-21
ATTITUDE AND HEADING REFERENCE SYSTEM (AHRS)	
FAILURE	3-21
Bed X - PED Attitude Indicator	3-21
Red X - Horizontal Situation Indicator (HSI)	3-21
AUTOPILOT OR ELECTRIC TRIM FAILURE (if installed)	3-22
AP or PTRM Annunciator(s) Come On	3-22

VACUUM SYSTEM FAILURE	3-23
LOW VACUUM Annunciator Comes On	3-23
HIGH CARBON MONOXIDE (CO) LEVEL ADVISORY	3-24
CO LVL HIGH Annunciator Comes On	3-24
CO LVL HIGH Annunciator Remains On	3-24

(Continued Next Page)
SECTION 3 EMERGENCY PROCEDURES

TABLE OF CONTENTS (Continued)

AMPLIFIED EMERGENCY PROCEDURES 3-25
Engine Failure 3-25
Maximum Glide 3-26
Forced Landings 3-27
Landing Without Elevator Control 3-28
Fires 3-28
Emergency Operation In Cloude 3-20
Executing A 180° Turn In Clouds (AHRS FAILED) 2-20
Executing A 100 Tulli III Clouds (AHAS FAILED)
Energency Descent Through Clouds (AFRS FAILED)
Inductort Elight Inte Long Conditions
Chatia Cauraa Blackad
Spins
Rough Engine Operation Or Loss Of Power
Spark Plug Fouling
Magneto Malfunction
Idle Power Engine Roughness
Engine-Driven Fuel Pump Failure
Excessive Fuel Vapor
Low Oil Pressure
Electrical Power Supply System Malfunctions
Excessive Rate Of Charge
Insufficient Rate Of Charge 3-37
High Carbon Monoxide (CO) Level Annunciation
Other Emergencies
Windshield Damage

U.S.

SECTION 3 EMERGENCY PROCEDURES

INTRODUCTION

Section 3 provides checklist and amplified procedures for coping with emergencies that may occur. Emergencies caused by airplane or engine malfunctions are extremely rare if proper preflight inspections and maintenance are practiced. Enroute weather emergencies can be minimized or eliminated by careful flight planning and good judgment when unexpected weather is encountered. However, should an emergency arise, the basic guidelines described in this section should be considered and applied as necessary to correct the problem. In any emergency situation, the most important task is continued control of the airplane and maneuver to execute a successful landing.

Emergency procedures associated with optional or supplemental equipment are found in Section 9, Supplements.

AIRSPEEDS FOR EMERGENCY OPERATIONS

ENGINE FAILURE AFTER TAKEOFF

Wing Flaps UP			•	• •		•	•	•	• •	•	•	•	•	• •	•	•	٠	•	•	•		• •		•	10) ۲	(IA)	5
Wing Flaps 10° - F	ULL	<u>.</u>	•	• •	• •	•	•	•	• •	•	•	•	•		•	•	•	•	•	•	•	•		•	65	5 1	<ia:< td=""><td>S</td></ia:<>	S
MANEUVERING SPI	EED																											
2550 POUNDS																								1	05	5 1	(IA	S
2200 POUNDS																					. ,				98	1	KIA:	S
1900 POUNDS	• • • •		•		• •	•	•	•	• •			•	•	• •		•	•	•	•	•			•		90) }	(IA	S
MAXIMUM GLIDE			•			•	•	•		•	•	•	•		•	•	•	•	•	•	•	•		•	68	8 1	<ia:< td=""><td>S</td></ia:<>	S
PRECAUTIONARY L	AND	DIN	G	V	VIT	۲H	1	E	N	G	11	NE	Ξ	Ρ	0	V	V	E	R	•	• •				65	1	<ia:< td=""><td>S</td></ia:<>	S
				0120			30-0																					

LANDING WITHOUT ENGINE POWER

Wing Flaps	UP			• •	•	 •		•	•	 •		•	•	•	 •	•		•		70	KIAS	5
Wing Flaps	10°	- F	=U	LL		 ÷		•	•		• •	ł			 •	•			÷	65	KIA	S

CESSNA MODEL 172S NAV III GFC 700 AFCS

EMERGENCY PROCEDURES

Procedures in the Emergency Procedures Checklist portion of this section shown in **bold faced** type are immediate action items which should be committed to memory.

ENGINE FAILURES

ENGINE FAILURE DURING TAKEOFF ROLL

- 1. Throttle Control IDLE (pull full out)
- 2. Brakes APPLY
- 3. Wing Flaps RETRACT
- 4. Mixture Control IDLE CUTOFF (pull full out)
- 5. MAGNETOS Switch OFF
- 6. STBY BATT Switch OFF
- 7. MASTER Switch (ALT and BAT) OFF

ENGINE FAILURE IMMEDIATELY AFTER TAKEOFF

1. Airspeed - 70 KIAS - Flaps UP

65 KIAS - Flaps 10° - FULL

- 2. Mixture Control IDLE CUTOFF (pull full out)
- 3. FUEL SHUTOFF Valve OFF (pull full out)
- 4. MAGNETOS Switch OFF
- 5. Wing Flaps AS REQUIRED (FULL recommended)
- 6. STBY BATT Switch OFF
- 7. MASTER Switch (ALT and BAT) OFF
- 8. Cabin Door UNLATCH
- 9. Land STRAIGHT AHEAD

(Continued Next Page)

SECTION 3 EMERGENCY PROCEDURES

ENGINE FAILURES (Continued)

ENGINE FAILURE DURING FLIGHT (Restart Procedures)

- 1. Airspeed 68 KIAS (best glide speed)
- 2. FUEL SHUTOFF Valve ON (push full in)
- 3. FUEL SELECTOR Valve BOTH
- 4. FUEL PUMP Switch ON
- 5. Mixture Control RICH (if restart has not occurred)
- 6. MAGNETOS Switch BOTH (or START if propeller is stopped)

NOTE

If the propeller is windmilling, engine will restart automatically within a few seconds. If propeller has stopped (possible at low speeds), turn MAGNETOS switch to START, advance throttle slowly from idle and lean the mixture from full rich as required to obtain smooth operation.

7. FUEL PUMP Switch - OFF

NOTE

If the indicated fuel flow (FFLOW GPH) immediately drops to zero, a sign of failure of the engine-driven fuel pump, return the FUEL PUMP switch to the ON position.

172SPHBUS-00

U.S.

3-7

FORCED LANDINGS

EMERGENCY LANDING WITHOUT ENGINE POWER

- 1. Pilot and Passenger Seat Backs MOST UPRIGHT POSITION
- 2. Seats and Seat Belts SECURE
- 3. Airspeed 70 KIAS Flaps UP
 - 65 KIAS Flaps 10° FULL
- 4. Mixture Control IDLE CUTOFF (pull full out)
- 5. FUEL SHUTOFF Valve OFF (pull full out)
- 6. MAGNETOS Switch OFF
- 7. Wing Flaps AS REQUIRED (FULL recommended)
- 8. STBY BATT Switch OFF
- 9. MASTER Switch (ALT and BAT) OFF (when landing is assured)
- 10. Doors UNLATCH PRIOR TO TOUCHDOWN
- 11. Touchdown SLIGHTLY TAIL LOW
- 12. Brakes APPLY HEAVILY

PRECAUTIONARY LANDING WITH ENGINE POWER

- 1. Pilot and Passenger Seat Backs MOST UPRIGHT POSITION
- 2. Seats and Seat Belts SECURE
- 3. Airspeed 65 KIAS
- 4. Wing Flaps 20°
- 5. Selected Field FLY OVER (noting terrain and obstructions)
- 6. Wing Flaps FULL (on final approach)
- 7. Airspeed 65 KIAS
- 8. STBY BATT Switch OFF
- 9. MASTER Switch (ALT and BAT) OFF (when landing assured)
- 10. Doors UNLATCH PRIOR TO TOUCHDOWN
- 11. Touchdown SLIGHTLY TAIL LOW
- 12. Mixture Control IDLE CUTOFF (pull full out)
- 13. MAGNETOS Switch OFF
- 14. Brakes APPLY HEAVILY

(Continued Next Page)

FORCED LANDINGS (Continued)

DITCHING

- 1. Radio TRANSMIT MAYDAY on 121.5 MHz, (give location, intentions and SQUAWK 7700)
- Heavy Objects (in baggage area) SECURE OR JETTISON (if possible)
- 3. Pilot and Passenger Seat Backs MOST UPRIGHT POSITION
- 4. Seats and Seat Belts SECURE
- 5. Wing Flaps 20° FULL
- 6. Power ESTABLISH 300 FT/MIN DESCENT AT 55 KIAS

NOTE

If no power is available, approach at 70 KIAS with Flaps UP or at 65 KIAS with Flaps 10°.

- Approach High Winds, Heavy Seas INTO THE WIND Light Winds, Heavy Swells - PARALLEL TO SWELLS
- 8. Cabin Doors UNLATCH
- 9. Touchdown LEVEL ATTITUDE AT ESTABLISHED RATE OF DESCENT
- 10. Face CUSHION AT TOUCHDOWN (with folded coat)
- 11. ELT ACTIVATE
- 12. Airplane EVACUATE THROUGH CABIN DOORS

NOTE

If necessary, open window and flood cabin to equalize pressure so doors can be opened.

13. Life Vests and Raft - INFLATE WHEN CLEAR OF AIRPLANE

CESSNA MODEL 172S NAV III GFC 700 AFCS

FIRES

DURING START ON GROUND

1. MAGNETOS Switch - START (continue cranking to start the engine)

IF ENGINE STARTS

- 2. Power 1800 RPM (for a few minutes)
- 3. Engine SHUTDOWN (inspect for damage)

IF ENGINE FAILS TO START

- 2. Throttle Control FULL (push full in)
- 3. Mixture Control IDLE CUTOFF (pull full out)
- 4. MAGNETOS Switch START (continue cranking)
- 5. FUEL SHUTOFF Valve OFF (pull full out)
- 6. FUEL PUMP Switch OFF
- 7. MAGNETOS Switch OFF
- 8. STBY BATT Switch OFF
- 9. MASTER Switch (ALT and BAT) OFF
- 10. Engine SECURE
- 11. Parking Brake RELEASE
- 12. Fire Extinguisher OBTAIN (have ground attendants obtain if not installed)
- 13. Airplane EVACUATE
- 14. Fire EXTINGUISH (using fire extinguisher, wool blanket, or dirt)
- 15. Fire Damage INSPECT (repair or replace damaged components and/or wiring before conducting another flight)

(Continued Next Page)

SECTION 3 EMERGENCY PROCEDURES

FIRES (Continued)

ENGINE FIRE IN FLIGHT

- 1. Mixture Control IDLE CUTOFF (pull full out)
- 2. FUEL SHUTOFF Valve OFF (pull full out)
- 3. FUEL PUMP Switch OFF
- 4. MASTER Switch (ALT and BAT) OFF
- 5. Cabin Vents OPEN (as needed)
- CABIN HT and CABIN AIR Control Knobs OFF (push full in) (to avoid drafts)
- Airspeed 100 KIAS (If fire is not extinguished, increase glide speed to find an airspeed, within airspeed limitations, which will provide an incombustible mixture)
- 8. Forced Landing EXECUTE (refer to EMERGENCY LANDING WITHOUT ENGINE POWER)

ELECTRICAL FIRE IN FLIGHT

- 1. STBY BATT Switch OFF
- 2. MASTER Switch (ALT and BAT) OFF
- 3. Cabin Vents CLOSED (to avoid drafts)
- 4. CABIN HT and CABIN AIR Control Knobs OFF (push full in) (to avoid drafts)
- 5. Fire Extinguisher ACTIVATE (if available)
- 6. AVIONICS Switch (BUS 1 and BUS 2) OFF
- 7. All Other Switches (except MAGNETOS switch) OFF

WARNING

AFTER THE FIRE EXTINGUISHER HAS BEEN USED, MAKE SURE THAT THE FIRE IS EXTINGUISHED BEFORE EXTERIOR AIR IS USED TO REMOVE SMOKE FROM THE CABIN.

- 8. Cabin Vents OPEN (when sure that fire is completely extinguished)
- 9. CABIN HT and CABIN AIR Control Knobs ON (pull full out) (when sure that fire is completely extinguished)

(Continued Next Page)

172SPHBUS-00

U.S.

FIRES (Continued)

ELECTRICAL FIRE IN FLIGHT (Continued)

IF FIRE HAS BEEN EXTINGUISHED AND ELECTRICAL POWER IS NECESSARY FOR CONTINUED FLIGHT TO NEAREST SUITABLE AIRPORT OR LANDING AREA

- 10. Circuit Breakers CHECK (for OPEN circuit(s), do not reset)
- 11. MASTER Switch (ALT and BAT) ON
- 12. STBY BATT Switch ARM
- 13. AVIONICS Switch (BUS 1) ON
- 14. AVIONICS Switch (BUS 2) ON

CABIN FIRE

- 1. STBY BATT Switch OFF
- 2. MASTER Switch (ALT and BAT) OFF
- 3. Cabin Vents CLOSED (to avoid drafts)
- 4. CABIN HT and CABIN AIR Control Knobs OFF (push full in) (to avoid drafts)
- 5. Fire Extinguisher ACTIVATE (if available)

WARNING

AFTER THE FIRE EXTINGUISHER HAS BEEN USED, MAKE SURE THAT THE FIRE IS EXTINGUISHED BEFORE EXTERIOR AIR IS USED TO REMOVE SMOKE FROM THE CABIN.

- Cabin Vents OPEN (when sure that fire is completely extinguished)
- 7. CABIN HT and CABIN AIR Control Knobs ON (pull full out) (when sure that fire is completely extinguished)
- 8. Land the airplane as soon as possible to inspect for damage.

(Continued Next Page)

SECTION 3 EMERGENCY PROCEDURES

FIRES (Continued)

WING FIRE

- 1. LAND and TAXI Light Switches OFF
- 2. NAV Light Switch OFF
- 3. STROBE Light Switch OFF
- 4. PITOT HEAT Switch OFF

NOTE

Perform a sideslip to keep the flames away from the fuel tank and cabin. Land as soon as possible using flaps only as required for final approach and touchdown.

172SPHBUS-00

U.S.

ICING

INADVERTENT ICING ENCOUNTER DURING FLIGHT

- 1. PITOT HEAT Switch ON
- 2. Turn back or change altitude (to obtain an outside air temperature that is less conducive to icing)
- 3. CABIN HT Control Knob ON (pull full out)
- 4. Defroster Control Outlets OPEN (to obtain maximum windshield defroster airflow)
- 5. CABIN AIR Control Knob ADJUST (to obtain maximum defroster heat and airflow)
- 6. Watch for signs of induction air filter icing. A loss of engine RPM could be caused by ice blocking the air intake filter. Adjust the throttle as necessary to hold engine RPM. Adjust mixture as necessary for any change in power settings.
- 7. Plan a landing at the nearest airport. With an extremely rapid ice build-up, select a suitable off airport landing site.
- 8. With an ice accumulation of 0.25 inch or more on the wing leading edges, be prepared for significantly higher power requirements, higher approach and stall speeds, and a longer landing roll.
- Leave wing flaps retracted. With a severe ice build-up on the horizontal tail, the change in wing wake airflow direction caused by wing flap extension could result in a loss of elevator effectiveness.
- 10. Open left window and, if practical, scrape ice from a portion of the windshield for visibility in the landing approach.
- 11. Perform a landing approach using a forward slip, if necessary, for improved visibility.
- 12. Approach at 65 to 75 KIAS depending upon the amount of ice accumulation.
- 13. Perform landing in level attitude.
- 14. Missed approaches should be avoided whenever possible because of severely reduced climb capability.

SECTION 3 EMERGENCY PROCEDURES

STATIC SOURCE BLOCKAGE (ERRONEOUS INSTRUMENT READING SUSPECTED)

- 1. ALT STATIC AIR Valve ON (pull full out)
- 2. Cabin Vents CLOSED
- 3. CABIN HT and CABIN AIR Control Knobs ON (pull full out)
- 4. Airspeed Refer to Section 5, Figure 5-1 (Sheet 2) Airspeed Calibration, Alternate Static Source correction chart.

EXCESSIVE FUEL VAPOR

FUEL FLOW STABILIZATION PROCEDURES (If flow fluctuations of 1 GPH or more, or power surges occur.)

- 1. FUEL PUMP Switch ON
- 2. Mixture Control ADJUST (as necessary for smooth engine operation)
- 3. Fuel Selector Valve SELECT OPPOSITE TANK (if vapor symptoms continue)
- 4. FUEL PUMP Switch OFF (after fuel flow has stabilized)

ABNORMAL LANDINGS

LANDING WITH A FLAT MAIN TIRE

- 1. Approach NORMAL
- 2. Wing Flaps FULL
- 3. Touchdown GOOD MAIN TIRE FIRST (hold airplane off flat tire as long as possible with aileron control)
- Directional Control MAINTAIN (using brake on good wheel as required)

LANDING WITH A FLAT NOSE TIRE

- 1. Approach NORMAL
- Wing Flaps AS REQUIRED 85 to 110 KIAS - Flaps UP - 10° Below 85 KIAS - Flaps 10° - FULL
- 3. Touchdown ON MAINS (hold nosewheel off the ground as long as possible)
- 4. When nosewheel touches down, maintain full up elevator as airplane slows to stop.

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

HIGH VOLTS ANNUNCIATOR COMES ON OR M BATT AMPS MORE THAN 40

- 1. MASTER Switch (ALT Only) OFF
- 2. Electrical Load REDUCE IMMEDIATELY as follows:
 - a. AVIONICS Switch (BUS 1) OFF
 - b. PITOT HEAT Switch OFF
 - c. BEACON Light Switch OFF
 - d. LAND Light Switch OFF (use as required for landing)
 - e. TAXI Light Switch OFF
 - f. NAV Light Switch OFF
 - g. STROBE Light Switch OFF
 - h. CABIN PWR 12V Switch OFF

NOTE

 The main battery supplies electrical power to the main and essential buses until M BUS VOLTS decreases below 20 volts. When M BUS VOLTS falls below 20 volts, the standby battery system will automatically supply electrical power to the essential bus for at least 30 minutes.

 Select COM1 MIC and NAV1 on the audio panel and tune to the active frequency before setting AVIONICS BUS 2 to OFF. If COM2 MIC and NAV2 are selected when AVIONICS BUS 2 is set to OFF, the COM and NAV radios cannot be tuned.

(Continued Next Page)

172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL POWER MALFUNCTIONS (Continued)

SUPPLY SYSTEM

HIGH VOLTS ANNUNCIATOR COMES ON OR M BATT AMPS MORE THAN 40 (Continued)

- i. COM1 and NAV1 TUNE TO ACTIVE FREQUENCY
- j. COM1 MIC and NAV1 SELECT (COM2 MIC and NAV2 will be inoperative once AVIONICS BUS 2 is selected to OFF)

NOTE

When AVIONICS BUS 2 is set to OFF, the following items will not operate:

Autopilot	Audio Panel						
COMM 2	NAV 2						
Transponder	MFD						

k. AVIONICS Switch (BUS 2) - OFF (KEEP ON if in clouds)

3. Land as soon as practical.

NOTE

Make sure a successful landing is possible before extending flaps. The flap motor is a large electrical load during operation.

(Continued Next Page)

SECTION 3 EMERGENCY PROCEDURES

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS (Continued)

LOW VOLTS ANNUNCIATOR COMES ON BELOW 1000 RPM

- 1. Throttle Control 1000 RPM
- 2. LOW VOLTS Annunciator CHECK OFF

LOW VOLTS ANNUNCIATOR REMAINS ON AT 1000 RPM

3. Authorized maintenance personnel must do electrical system inspection prior to next flight.

LOW VOLTS ANNUNCIATOR COMES ON OR DOES NOT GO OFF AT HIGHER RPM

- 1. MASTER Switch (ALT Only) OFF
- 2. ALT FIELD Circuit Breaker CHECK IN
- 3. MASTER Switch (ALT and BAT) ON
- 4. LOW VOLTS Annunciator CHECK OFF
- 5. M BUS VOLTS CHECK 27.5 V (minimum)
- 6. M BATT AMPS CHECK CHARGING (+)

IF LOW VOLTS ANNUNCIATOR REMAINS ON

- 7. MASTER Switch (ALT Only) OFF
- 8. Electrical Load REDUCE IMMEDIATELY as follows:
 - a. AVIONICS Switch (BUS 1) OFF
 - b. PITOT HEAT Switch OFF
 - c. BEACON Light Switch OFF
 - d. LAND Light Switch OFF (use as required for landing)
 - e. TAXI Light Switch OFF
 - f. NAV Light Switch OFF
 - g. STROBE Light Switch OFF
 - h. CABIN PWR 12V Switch OFF

(Continued Next Page)

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS (Continued)

IF LOW VOLTS ANNUNCIATOR REMAINS ON (Continued)

NOTE

- The main battery supplies electrical power to the main and essential buses until M BUS VOLTS decreases below 20 volts. When M BUS VOLTS falls below 20 volts, the standby battery system will automatically supply electrical power to the essential bus for at least 30 minutes.
- Select COM1 MIC and NAV1 on the audio panel and tune to the active frequency before setting AVIONICS BUS 2 to OFF. If COM2 MIC and NAV2 are selected when AVIONICS BUS 2 is set to OFF, the COM and NAV radios cannot be tuned.
 - i. COM1 and NAV1 TUNE TO ACTIVE FREQUENCY
- j. COM1 MIC and NAV1 SELECT (COM2 MIC and NAV2 will be inoperative once AVIONICS BUS 2 is selected to OFF)

NOTE

When AVIONICS BUS 2 is set to OFF, the following items will not operate:

Autopilot	Audio Panel
COMM 2	NAV 2
Transponder	MFD

- k. AVIONICS Switch (BUS 2) OFF (KEEP ON if in clouds)
- 9. Land as soon as practical.

NOTE

Make sure a successful landing is possible before extending flaps. The flap motor is a large electrical load during operation.

AIR DATA SYSTEM FAILURE

RED X - PFD AIRSPEED INDICATOR

- ADC/AHRS Circuit Breakers CHECK IN (ESS BUS and AVN BUS 1). If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
- 2. Standby Airspeed Indicator USE FOR AIRSPEED INFORMATION

RED X - PFD ALTITUDE INDICATOR

- ADC/AHRS Circuit Breakers CHECK IN (ESS BUS and AVN BUS 1). If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
- 2. Standby Altimeter CHECK current barometric pressure SET. USE FOR ALTITUDE INFORMATION.

ATTITUDE AND HEADING REFERENCE SYSTEM (AHRS) FAILURE

RED X - PFD ATTITUDE INDICATOR

- ADC/AHRS Circuit Breakers CHECK IN (ESS BUS and AVN BUS 1). If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
- 2. Standby Attitude Indicator USE FOR ATTITUDE INFORMATION

RED X - HORIZONTAL SITUATION INDICATOR (HSI)

- ADC/AHRS Circuit Breakers CHECK IN (ESS BUS and AVN BUS 1). If open, reset (close) circuit breaker. If circuit breaker opens again, do not reset.
- 2. Non-Stabilized Magnetic Compass USE FOR HEADING INFORMATION

CESSNA MODEL 172S NAV III GFC 700 AFCS

AUTOPILOT OR ELECTRIC TRIM FAILURE (if installed)

AP OR PTRM ANNUNCIATOR(S) COME ON

- 1. Control Wheel GRASP FIRMLY (regain control of airplane)
- 2. A/P TRIM DISC Button PRESS and HOLD (throughout recovery)
- 3. Elevator Trim Control ADJUST MANUALLY (as necessary)
- 4. AUTO PILOT Circuit Breaker OPEN (pull out)
- 5. A/P TRIM DISC Button RELEASE

WARNING

FOLLOWING AN AUTOPILOT, AUTOTRIM OR MANUAL ELECTRIC TRIM SYSTEM MALFUNCTION, DO NOT ENGAGE THE AUTOPILOT UNTIL THE CAUSE OF THE MALFUNCTION HAS BEEN CORRECTED.

VACUUM SYSTEM FAILURE

LOW VACUUM ANNUNCIATOR COMES ON

1. Vacuum Indicator (VAC) - CHECK EIS ENGINE PAGE (make sure vacuum pointer is in green band limits)

CAUTION

IF VACUUM POINTER IS OUT OF THE GREEN BAND DURING FLIGHT OR THE GYRO FLAG IS SHOWN ON THE STANDBY ATTITUDE INDICATOR, THE STANDBY ATTITUDE INDICATOR MUST NOT BE USED FOR ATTITUDE INFORMATION.

CESSNA MODEL 172S NAV III GFC 700 AFCS

HIGH CARBON MONOXIDE (CO) LEVEL ADVISORY

CO LVL HIGH ANNUNCIATOR COMES ON

- 1. CABIN HT Control Knob OFF (push full in)
- 2. CABIN AIR Control Knob ON (pull full out)
- 3. Cabin Vents OPEN
- 4. Cabin Windows OPEN (163 KIAS maximum windows open speed)

CO LVL HIGH ANNUNCIATOR REMAINS ON

5. Land as soon as practical.

AMPLIFIED EMERGENCY PROCEDURES

The following Amplified Emergency Procedures provide additional information beyond that in the Emergency Procedures Checklists portion of this section. These procedures also include information not readily adaptable to a checklist format, and material to which a pilot could not be expected to refer in resolution of a specific emergency. This information should be reviewed in detail prior to flying the airplane, as well as reviewed on a regular basis to keep pilot's knowledge of procedures fresh.

ENGINE FAILURE

If an engine failure occurs during the takeoff roll, stop the airplane on the remaining runway. Those extra items on the checklist will provide added safety after a failure of this type.

If an engine failure occurs immediately after takeoff, in most cases, the landing should be planned straight ahead with only small changes in direction to avoid obstructions. Altitude and airspeed are seldom sufficient to execute the 180° gliding turn necessary to return to the runway. The checklist procedures assume that adequate time exists to secure the fuel and ignition systems prior to touchdown.

After an engine failure in flight, the most important task is to continue flying the airplane. The best glide speed, as shown in Figure 3-1, should be established as quickly as possible. While gliding toward a suitable landing area, an effort should be made to identify the cause of the failure. If time permits, an engine restart should be attempted as shown in the checklist. If the engine cannot be restarted, a forced landing without power must be completed.

MAXIMUM GLIDE



FORCED LANDINGS

If all attempts to restart the engine fail and a forced landing is imminent, select a suitable field and prepare for the landing as discussed under the Emergency Landing Without Engine Power checklist. Transmit Mayday message on 121.5 MHz giving location, intentions and squawk 7700.

Before attempting an off airport landing with engine power available, one should fly over the landing area at a safe, but low altitude, to inspect the terrain for obstructions and surface conditions, proceeding as discussed in the Precautionary Landing With Engine Power checklist.

Prepare for ditching by securing or jettisoning heavy objects located in the baggage area and collect folded coats for protection of occupants' face at touchdown. Transmit Mayday messages on 121.5 MHz giving location, intentions and squawk 7700. Avoid a landing flare because of the difficulty in judging height over a water surface. The checklist assumes the availability of power to make a precautionary water landing. If power is not available, use of the airspeeds noted with minimum flap extension will provide a more favorable attitude for a power off ditching.

In a forced landing situation, do not turn off the MASTER switch, AVIONICS switch or STBY BATT switch until a landing is assured. Premature deactivation of the switches will disable all airplane electrical systems.

Before completing a forced landing, especially in remote and mountainous areas, activate the ELT by setting the cockpit-mounted switch to the ON position. For complete information on ELT operation, refer to Section 9, Supplements.

LANDING WITHOUT ELEVATOR CONTROL

Trim for horizontal flight with an airspeed of approximately 65 KIAS and flaps set to 20° by using throttle and elevator trim controls. Then **do not change the elevator trim control setting;** control the glide angle by adjusting power.

During the landing flare (round-out), the nose will come down when power is reduced and the airplane may touch down on the nosewheel before the main wheels. When in the flare, the elevator trim control should be adjusted toward the full nose up position and the power adjusted at the same time so that the airplane will rotate to a horizontal attitude for touchdown. Close the throttle at touchdown.

FIRES

Improper starting procedures involving the excessive use of auxiliary fuel pump operation can cause engine flooding and subsequent collection of fuel on the parking ramp as the excess fuel drains overboard from the intake manifolds. This is sometimes experienced in difficult starts in cold weather where engine preheat service is not available. If this occurs, the airplane should be pushed away from the fuel puddle before another engine start is attempted. Otherwise, there is a possibility of raw fuel accumulations in the exhaust system igniting during an engine start, causing a long flame from the tailpipe, and possibly igniting the collected fuel on the pavement. If a fire occurs, proceed according to the checklist.

Although engine fires are extremely rare in flight, if a fire is encountered, the steps of the appropriate checklist should be followed. After completion of the checklist procedure, execute a forced landing. Do not attempt to restart the engine.

The first sign of an electrical fire is usually the smell of burning insulation. The checklist procedure should result in the elimination of the fire.

EMERGENCY OPERATION IN CLOUDS

If the engine-driven vacuum pump fails in flight, the standby attitude indicator will not be accurate. The pilot must then rely on the attitude and heading information (from the AHRS) shown on the PFD indicators. With valid HDG or GPS/NAV inputs, autopilot operation will not be affected.

If the AHRS unit fails in flight (red X's shown through the PFD attitude and heading indicators), the pilot must rely on the standby attitude indicator and non-stabilized magnetic compass for attitude and heading information.

The autopilot will not operate if the AHRS unit fails. The pilot must manually fly the airplane without AHRS input. Refer to Section 7, Airplane and Systems Description, for additional details on autopilot operations.

The following instructions assume that the pilot is not very proficient at instrument flying and is flying the airplane without the autopilot engaged.

EXECUTING A 180° TURN IN CLOUDS (AHRS FAILED)

Upon inadvertently entering the clouds, an immediate turn to reverse course and return to VFR conditions should be made as follows:

AHRS FAILURE

- 1. Note the non-stabilized magnetic compass heading.
- Using the standby attitude indicator, initiate a 15° bank left turn. Keep feet off rudder pedals. Maintain altitude and 15° bank angle. Continue the turn for 60 seconds, then roll back to level flight.
- 3. When the compass card becomes sufficiently stable, check the accuracy of the turn by verifying that the compass heading approximates the reciprocal of the original heading.
- 4. If necessary, adjust the heading by keeping the wings level and using the rudder to make skidding turns (the compass will read more accurately) to complete the course reversal.
- 5. Maintain altitude and airspeed by cautious application of elevator control. Keep the roll pointer and index aligned and steer only with rudder.

(Continued Next Page)

172SPHBUS-00

U.S.

EMERGENCY OPERATION IN CLOUDS (Continued)

EMERGENCY DESCENT THROUGH CLOUDS (AHRS FAILED)

When returning to VFR flight after a 180° turn is not practical, a descent through the clouds to VFR conditions below may be appropriate. If possible, obtain an ATC clearance for an emergency descent through the clouds.

AHRS FAILURE

Choose an easterly or westerly heading to minimize non-stabilized magnetic compass card sensitivity. Occasionally check the compass heading and make minor corrections to hold an approximate course. The autopilot will not operate if the AHRS unit fails. The pilot must manually fly the airplane without AHRS input.

Before descending into the clouds, prepare for a stabilized descent as follows:

- 1. Apply full rich mixture.
- 2. Turn pitot heat on.
- 3. Set power for a 500 to 800 feet per minute rate of descent.
- Set the elevator trim for a stabilized descent at 80 KIAS.
- 5. Use the standby attitude indicator roll pointer and index to keep wings level.
- 6. Check trend of compass card movement and make cautious corrections with rudder to stop the turn.
- 7. Upon breaking out of clouds, resume normal cruising flight.

(Continued Next Page)

EMERGENCY OPERATION IN CLOUDS (Continued)

RECOVERY FROM SPIRAL DIVE IN THE CLOUDS (AHRS FAILED)

AHRS FAILURE

If a spiral is entered while in the clouds, continue as follows:

- 1. Retard throttle to idle position.
- Remove feet from rudder pedals.
- Stop turn by carefully leveling the wings using aileron control to align the roll index and roll pointer of the standby attitude indicator.
- 4. Cautiously apply elevator back pressure to slowly reduce the airspeed to 80 KIAS.
- 5. Adjust the elevator trim control to maintain an 80 KIAS glide.
- 6. Use aileron control to maintain wings level (keep roll pointer and index aligned) and constant heading.
- 7. Resume Emergency Descent Through The Clouds procedure.
- Upon breaking out of clouds, resume normal cruising flight.

INADVERTENT FLIGHT INTO ICING CONDITIONS

Flight into icing conditions is prohibited and extremely dangerous. An inadvertent encounter with these conditions can be resolved using the checklist procedures. The best action is to turn back or change altitude to escape icing conditions. Set the PITOT HEAT switch to the ON position until safely out of icing conditions.

During these encounters, an unexplained loss of engine power could be caused by ice blocking the air intake filter or in extremely rare instances ice completely blocking the fuel injection air reference tubes. In either case, the throttle should be positioned to obtain maximum RPM (in some instances, the throttle may need to be retarded for maximum power). The mixture should then be adjusted, as required, to obtain maximum RPM.

STATIC SOURCE BLOCKED

If erroneous readings of the static source instruments (airspeed, altimeter and vertical speed) are suspected, the alternate static source air valve (ALT STATIC AIR) should be pulled ON, thereby supplying static pressure to these instruments from the cabin.

When the ALT STATIC AIR valve is ON, the maximum airspeed variation from normal static source operation is 11 knots and the maximum altimeter variation is 50 feet with all windows closed. Refer to Section 5, Figure 5-1 (Sheet 2), Airspeed Calibration - Alternate Static Source correction tables for additional details.

SPINS

Should an inadvertent spin occur, the following recovery procedure should be used:

- 1. RETARD THROTTLE TO IDLE POSITION.
- 2. PLACE AILERONS IN NEUTRAL POSITION.
- 3. APPLY AND **HOLD** FULL RUDDER OPPOSITE TO THE DIRECTION OF ROTATION.
- JUST AFTER THE RUDDER REACHES THE STOP, MOVE THE CONTROL WHEEL BRISKLY FORWARD FAR ENOUGH TO BREAK THE STALL. Full down elevator may be required at aft center of gravity loadings to assure optimum recoveries.
- HOLD THESE CONTROL INPUTS UNTIL ROTATION STOPS. Premature relaxation of the control inputs may extend the recovery.
- 6. AS ROTATION STOPS, NEUTRALIZE RUDDER, AND MAKE A SMOOTH RECOVERY FROM THE RESULTING DIVE.

NOTE

If the rate of the spin makes determining the direction of rotation difficult, the magenta turn rate indicator at the top of the HSI compass card will show the rate and direction of the turn. The HSI compass card will rotate in the opposite direction. Hold opposite rudder to the turn vector direction.

For additional information on spins and spin recovery, see the discussion under SPINS in Normal Procedures, Section 4.

3-32

ROUGH ENGINE OPERATION OR LOSS OF POWER

SPARK PLUG FOULING

A slight engine roughness in flight may be caused by one or more spark plugs becoming fouled by carbon or lead deposits. This may be verified by turning the MAGNETOS switch momentarily from BOTH to either L or R position. An obvious power loss in single magneto operation is evidence of spark plug or magneto trouble. Since spark plugs are the more likely cause, lean the mixture to the recommended lean setting for cruising flight. If the problem does not clear up in several minutes, determine if a richer mixture setting will produce smoother operation. If not, proceed to the nearest airport for repairs using the BOTH position of the MAGNETOS switch unless extreme roughness makes the use of a single MAGNETO position necessary.

MAGNETO MALFUNCTION

Sudden engine roughness or misfiring is usually a sign of a magneto problem. Changing the MAGNETOS switch from BOTH to the L and R switch positions will identify which magneto is malfunctioning. Select different power settings and enrichen the mixture to determine if continued operation on BOTH magnetos is possible. If not, change to the good magneto and continue to the nearest airport for repairs.

IDLE POWER ENGINE ROUGHNESS (As Required by AD 2001-06-17, Paragraph (d)(3))

An excessively rich idle fuel flow may cause low speed engine roughness during flight. During most in-flight low engine speeds (power off stalls, approach to landing, etc.), the mixture control is normally in the full-rich position. However, to improve engine roughness (caused by an improperly adjusted fuel servo) during low engine speeds while in flight, you should rotate the vernier mixture control (leaning of fuel mixture). You may also have to lean the fuel mixture if this low engine speed results in power loss and you need to restart the engine during flight. In all cases, you should land the airplane at the nearest airport for repairs if low speed engine roughness requires you to adjust the fuel mixture control to improve engine operation.

(Continued Next Page)

172SPHBUS-00

U.S.

ROUGH ENGINE OPERATION OR LOSS OF POWER (Continued)

ENGINE-DRIVEN FUEL PUMP FAILURE

Failure of the engine-driven fuel pump will be shown by a sudden reduction in the fuel flow indication (FFLOW GPH) **immediately before a loss of power** while operating from a fuel tank containing adequate fuel.

If the engine-driven fuel pump fails, immediately set the FUEL PUMP switch to the ON position to restore the engine power. The flight should be terminated as soon as practical and the engine-driven fuel pump repaired.

EXCESSIVE FUEL VAPOR

Fuel vapor in the fuel injection system is most likely to occur on the ground, typically during prolonged taxi operations, when operating at higher altitudes and/or in unusually warm temperatures.

Excessive fuel vapor accumulation is shown by fuel flow indicator (FFLOW GPH) fluctuations greater than 1 gal./hr. This condition, with leaner mixtures or with larger fluctuations, can result in power surges, and if not corrected, may cause power loss.

To slow vapor formation and stabilize fuel flow on the ground or in the air, set the FUEL PUMP switch to the ON position and adjust the mixture as required for smooth engine operation. If vapor symptoms continue, select the opposite fuel tank. When fuel flow stabilizes, set the FUEL PUMP switch to the OFF position and adjust the mixture as desired.

(Continued Next Page)

GFC 700 AFCS

ROUGH ENGINE OPERATION OR LOSS OF POWER (Continued)

LOW OIL PRESSURE

If the low oil pressure annunciator (OIL PRESS) comes on, check the oil pressure indicator (OIL PRES on ENGINE page or OIL PSI on SYSTEM page) to confirm low oil pressure condition. If oil pressure and oil temperature (OIL TEMP on ENGINE page or OIL °F on SYSTEM page) remain normal, it is possible that the oil pressure sending unit or relief valve is malfunctioning. Land at the nearest airport to determine the source of the problem.

If a total loss of oil pressure and a rise in oil temperature occur at about the same time, it could mean that the engine is about to fail. Reduce power immediately and select a field suitable for a forced landing. Use only the minimum power necessary to reach the landing site.

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

Malfunctions in the electrical power supply system can be detected through regular monitoring of the main battery ammeter (M BATT AMPS) and the main electrical bus voltmeter (M BUS VOLTS); however, the cause of these malfunctions is usually difficult to determine. A broken alternator drive belt, too much wear on the alternator brushes, or an error in wiring is most likely the cause of alternator failures, although other factors could cause the problem. A defective Alternator Control Unit (ACU) can also cause malfunctions. Problems of this nature constitute an electrical emergency and should be dealt with immediately. Electrical power malfunctions usually fall into two categories: excessive rate of charge and insufficient rate of charge. The following paragraphs describe the recommended remedy for each situation.

EXCESSIVE RATE OF CHARGE

After engine starting and heavy electrical usage at low engine speeds (such as extended taxiing), the battery condition will be low enough to accept above normal charging during the initial part of a flight. However, after thirty minutes of cruising flight, the main battery ammeter (M BATT AMPS) should be indicating less than 5 amps of charging (+) current. If the charging current remains above this value on a long flight, the battery electrolyte could overheat and evaporate.

Electronic components in the electrical system can be adversely affected by higher than normal voltage. The ACU includes an overvoltage sensor circuit which will automatically disconnect the alternator if the charge voltage increases to more than approximately 31.75 volts. If the overvoltage sensor circuit does not operate correctly, as shown by voltage more than 31.75 volts on the main battery bus voltmeter, the MASTER switch ALT section should be set to the OFF position. Unnecessary electrical equipment should be de-energized and the flight terminated as soon as practical.

(Continued Next Page)

172SPHBUS-00

3-36

SECTION 3 EMERGENCY PROCEDURES

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS (Continued)

INSUFFICIENT RATE OF CHARGE

When the overvoltage sensor circuit, or other fault, opens the alternator (ALT FIELD) circuit breaker and de-energizes the alternator, a discharge (-) current will be shown on the main battery ammeter and the low voltage annunciator (LOW VOLTS) will come on. The ACU can de-energize the alternator due to minor disturbances in the electrical system, resulting in a nuisance opening of the ALT FIELD circuit breaker. If this happens, an attempt should be made to energize the alternator system.

To energize the alternator system

- 1. MASTER Switch (ALT Only) OFF
- 2. ALT FIELD Circuit Breaker CHECK IN
- 3. MASTER Switch (ALT Only) ON

If the problem was a minor ACU disturbance in the electrical system, normal main battery charging will start. A charge (+) current will be shown on the main battery ammeter and the LOW VOLTS annunciator will go off.

If the LOW VOLTS annunciator comes on again, there is an alternator system problem. Do not repeat steps to energize the alternator system. The electrical load on the battery must be minimized (by de-energizing nonessential electrical equipment and avionics) because the battery can supply the electrical system for only a short time. Reduce electrical load as soon as possible to extend the life of the battery for landing. Land as soon as practical.

(Continued Next Page)

172SPHBUS-00

U.S. 3-37

ELECTRICAL POWER MALFUNCTIONS (Continued)

SUPPLY SYSTEM

INSUFFICIENT RATE OF CHARGE (Continued)

Main battery life can be extended by setting the MASTER switch (ALT and BAT) to OFF and operating the equipment on the ESS BUS from the standby battery. The standby battery is only capable of providing power for systems on the essential bus and cannot provide power for transponder (XPDR) operation. Main battery life should be extended, when practical, for possible later operation of the wing flaps and use of the landing light (at night).

NOTE

The LOW VOLTS annunciator can come on when the engine is operated at low RPM with a high electrical load. The LOW VOLTS annunciator will usually go off when the engine is operated at higher RPM for greater alternator system output. Make sure that the M BATT AMPS indication shows positive (+) current at the higher RPM.

HIGH CARBON MONOXIDE (CO) LEVEL ANNUNCIATION

Carbon monoxide (CO) is a colorless, odorless, tasteless product of an internal combustion engine and is always present in exhaust fumes. Even minute quantities of carbon monoxide breathed over a long period of time may lead to dire consequences. The symptoms of carbon monoxide poisoning are difficult to detect by the person affected and may include blurred thinking, a feeling of uneasiness, dizziness, headache, and loss of consciousness.

The cabin heater system operates by allowing ambient air to flow through an exhaust shroud where it is heated before being ducted into the cabin. If an exhaust leak, caused by a crack in the exhaust pipe, occurs in the area surrounded by this shroud it would allow exhaust fumes to mix with the heated ambient air being ducted into the cabin. Therefore, if anyone in the cabin smells exhaust fumes, experiences any of the symptoms mentioned above, or the CO LVL HIGH warning annunciation comes on when using the cabin heater, immediately turn off the cabin heater and preform the emergency items for High Carbon Monoxide (CO) Level Advisory.

When the CO detection system senses a CO level of 50 parts per million (PPM) by volume or greater, the alarm turns on a flashing warning annunciation CO LVL HIGH in the annunciation window on the PFD with a continuous tone until the PFD softkey below WARNING is pushed. It then remains on steady until the CO level drops below 50 PPM and automatically resets the alarm.

OTHER EMERGENCIES

WINDSHIELD DAMAGE

If a bird strike or other incident should damage the windshield in flight to the point of creating an opening, a significant loss in performance may be expected. This loss may be minimized in some cases (depending on amount of damage, altitude, etc.) by opening the side windows while the airplane is maneuvered for a landing at the nearest airport. If airplane performance or other adverse conditions prevent landing at an airport, prepare for an off airport landing in accordance with the Precautionary Landing With Engine Power or Ditching checklists.
SECTION 4 NORMAL PROCEDURES

Page

NORMAL PROCEDURES

TABLE OF CONTENTS

Introduction
Airspeeds For Normal Operation
NORMAL PROCEDURES
Preflight Inspection
Cabin
Empennage
Right Wing Trailing Edge
Right Wing
Nose
Left Wing Leading Edge4-9
Left Wing
Left Wing Trailing Edge4-10
Before Starting Engine
Starting Engine (With Battery) 4-12
Starting Engine (With External Power)4-13
Before Takeoff
Takeoff
Normal Takeoff
Short Field Takeoff4-18
Enroute Climb
Cruise
Descent
Before Landing
Landing
Normal Landing4-21
Short Field Landing4-21
Balked Landing
After Landing
Securing Airplane 4-22

(Continued Next Page)

172SPHBUS-00

4-1

CESSNA MODEL 172S NAV III GFC 700 AFCS

TABLE OF CONTENTS (Continued)

Page

AMPLIFIED NORMAL PROCEDURES	4-23
Preflight Inspection	4-23
Starting Engine	4-25
Becommended Starter Duty Cycle	4-26
Leaning For Ground Operations	4-26
Fuel Vapor Procedures	4-27
Taviing	4-28
Before Takeoff	4-30
Warm In	4-30
Magnoto Chack	4-30
Alternator Chack	4-30
	4-30
Londing Lights	4-31
	4-01
	4-01
	4-31
	4-32
	4-32
	4-33
Cruise	4-34
Leaning Using Exhaust Gas Temperature (EGT)	4-36
Fuel Savings Procedures For Flight Training Operations	4-39
Stalls	4-40
Spins	4-40
Landing	4-43
Normal Landing	4-43
Short Field Landing	4-43
Crosswind Landing	4-44
Balked Landing	4-44
Cold Weather Operations	4-45
Starting	4-46
Winterization Kit	4-47
Hot Weather Operations	4-48
Noise Characteristics	4-48

SECTION 4 NORMAL PROCEDURES

INTRODUCTION

Section 4 provides procedures and amplified instructions for normal operations using standard equipment. Normal procedures associated with optional systems can be found in Section 9, Supplements.

AIRSPEEDS FOR NORMAL OPERATION

Unless otherwise noted, the following speeds are based on a maximum weight of 2550 pounds and may be used for any lesser weight.

TAKEOFF

Normal Climb		. 75 - 85 KIAS
Short Field Takeoff	Flaps 10°, Speed at 50 Feet	56 KIAS

ENROUTE CLIMB, FLAPS UP

Normal, Sea Level
Normal, 10,000 Feet
Best Rate of Climb, Sea Level74 KIAS
Best Rate of Climb, 10,000 Feet
Best Angle of Climb, Sea Level
Best Angle of Climb, 10,000 Feet

LANDING APPROACH

Normal Approach, Flaps UP	. 65 - 75 KIAS
Normal Approach, Flaps FULL	. 60 - 70 KIAS
Short Field Approach, Flaps FULL	61 KIAS

BALKED LANDING

Maximum Power,	Flaps 20°		0 KIAS
----------------	-----------	--	--------

AIR	TURBULENT	RECOMMENDED N SPEED	MAXIMUM PENETRATI
.105 KIAS		 S	2550 POUN
98 KIAS		 S	2200 POUN
90 KIAS		S	1900 POUN

MAXIMUM DEMONSTRATED CROSSWIND VELOCITY

	Takeoff or Landing.	15 KNOTS
--	---------------------	----------

U.S.

Rane

CESSNA MODEL 172S NAV III GFC 700 AFCS

NORMAL PROCEDURES PREFLIGHT INSPECTION



0585T1019

NOTE

Visually check airplane for general condition during walkaround inspection. Airplane should be parked in a normal ground attitude (refer to Figure 1-1) to make sure that fuel drain valves allow for accurate sampling. Use of the refueling steps and assist handles will simplify access to the upper wing surfaces for visual checks and refueling operations. In cold weather. remove even small accumulations of frost, ice or snow from wing, tail and control surfaces. Also, make sure that control surfaces contain no internal accumulations of ice or debris. Prior to flight, check that pitot heater is warm to touch within 30 seconds with battery and pitot heat switches on. If a night flight is planned, check operation of all lights, and make sure a flashlight is available.

172SPHBUS-00

PREFLIGHT INSPECTION (Continued)

1 CABIN

- 1. Pitot Tube Cover REMOVE (check for pitot blockage)
- 2. Pilot's Operating Handbook ACCESSIBLE TO PILOT
- 3. Garmin G1000 Cockpit Reference Guide ACCESSIBLE TO PILOT
- 4. Airplane Weight and Balance CHECKED
- 5. Parking Brake SET
- 6. Control Wheel Lock REMOVE

WARNING

WHEN THE MASTER SWITCH IS ON, USING AN EXTERNAL POWER SOURCE, OR MANUALLY ROTATING THE PROPELLER, TREAT THE PROPELLER AS IF THE MAGNETOS SWITCH WERE ON. DO NOT STAND, NOR ALLOW ANYONE ELSE TO STAND, WITHIN THE ARC OF THE PROPELLER SINCE A LOOSE OR BROKEN WIRE, OR A COMPONENT MALFUNCTION, COULD CAUSE THE ENGINE TO START.

- 7. MAGNETOS Switch OFF
- 8. AVIONICS Switch (BUS 1 and BUS 2) OFF
- 9. MASTER Switch (ALT and BAT) ON
- 10. Primary Flight Display (PFD) CHECK (verify PFD is ON)
- 11. FUEL QTY (L and R) CHECK
- 12. LOW FUEL L and LOW FUEL R Annunciators CHECK (verify annunciators are not shown on PFD)
- 13. OIL PRESSURE Annunciator CHECK (verify annunciator is shown)
- 14. LOW VACUUM Annunciator CHECK (verify annunciator is shown)
- 15. AVIONICS Switch (BUS 1) ON
- 16. Forward Avionics Fan CHECK (verify fan is heard)

(Continued Next Page)

172SPHBUS-00

U.S.

PREFLIGHT INSPECTION (Continued)

① CABIN (Continued)

- 17. AVIONICS Switch (BUS 1) OFF
- 18. AVIONICS Switch (BUS 2) ON
- 19. Aft Avionics Fan CHECK (verify fan is heard)
- 20. AVIONICS Switch (BUS 2) OFF
- 21. PITOT HEAT Switch ON (carefully check that pitot tube is warm to the touch within 30 seconds)
- 22. PITOT HEAT Switch OFF
- 23. LOW VOLTS Annunciator CHECK (verify annunciator is shown)
- 24. MASTER Switch (ALT and BAT) OFF
- 25. Elevator Trim Control TAKEOFF position
- 26. FUEL SELECTOR Valve BOTH
- 27. ALT STATIC AIR Valve OFF (push full in)
- 28. Fire Extinguisher CHECK (verify gage pointer in green arc)

② EMPENNAGE

- 1. Baggage Compartment Door CHECK (lock with key)
- 2. Rudder Gust Lock (if installed) REMOVE
- 3. Tail Tiedown DISCONNECT
- 4. Control Surfaces CHECK (freedom of movement and security)
- 5. Elevator Trim Tab CHECK (security)
- 6. Antennas CHECK (security of attachment and general condition)

③ RIGHT WING Trailing Edge

- 1. Flap CHECK (security and condition)
- 2. Aileron CHECK (freedom of movement and security)

PREFLIGHT INSPECTION (Continued)

④ RIGHT WING

- 1. Wing Tiedown DISCONNECT
- 2. Main Wheel Tire CHECK (proper inflation and general condition (weather checks, tread depth and wear, etc.))
- 3. Fuel Tank Sump Quick Drain Valves DRAIN Drain at least a cupful of fuel (using sampler cup) from each sump location to check for water, sediment, and proper fuel grade before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from all fuel drain points until all contamination has been removed. If contaminants are still present, refer to WARNING below and do not fly airplane.

NOTE

Collect all sampled fuel in a safe container. Dispose of the sampled fuel so that it does not cause a nuisance, hazard or damage to the environment.

WARNING

IF, AFTER REPEATED SAMPLING, EVIDENCE OF CONTAMINATION STILL EXISTS, THE AIRPLANE SHOULD NOT BE FLOWN. TANKS SHOULD BE DRAINED AND SYSTEM PURGED BY QUALIFIED MAINTENANCE PERSONNEL. ALL EVIDENCE OF CONTAMINATION MUST BE REMOVED BEFORE FURTHER FLIGHT.

4. Fuel Quantity - CHECK VISUALLY (for desired level)

5. Fuel Filler Cap - SECURE and VENT CLEAR

PREFLIGHT INSPECTION (Continued)

S NOSE

1. Fuel Strainer Quick Drain Valve (located on bottom of fuselage) - DRAIN

Drain at least a cupful of fuel (using sampler cup) from valve to check for water, sediment, and proper fuel grade before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from **all** fuel drain points, including the fuel reservoir and fuel selector, until **all** contamination has been removed. If contaminants are still present, refer to WARNING below and do not fly the airplane.

NOTE

Collect all sampled fuel in a safe container. Dispose of the sampled fuel so that it does not cause a nuisance, hazard, or damage to the environment.

WARNING

IF, AFTER REPEATED SAMPLING, EVIDENCE OF CONTAMINATION STILL EXISTS, THE AIRPLANE SHOULD NOT BE FLOWN. TANKS SHOULD BE DRAINED AND SYSTEM PURGED BY QUALIFIED MAINTENANCE PERSONNEL. ALL EVIDENCE OF CONTAMINATION MUST BE REMOVED BEFORE FURTHER FLIGHT.

- 2. Engine Oil Dipstick/Filler Cap:
 - a. Oil level CHECK
 - b. Dipstick/filler cap SECURE

NOTE

Do not operate with less than 5 quarts. Fill to 8 quarts for extended flight.

PREFLIGHT INSPECTION (Continued)

- **S NOSE** (Continued)
 - 3. Engine Cooling Air Inlets CHECK (clear of obstructions)
 - 4. Propeller and Spinner CHECK (for nicks and security)
 - 5. Air Filter CHECK (for restrictions by dust or other foreign matter)
 - Nosewheel Strut and Tire CHECK (proper inflation of strut and general condition of tire (weather checks, tread depth and wear, etc.))
 - 7. Static Source Opening (left side of fuselage) CHECK (verify opening is clear)

6 LEFT WING Leading Edge

- 1. Fuel Tank Vent Opening CHECK (blockage)
- 2. Stall Warning Opening CHECK (blockage)

NOTE

To check the system, place a clean handkerchief over the vent opening and apply suction; a sound from the warning horn will confirm system operation.

3. Landing/Taxi Light(s) - CHECK (condition and cleanliness of cover)

PREFLIGHT INSPECTION (Continued)

② LEFT WING

- 1. Wing Tiedown DISCONNECT
- 2. Fuel Quantity CHECK VISUALLY (for desired level)
- 3. Fuel Filler Cap SECURE and VENT CLEAR
- 4. Fuel Tank Sump Quick Drain Valves DRAIN

Drain at least a cupful of fuel (using sampler cup) from each sump location to check for water, sediment, and proper fuel grade before each flight and after each refueling. If water is observed, take further samples until clear and then gently rock wings and lower tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from **all** fuel drain points until **all** contamination has been removed. If contaminants are still present, refer to WARNING below and do not fly airplane.

NOTE

Collect all sampled fuel in a safe container. Dispose of the sampled fuel so that it does not cause a nuisance, hazard, or damage to the environment.

WARNING

IF, AFTER REPEATED SAMPLING, EVIDENCE OF CONTAMINATION STILL EXISTS, THE AIRPLANE SHOULD NOT BE FLOWN. TANKS SHOULD BE DRAINED AND SYSTEM PURGED BY QUALIFIED MAINTENANCE PERSONNEL. ALL EVIDENCE OF CONTAMINATION MUST BE REMOVED BEFORE FURTHER FLIGHT.

5. Main Wheel Tire - CHECK (proper inflation and general condition (weather checks, tread depth and wear, etc.))

8 LEFT WING Trailing Edge

- 1. Aileron CHECK (freedom of movement and security)
- 2. Flap CHECK (security and condition)

BEFORE STARTING ENGINE

- 1. Preflight Inspection COMPLETE
- 2. Passenger Briefing COMPLETE
- 3. Seats and Seat Belts ADJUST and LOCK (verify inertia reel locking)
- 4. Brakes TEST and SET
- 5. Circuit Breakers CHECK IN
- 6. Electrical Equipment OFF
- 7. AVIONICS Switch (BUS 1 and BUS 2) OFF

CAUTION

THE AVIONICS SWITCH (BUS 1 AND BUS 2) MUST BE OFF DURING ENGINE START TO PREVENT POSSIBLE DAMAGE TO AVIONICS.

- 8. FUEL SELECTOR Valve BOTH
- 9. FUEL SHUTOFF Valve ON (push full in)

STARTING ENGINE (With Battery)

- 1. Throttle Control OPEN 1/4 INCH
- 2. Mixture Control IDLE CUTOFF (pull full out)
- 3. STBY BATT Switch:
 - a. TEST (hold for 10 seconds, verify that green TEST lamp does not go off)
 - b. ARM (verify that PFD comes on)
- 4. Engine Indicating System CHECK PARAMETERS (verify no red X's through ENGINE page indicators)
- 5. BUS E Volts CHECK (verify 24 VOLTS minimum shown)
- 6. M BUS Volts CHECK (verify 1.5 VOLTS or less shown)
- 7. BATT S Amps CHECK (verify discharge shown (negative))
- 8. STBY BATT Annunciator CHECK (verify annunciator is shown)
- 9. Propeller Area CLEAR (verify that all people and equipment are at a safe distance from the propeller)
- 10. MASTER Switch (ALT and BAT) ON
- 11. BEACON Light Switch ON

NOTE

If engine is warm, omit priming procedure steps 12 thru 14 below.

- 12. FUEL PUMP Switch ON
- Mixture Control SET to FULL RICH (full forward) until stable fuel flow is indicated (approximately 3 to 5 seconds), then set to IDLE CUTOFF (full aft) position.
- 14. FUEL PUMP Switch OFF
- 15. MAGNETOS Switch START (release when engine starts)
- 16. Mixture Control ADVANCE SMOOTHLY TO RICH (when engine starts)

NOTE

If the engine is primed too much (flooded), place the mixture control in the IDLE CUTOFF position, open the throttle control 1/2 to full, and engage the starter motor (START). When the engine starts, advance the mixture control to the FULL RICH position and retard the throttle control promptly.

STARTING ENGINE (With Battery) (Continued)

- 17. Oil Pressure CHECK (verify that oil pressure increases into the GREEN BAND range in 30 to 60 seconds)
- AMPS (M BATT and BATT S) CHECK (verify charge shown (positive))
- 19. LOW VOLTS Annunciator CHECK (verify annunciator is not shown)
- 20. NAV Light Switch ON as required
- 21. AVIONICS Switch (BUS 1 and BUS 2) ON

STARTING ENGINE (With External Power)

- 1. Throttle Control OPEN 1/4 INCH
- 2. Mixture Control IDLE CUTOFF (pull full out)
- 3. STBY BATT Switch:

I

- a. TEST (hold for 10 seconds, verify green TEST lamp does not go off)
 - b. ARM (verify that PFD comes on)
- Engine Indication System CHECK PARAMETERS (verify no red X's through ENGINE page indicators)
- 5. BUS E Volts CHECK (verify 24 VOLTS minimum shown)
- 6. M BUS Volts CHECK (verify 1.5 VOLTS or less shown)
- 7. BATT S Amps CHECK (verify discharge shown (negative))
- 8. STBY BATT Annunciator CHECK (verify annunciator is shown)
- 9. AVIONICS Switch (BUS 1 and BUS 2) OFF
- 10. MASTER Switch (ALT and BAT) OFF
- 11. Propeller Area CLEAR (verify that all people and equipment are at a safe distance from the propeller)
- 12. External Power CONNECT (to ground power receptacle)
- 13. MASTER Switch (ALT and BAT) ON
- 14. BEACON Light Switch ON
- 15. M BUS VOLTS CHECK (verify that approximately 28 VOLTS is shown)

NOTE

If engine is warm, omit priming procedure steps 16 thru 18 below.

16. FUEL PUMP Switch - ON

(Continued Next Page)

172SPHBUS-01

STARTING ENGINE (With External Power) (Continued)

- 17. Mixture Control SET to FULL RICH (full forward) until stable fuel flow is indicated (approximately 3 to 5 seconds), then set to IDLE CUTOFF (full aft) position.
- 18. FUEL PUMP Switch OFF
- 19. MAGNETOS Switch START (release when engine starts)
- 20. Mixture Control ADVANCE SMOOTHLY TO RICH (when engine starts)

NOTE

If the engine is primed too much (flooded), place the mixture control in the IDLE CUTOFF position, open the throttle control 1/2 to full, and engage the starter motor (START). When the engine starts, advance the mixture control to the FULL RICH position and retard the throttle control promptly.

- 21. Oil Pressure CHECK (verify oil pressure increases into the GREEN BAND range in 30 to 60 seconds)
- 22. Power REDUCE TO IDLE
- 23. External Power DISCONNECT FROM GROUND POWER (latch external power receptacle door)
- 24. Power INCREASE (to approximately 1500 RPM for several minutes to charge battery)
- 25. AMPS (M BATT and BATT S) CHECK (verify charge shown (positive))
- 26. LOW VOLTS Annunciator CHECK (verify annunciator is not shown)
- 27. Internal Power CHECK
 - a. MASTER Switch (ALT) OFF
 - b. TAXI and LAND Light Switches ON
 - c. Throttle Control REDUCE TO IDLE
 - d. MASTER Switch (ALT and BAT) ON
 - e. Throttle Control INCREASE (to approximately 1500 RPM)
 - f. M BATT Ammeter CHECK (verify battery charging, amps positive)
 - g. LOW VOLTS Annunciator CHECK (verify annunciator is not shown)

SECTION 4 NORMAL PROCEDURES

STARTING ENGINE (With External Power) (Continued)

WARNING

IF M BATT AMMETER DOES NOT SHOW POSITIVE CHARGE (+ AMPS), OR LOW VOLTS ANNUNCIATOR DOES NOT GO OFF, REMOVE THE BATTERY FROM THE AIRPLANE AND SERVICE OR REPLACE THE BATTERY BEFORE FLIGHT.

28. NAV Light Switch - ON (as required)29. AVIONICS Switch (BUS 1 and BUS 2) - ON

BEFORE TAKEOFF

- 1. Parking Brake SET
- 2. Pilot and Passenger Seat Backs MOST UPRIGHT POSITION
- 3. Seats and Seat Belts CHECK SECURE
- Cabin Doors CLOSED and LOCKED
- 5. Flight Controls FREE and CORRECT
- Flight Instruments (PFD) CHECK (no red X's)
- 7. Altimeters:
 - a. PFD (BARO) SET
 - b. Standby Altimeter SET
- 8. ALT SEL SET
- 9. Standby Flight Instruments CHECK
- 10. Fuel Quantity CHECK (verify level is correct)

NOTE

Flight is not recommended when both fuel quantity indicators are in the yellow band range.

- 11. Mixture Control RICH
- 12. FUEL SELECTOR Valve SET BOTH
- 13. Autopilot ENGAGE (if installed) (push AP button on either PFD or MFD bezel)
- 14. Flight Controls CHECK (verify autopilot can be overpowered in both pitch and roll axes)

BEFORE TAKEOFF (Continued)

- A/P TRIM DISC Button PRESS (if installed) (verify autopilot disengages and aural alert is heard)
- 16. Flight Director OFF (if installed) (push FD button on either PFD or MFD bezel)
- 17. Elevator Trim Control SET FOR TAKEOFF
- 18. Throttle Control 1800 RPM
 - MAGNETOS Switch CHECK (RPM drop should not exceed 150 RPM on either magneto or 50 RPM differential between magnetos)
 - b. VAC Indicator CHECK
 - c. Engine Indicators CHECK
 - d. Ammeters and Voltmeters CHECK
- 19. Annunciators CHECK (verify no annunciators are shown)
- 20. Throttle Control CHECK IDLE
- 21. Throttle Control 1000 RPM or LESS
- 22. Throttle Control Friction Lock ADJUST
- 23. COM Frequency(s) SET
- 24. NAV Frequency(s) SET
- 25. FMS/GPS Flight Plan AS DESIRED

NOTE

Check GPS availability on AUX-GPS STATUS page. No annunciation is provided for loss of GPS2.

26. XPDR - SET

SECTION 4 NORMAL PROCEDURES

BEFORE TAKEOFF (Continued)

27. CDI Softkey - SELECT NAV SOURCE

CAUTION

THE G1000 HSI SHOWS A COURSE DEVIATION INDICATOR FOR THE SELECTED GPS, NAV 1 OR NAV 2 NAVIGATION SOURCE. THE G1000 HSI DOES NOT PROVIDE A WARNING FLAG WHEN A VALID NAVIGATION SIGNAL IS NOT BEING SUPPLIED TO THE INDICATOR. WHEN A VALID NAVIGATION SIGNAL IS NOT BEING SUPPLIED, THE COURSE DEVIATION BAR (D-BAR) PART OF THE INDICATOR IS NOT SHOWN ON THE HSI COMPASS CARD. THE MISSING D-BAR IS CONSIDERED TO BE THE WARNING FLAG.

WARNING

WHEN THE AUTOPILOT IS ENGAGED IN NAV, APR OR BC OPERATING MODES, IF THE HSI NAVIGATION SOURCE IS CHANGED MANUALLY, USING THE CDI SOFTKEY, THE CHANGE WILL INTERRUPT THE NAVIGATION SIGNAL TO THE AUTOPILOT AND WILL CAUSE THE AUTOPILOT TO REVERT TO ROL MODE OPERATION. NO AURAL ALERT WILL BE PROVIDED. IN ROL MODE, THE AUTOPILOT WILL ONLY KEEP THE WINGS LEVEL AND WILL NOT CORRECT THE AIRPLANE HEADING OR COURSE. SET THE HDG BUG TO THE CORRECT HEADING AND SELECT THE CORRECT NAVIGATION SOURCE ON THE HSI, USING THE CDI SOFTKEY, BEFORE ENGAGING THE AUTOPILOT IN ANY OTHER OPERATING MODE.

28. CABIN PWR 12V Switch - OFF

- 29. Wing Flaps UP 10° (10° preferred)
- 30. Cabin Windows CLOSED and LOCKED
- 31. STROBE Light Switch ON
- 32. Brakes RELEASE

172SPHBUS-00

4-17

CESSNA MODEL 172S NAV III GFC 700 AFCS

TAKEOFF

NORMAL TAKEOFF

- 1. Wing Flaps UP 10° (10° preferred)
- 2. Throttle Control FULL (push full in)
- 3. Mixture Control RICH (above 3000 feet pressure altitude, lean for maximum RPM)
- 4. Elevator Control LIFT NOSEWHEEL AT 55 KIAS
- 5. Climb Airspeed 70 80 KIAS
- 6. Wing Flaps RETRACT (at safe altitude)

SHORT FIELD TAKEOFF

- 1. Wing Flaps 10°
- 2. Brakes APPLY
- 3. Throttle Control FULL (push full in)
- Mixture Control RICH (above 3000 feet pressure altitude, lean for maximum RPM)
- 5. Brakes RELEASE
- 6. Elevator Control SLIGHTLY TAIL LOW

U.S.

- 7. Climb Airspeed 56 KIAS (until all obstacles are cleared)
- 8. Wing Flaps RETRACT SLOWLY (when airspeed is more than 60 KIAS)

172SPHBUS-00

ENROUTE CLIMB

- 1. Airspeed 70 85 KIAS
- 2. Throttle Control FULL (push full in)
- 3. Mixture Control RICH (above 3000 feet pressure altitude, lean for maximum RPM)

NOTE

For maximum performance climb speeds, refer to Section 5, Figure 5-6, Maximum Rate of Climb at 2550 Pounds.

CRUISE

- 1. Power 2100 2700 RPM (no more than 75% power recommended)
- 2. Elevator Trim Control ADJUST
- 3. Mixture Control LEAN (for desired performance or economy)
- FMS/GPS REVIEW and BRIEF (OBS/SUSP softkey operation for holding pattern procedure (IFR))

CESSNA MODEL 172S NAV III GFC 700 AFCS

DESCENT

- 1. Power AS DESIRED
- 2. Mixture ADJUST (if necessary to make engine run smoothly)
- 3. Altimeters:
 - a. PFD (BARO) SET
 - b. Standby Altimeter SET
- 4. ALT SEL SET
- 5. CDI Softkey SELECT NAV SOURCE
- 6. FMS/GPS REVIEW and BRIEF (OBS/SUSP softkey operation for holding pattern procedure (IFR))

CAUTION

THE G1000 HSI SHOWS A COURSE DEVIATION INDICATOR FOR THE SELECTED GPS, NAV 1 OR NAV 2 NAVIGATION SOURCE. THE G1000 HSI DOES NOT PROVIDE A WARNING FLAG WHEN A VALID NAVIGATION SIGNAL IS NOT BEING SUPPLIED TO THE INDICATOR. WHEN A VALID NAVIGATION SIGNAL IS NOT BEING SUPPLIED, THE COURSE DEVIATION BAR (D-BAR) PART OF THE INDICATOR IS NOT SHOWN ON THE HSI COMPASS CARD. THE MISSING D-BAR IS CONSIDERED TO BE THE WARNING FLAG.

WARNING

WHEN THE AUTOPILOT IS ENGAGED IN NAV, APR OR BC OPERATING MODES, IF THE HSI NAVIGATION SOURCE IS CHANGED MANUALLY, USING THE CDI SOFTKEY, THE CHANGE WILL INTERRUPT THE NAVIGATION SIGNAL TO THE AUTOPILOT AND WILL CAUSE THE AUTOPILOT TO REVERT TO ROL MODE OPERATION. NO AURAL ALERT WILL BE PROVIDED. IN ROL MODE, THE AUTOPILOT WILL ONLY KEEP THE WINGS LEVEL AND WILL NOT CORRECT THE AIRPLANE HEADING OR COURSE. SET THE HDG BUG TO THE CORRECT HEADING AND SELECT THE CORRECT NAVIGATION SOURCE ON THE HSI. USING THE CDI SOFTKEY, BEFORE ENGAGING THE AUTOPILOT IN ANY OTHER OPERATING MODE.

8. Wing Flaps - AS DESIRED (UP - 10° below 110 KIAS) (10° - FULL below 85 KIAS)

4-20

^{7.} FUEL SELECTOR Valve - BOTH

SECTION 4 NORMAL PROCEDURES

BEFORE LANDING

- 1. Pilot and Passenger Seat Backs MOST UPRIGHT POSITION
- 2. Seats and Seat Belts SECURED and LOCKED
- 3. FUEL SELECTOR Valve BOTH
- 4. Mixture Control RICH
- 5. LAND and TAXI Light Switches ON
- 6. Autopilot OFF (if installed)
- 7. CABIN PWR 12V Switch OFF

LANDING

NORMAL LANDING

- 1. Airspeed 65 75 KIAS (Flaps UP)
- 2. Wing Flaps AS DESIRED (UP 10° below 110 KIAS)

(10° - FULL below 85 KIAS)

- 3. Airspeed 60 70 KIAS (Flaps FULL)
- 4. Elevator Trim Control ADJUST
- 5. Touchdown MAIN WHEELS FIRST
- 6. Landing Roll LOWER NOSEWHEEL GENTLY
- 7. Braking MINIMUM REQUIRED

SHORT FIELD LANDING

- 1. Airspeed 65 75 KIAS (Flaps UP)
- 2. Wing Flaps FULL
- 3. Airspeed 61 KIAS (until flare)
- 4. Elevator Trim Control ADJUST
- 5. Power REDUCE TO IDLE (as obstacle is cleared)
- 6. Touchdown MAIN WHEELS FIRST
- 7. Brakes APPLY HEAVILY
- 8. Wing Flaps UP

(Continued Next Page)

U.S.

LANDING (Continued)

BALKED LANDING

- 1. Throttle Control FULL (push full in)
- 2. Wing Flaps RETRACT to 20°
- 3. Climb Speed 60 KIAS
- Wing Flaps 10° (as obstacle is cleared), then UP (after reaching a safe altitude and 65 KIAS)

AFTER LANDING

1. Wing Flaps - UP

SECURING AIRPLANE

- 1. Parking Brake SET
- 2. Throttle Control IDLE (pull full out)
- 3. Electrical Equipment OFF
- 4. AVIONICS Switch (BUS 1 and BUS 2) OFF
- 5. Mixture Control IDLE CUTOFF (pull full out)
- 6. MAGNETOS Switch OFF
- 7. MASTER Switch (ALT and BAT) OFF
- 8. STBY BATT Switch OFF
- 9. Control Lock INSTALL
- 10. FUEL SELECTOR Valve LEFT or RIGHT (to prevent crossfeeding between tanks)

AMPLIFIED NORMAL PROCEDURES

PREFLIGHT INSPECTION

The preflight inspection, described in Figure 4-1 and adjacent checklist, is required prior to each flight. If the airplane has been in extended storage, has had recent major maintenance, or has been operated from rough runways, a more extensive exterior inspection is recommended.

Before every flight, check the condition of main and nose landing gear tires. Keep tires inflated to the pressure specified in Section 8, Airplane Handling, Service And Maintenance. Examine tire sidewalls for patterns of shallow cracks called weather checks. These cracks are evidence of tire deterioration caused by age, improper storage, or prolonged exposure to weather. Check the tread of the tire for depth, wear, and cuts. Replace the tire if fibers are visible.

After major maintenance has been performed, the flight and trim tab controls should be double checked for free and correct movement and security. The security of all inspection plates on the airplane should be checked following periodic inspections. If the airplane has been waxed or polished, check the external static pressure source hole for stoppage.

If the airplane has been kept in a crowded hangar, it should be checked for dents and scratches on wings, fuselage, and tail surfaces, damage to navigation, strobe lights, and avionics antennas. Check for damage to the nosewheel steering system, the result of exceeding nosewheel turning limits while towing.

(Continued Next Page)

172SPHBUS-00

PREFLIGHT INSPECTION (Continued)

Outside storage for long periods may result in dust and dirt accumulation on the induction air filter, obstructions in airspeed system lines, water contaminants in fuel tanks, and insect/bird/rodent nests in any opening. If any water is detected in the fuel system, the fuel tank sump quick drain valves, fuel reservoir quick drain valve, and fuel strainer quick drain valve should all be thoroughly drained again. The wings should then be gently rocked and the tail lowered to the ground to move any further contaminants to the sampling points. Repeated samples should then be taken at **all** quick drain points until **all** contamination has been removed. If, after repeated sampling, evidence of contamination still exists, the fuel tanks should be completely drained and the fuel system cleaned.

If the airplane has been stored outside in windy or gusty areas, or tied down adjacent to taxiing airplanes, special attention should be paid to control surface stops, hinges, and brackets to detect the presence of potential wind damage.

If the airplane has been operated from muddy fields or in snow or slush, check the main and nose gear wheel fairings for obstructions and cleanliness. Operation from a gravel or cinder field will require extra attention to propeller tips and abrasion on leading edges of the horizontal tail. Stone damage to the propeller can seriously reduce the fatigue life of the blades.

Airplanes that are operated from rough fields, especially at high altitudes, are subjected to abnormal landing gear abuse. Frequently check all components of the landing gear, shock strut, tires, and brakes. If the shock strut is insufficiently extended, undue landing and taxi loads will be subjected to the airplane structure.

To prevent loss of fuel in flight, make sure the fuel tank filler caps are tightly sealed after any fuel system check or servicing. Fuel system vents should also be inspected for obstructions, ice or water, especially after exposure to cold, wet weather.

STARTING ENGINE

In cooler weather, the engine compartment temperature drops off rapidly following engine shutdown and the injector nozzle lines remain nearly full of fuel.

In warmer weather, engine compartment temperatures may increase rapidly following engine shutdown, and fuel in the lines will vaporize and escape into the intake manifold. Hot weather starting procedures depend considerably on how soon the next engine start is attempted. Within the first 20 to 30 minutes after shutdown, the fuel manifold is adequately primed and the empty injector nozzle lines will fill before the engine dies. However, after approximately 30 minutes, the vaporized fuel in the manifold will have nearly dissipated and some slight priming could be required to refill the nozzle lines and keep the engine running after the initial start. Starting a hot engine is facilitated by advancing the mixture control promptly to 1/3 open when the engine starts, and then smoothly to full rich as power develops.

If the engine does not continue to run, set the FUEL PUMP switch to the ON position temporarily and adjust the throttle and/or mixture as necessary to keep the engine running. In the event of over priming or flooding, set the FUEL PUMP switch to OFF, open the throttle from 1/2 to full open, and continue cranking with the mixture in the IDLE CUTOFF position (pull full out). When the engine fires, smoothly advance the mixture control to full rich and retard the throttle to desired idle speed.

If the engine is under primed (most likely in cold weather with a cold engine), it will not start at all, and additional priming will be necessary.

After starting, if the oil pressure gage does not begin to show pressure within 30 seconds in warmer temperatures and approximately one minute in very cold weather, stop the engine and find the cause before continued operation. Lack of oil pressure can cause serious engine damage.

NOTE

Additional details concerning cold weather starting and operation may be found under COLD WEATHER OPERATION paragraphs in this section.

(Continued Next Page)

172SPHBUS-00

STARTING ENGINE (Continued)

RECOMMENDED STARTER DUTY CYCLE

Operate the starter motor for 10 seconds followed by a 20 second cool down period. This cycle can be repeated two additional times, followed by a ten minute cool down period before resuming cranking. After cool down, operate the starter motor again, three cycles of 10 seconds followed by 20 seconds of cool down. If the engine still does not start, try to find the cause.

LEANING FOR GROUND OPERATIONS

For all ground operations, after starting the engine and when the engine is running smoothly:

- 1. Set the throttle control to 1200 RPM.
- 2. Lean the mixture for maximum RPM.
- 3. Set the throttle control to an RPM appropriate for ground operations (800 to 1000 RPM recommended).

NOTE

If ground operation will be required after the BEFORE TAKEOFF checklist is completed, lean the mixture again (as described above) until ready for the TAKEOFF checklist.

FUEL VAPOR PROCEDURES

The engine fuel system can cause fuel vapor formation on the ground during warm weather. This will generally occur when the outside ambient air temperature is above 80°F. Vapor formation may increase when the engine fuel flows are lower at idle and taxi engine speeds. The following procedures are recommended when engine idle speed and fuel flow fluctuations show that fuel vapor may be present:

- 1. With the mixture full rich, set the throttle at 1800 RPM to 2000 RPM. Maintain this power setting for 1 to 2 minutes or until smooth engine operation returns.
- Retard the throttle to the idle stop to verify normal engine operation.
 - 3. Advance the throttle to 1200 RPM and lean the mixture as described under FUEL SAVINGS PROCEDURES FOR FLIGHT TRAINING OPERATIONS.
 - 4. In addition to the above procedures, the auxiliary fuel pump may be turned ON with the mixture adjusted as required to aid vapor suppression during ground operations. The auxiliary fuel pump should be turned OFF prior to takeoff.
 - 5. Just prior to TAKEOFF, apply full throttle for approximately 10 seconds to verify smooth engine operation for takeoff.

NOTE

When the engine is operated above 1800 RPM, the resulting increased fuel flow results in lower fuel temperatures throughout the engine fuel system. This increased flow purges the fuel vapor and the cooler fuel minimizes vapor formation.

In addition to the previous procedures, the sections below should be reviewed, and where applicable, adhered to:

- Section 3 -Take note of the excessive fuel vapor procedures in both the checklist and the amplified procedures sections.
- Section 4 -Take note of the hot weather operational notes and procedures in both the checklist and the amplified procedures sections.

172SPHBUS-01

TAXIING

When taxiing, it is important that speed and use of brakes be held to a minimum and that all controls be utilized (refer to Figure 4-2, Taxiing Diagram) to maintain directional control and balance.

Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips.

NOTE

The LOW VOLTS annunciator may come on when the engine is operated at low RPM with a high load on the electrical system. If this is the case, the LOW VOLTS annunciator will go off when the engine is run at higher RPM to provide greater alternator system output. Verify that the M BATT AMPS indication shows positive (charging) current at the higher RPM.





NOTE

Strong quartering tail winds require caution. Avoid sudden bursts of the throttle and sharp braking when the airplane is in this attitude. Use the steerable nosewheel and rudder to maintain direction.

Figure 4-2

BEFORE TAKEOFF

WARM UP

If the engine idles, with the throttle against the idle stop, (approximately 600 RPM) and accelerates smoothly, the engine is warm enough for takeoff. Since the engine is closely cowled for efficient in-flight engine cooling, the airplane should be pointed into the wind to avoid overheating during prolonged engine operation on the ground. Long periods of idling may cause fouled spark plugs.

MAGNETO CHECK

The magneto check must be made at 1800 RPM. Turn the MAGNETOS switch from the BOTH position to the R position. Note the new RPM, then turn the MAGNETOS switch back to the BOTH position to clear the spark plugs. Turn the MAGNETOS switch to the L position, note the new RPM, then turn the switch back to the BOTH position. RPM decrease should not be more than 150 RPM on either magneto or be greater than 50 RPM differential between magnetos. If there is a doubt concerning operation of the ignition system, RPM checks at higher engine speeds will usually confirm whether a deficiency exists.

No RPM drop may indicate a faulty ground to one magneto or magneto timing set in advance of the angle specified.

ALTERNATOR CHECK

Make sure that both the alternator and alternator control unit are operating properly before night or instrument flight, or flights where electrical power is essential. Check the electrical system during the MAGNETO check (1800 RPM) by setting all electrical equipment required for the flight to the ON position. When the alternator and alternator control unit are both operating properly, the ammeters will show zero or positive current (amps), the voltmeters should show between 27 to 29 volts, and no electrical system annunciations will appear. Reduce the electrical load before reducing engine speed so the battery will not discharge while the engine is at idle.

(Continued Next Page)

172SPHBUS-01

4-30

BEFORE TAKEOFF (Continued)

ELEVATOR TRIM

The elevator trim tab is in the takeoff position when the trim pointer is aligned with the index mark on the pedestal cover. Adjust the trim wheel during flight as necessary to make control wheel forces more neutral.

LANDING LIGHTS

It is recommended that only the taxi light be used to enhance the visibility of the airplane in the traffic pattern or enroute. This will extend the service life of the landing light.

TAKEOFF

POWER CHECK

It is important to check full throttle engine operation early in the takeoff roll. Any sign of rough engine operation or sluggish engine acceleration is good cause for discontinuing the takeoff. If this occurs, you are justified in making a thorough full throttle static run-up before another takeoff is attempted. The engine should run smoothly and turn approximately 2300 - 2400 RPM with the mixture leaned to provide maximum RPM.

Full throttle run-ups over loose gravel are especially harmful to propeller tips. When takeoffs must be made over a gravel surface, advance the throttle slowly. This allows the airplane to start rolling before high RPM is developed, and the gravel will be blown behind the propeller rather than pulled into it.

Prior to takeoff from fields above 3000 feet pressure altitude, the mixture should be leaned to give maximum RPM at full throttle, with the airplane not moving.

After full throttle is applied, adjust the throttle friction lock clockwise to prevent the throttle from moving back from a maximum power position. Similar friction lock adjustments should be made as required in other flight conditions to hold the throttle setting.

(Continued Next Page)

172SPHBUS-01

U.S.

4-31

TAKEOFF (Continued)

WING FLAP SETTINGS

Normal takeoffs use wing flaps UP - 10°. Using 10° wing flaps reduces the ground roll and total distance over an obstacle by approximately 10 percent. **Flap deflections greater than 10° are not approved for takeoff.** If 10° wing flaps are used for takeoff, the flaps should stay at 10° until all obstacles are cleared and a safe flap retraction speed of 60 KIAS is reached. For a short field, 10° wing flaps and an obstacle clearance speed of 56 KIAS should be used.

Soft or rough field takeoffs are performed with 10° flaps by lifting the airplane off the ground as soon as practical in a slightly tail low attitude. If no obstacles are ahead, the airplane should be leveled off immediately to accelerate to a higher climb speed. When departing a soft field with an aft C.G. loading, the elevator trim control should be adjusted towards the nose down direction to give comfortable control wheel forces during the initial climb.

CROSSWIND TAKEOFF

Takeoffs under strong crosswind conditions normally are performed with the minimum flap setting necessary for the field length, to minimize the drift angle immediately after takeoff. With the ailerons partially deflected into the wind, the airplane is accelerated to a speed slightly higher than normal, then the elevator control is used to quickly, but carefully, lift the airplane off the ground and to prevent possible settling back to the runway while drifting. When clear of the ground, make a coordinated turn into the wind to correct for drift.

SECTION 4 NORMAL PROCEDURES

ENROUTE CLIMB

Normal enroute climbs are performed with flaps up, at full throttle and 75 to 85 KIAS for the best combination of performance, visibility and engine cooling. The mixture should be full rich during climb at altitudes up to 3000 feet pressure altitude. Above 3000 feet pressure altitude, the mixture can be leaned as needed for increased power or to provide smoother engine operation.

If it is necessary to climb more rapidly to clear mountains or reach favorable winds at higher altitudes, the best rate of climb speed should be used with Maximum Continuous Power (MCP). This speed is 74 KIAS at sea level, decreasing to 72 KIAS at 10,000 feet.

If an obstruction dictates the use of a steep climb angle, the best angle of climb speed should be used with flaps UP and MCP. This speed is 62 KIAS at sea level, increasing to 67 KIAS at 10,000 feet. This type of climb should be of the minimum duration and engine temperatures should be carefully monitored due to the low climb speed.

CESSNA MODEL 172S NAV III GFC 700 AFCS

CRUISE

Normal cruise is performed between 45% and 75% power. The engine RPM and corresponding fuel consumption for various altitudes can be determined by using the data in Section 5.

NOTE

Cruise flight should use 75% power as much as possible until the engine has operated for a total of 50 hours or oil consumption has stabilized. Operation at this higher power will ensure proper seating of the piston rings and is applicable to new engines, and engines in service following cylinder replacement or top overhaul of one or more cylinders.

The Cruise Performance charts in Section 5 provide the pilot with flight planning information for the Model 172S in still air with speed fairings installed. Power, altitude, and winds determine the time and fuel needed to complete any flight.

The Cruise Performance Table, Figure 4-3, shows the true airspeed and nautical miles per gallon during cruise for various altitudes and percent powers, and is based on standard conditions and zero wind. This table should be used as a guide, along with the available winds aloft information, to determine the most favorable altitude and power setting for a given trip. The selection of cruise altitude on the basis of the most favorable wind conditions and the use of low power settings are significant factors that should be considered on every trip to reduce fuel consumption.

In addition to power settings, proper leaning techniques also contribute to greater range and are figured into cruise performance tables. To achieve the recommended lean mixture fuel consumption figures shown in Section 5, the mixture should be leaned using the Exhaust Gas Temperature (EGT) indicator as noted.

CESSNA MODEL 172S NAV III GFC 700 AFCS

CRUISE (Continued)

CRUISE PERFORMANCE TABLE

CONDITIONS: Standard Conditions Zero Wind

ALTITUDE	75% POWER		JDE 75% POWER 65% POWER		55% POWER	
FEET	KTAS	NMPG	KTAS	NMPG	KTAS	NMPG
Sea Level	114	11.2	108	12.0	101	12.8
4000	119	11.7	112	12.4	104	13.2
8000	124	12.2	117	12.9	107	13.6

Figure 4-3

The Cruise Performance charts in Section 5 provide the pilot with cruise performance at maximum gross weight. When normal cruise is performed at reduced weights there is an increase in true airspeed. During normal cruise at power settings between 55% and 75%, the true airspeed will increase approximately 1 knot for every 150 pounds below maximum gross weight. During normal cruise at power settings below 65%, the true airspeed will increase approximately 1 knot for every 125 pounds below maximum gross weight.

The fuel injection system employed on this engine is considered to be non-icing. In the event that unusual conditions cause the intake air filter to become cloqued or iced over, an alternate intake air door opens automatically for the most efficient use of either normal or alternate air, depending on the amount of filter blockage. Due to the lower intake pressure available through the alternate air door or a partially blocked filter, engine RPM can decrease from a cruise power setting. This RPM loss should be recovered by increasing the throttle setting to maintain desired power.

CRUISE (Continued)

LEANING USING EXHAUST GAS TEMPERATURE (EGT)

The cruise performance data in this POH is based on the recommended lean mixture setting determined from the maximum or peak EGT at power settings of 75% MCP and lower. The 172S Nav III provides EGT indications for all (4) engine cylinders. The ability to monitor all cylinders is an aid in early identification and correction of fuel injection problems.

NOTE

All engine cylinders do not receive identical fuel/air mixtures (due to unequal intake pipe lengths, uneven intake air temperatures, fuel injection nozzle tolerances etc.). However, all cylinder EGTs should be within approximately 100°F of each other during normal operations. An EGT difference greater than 100°F between cylinders indicates that fuel injection system maintenance is necessary.

EGT is displayed on the EIS ENGINE and LEAN pages. The ENGINE page has a horizontal scale with a temperature indicator (inverted triangle) with a number representing the cylinder with the highest EGT.

The EIS LEAN page provides vertical bar graph displays showing EGT for all cylinders. The cylinder with the highest EGT is shown in cyan (light blue). The numerical value for the highest EGT is located below the bar. The EGT and Cylinder Head Temperature (CHT) value for any cylinder may be shown by using the CYL SLCT softkey to select the desired cylinder. After a short period without CYL SLCT softkey activity, automatic indication of the highest EGT and CHT will start again.
CRUISE (Continued)

LEANING USING EXHAUST GAS TEMPERATURE (EGT) (Continued)

To aid in leaning the mixture, push the ENGINE, LEAN and ASSIST softkeys, $\Delta PEAK \ ^{\circ}F$ will display below the EGT $\ ^{\circ}F$ numerical value. Lean the mixture by slowly turning the mixture control knob in the counterclockwise direction while monitoring EGTs. As EGTs increase, continue to lean the mixture until the hottest (cyan) cylinder reaches peak EGT. This is identified by the EGT bar graph for that cylinder changing to cyan with a hollow bar at the top. Note the $\Delta PEAK \ ^{\circ}F$ and FFLOW GPH values for the first peaked cylinder. Peak EGT is represented by $\Delta PEAK \ ^{\circ}F$, if $\Delta PEAK \ ^{\circ}F$ value is negative (-) the mixture can be on the lean side of peak. Enrichen the mixture by slowly turning the mixture control clockwise and monitor both fuel flow and EGTs until the leanest cylinder returns to peak EGT ($\Delta PEAK \ ^{\circ}F$) or desired setting based on the Exhaust Gas Temperature (EGT) Table, Figure 4-4.

 \triangle PEAK °F values rich of peak will also be a negative (-) value (-50°F). The lean assist system calculation is defined such that the peak EGT is the highest value and any lesser value is represented with a negative (-) value, whether on the lean or rich side of the peak.

NOTE

The 172S engine manufacturer, Textron Lycoming, has not approved operation of the engine at fuel flow rates (mixture settings) less than necessary to reach peak EGT in the leanest cylinder (the first cylinder to reach peak EGT). Use FULL RICH mixture when operating the engine above 75% power.

(Continued Next Page)

172SPHBUS-01

SECTION 4 NORMAL PROCEDURES

CRUISE (Continued)

LEANING USING EXHAUST GAS TEMPERATURE (EGT) (Continued)

EXHAUST GAS TEMPERATURE (EGT)

MIXTURE DESCRIPTION	EXHAUST GAS TEMPERATURE (EGT)				
RECOMMENDED LEAN (Pilot's Operating Handbook)	50°F Rich of Peak EGT				
BEST ECONOMY	Peak EGT				

Figure 4-4

Operation at peak EGT provides the best fuel economy. This results in approximately 4% greater range than shown in this POH accompanied by approximately a 3 knot decrease in speed.

Under some conditions, engine roughness may occur while operating at peak EGT. In this case, operate at the recommended lean mixture.

NOTE

- Any change in altitude or power setting will require a change in the recommended lean mixture setting and a recheck of the EGT setting.
- The EGT indicators take several seconds, after a mixture adjustment, to start to show EGT changes. Finding peak EGT and adjusting the mixture to the applicable setting should take approximately one minute when the adjustments are made carefully and accurately. Adjusting the mixture quickly is not recommended.

(Continued Next Page)

4-38

CRUISE (Continued)

FUEL SAVINGS PROCEDURES FOR FLIGHT TRAINING OPERATIONS

For best fuel economy during flight training operations, the following procedures are recommended.

- After engine start and for all ground operations, set the throttle to 1200 RPM and lean the mixture for maximum RPM. After leaning, set the throttle to the appropriate RPM for ground operations. Leave the mixture at this setting until beginning the BEFORE TAKEOFF checklist. After the BEFORE TAKEOFF checklist is complete, lean the mixture again as described above until ready to perform the TAKEOFF checklist.
- 2. Lean the mixture for maximum RPM during full throttle climbs above 3000 feet. The mixture may remain leaned (maximum RPM at full throttle) for practicing maneuvers such as stalls and slow flight.
- 3. Lean the mixture for maximum RPM during all operations at any altitude, including those below 3000 feet, when using 75% or less power.

NOTE

- When cruising or maneuvering at 75% power or less, the mixture may be further leaned until the EGT indicator peaks and is then enrichened 50°F. This is especially applicable to cross-country training flights, but should be practiced during transition flight to and from the practice area as well.
- Using the above recommended procedures can provide fuel savings in excess of 5% when compared to typical training operations at full rich mixture. In addition, the above procedures will minimize spark plug fouling since the reduction in fuel consumption results in a proportional reduction in tetraethyl lead passing through the engine.

(Continued Next Page)

172SPHBUS-01

SECTION 4 NORMAL PROCEDURES CESSNA MODEL 172S NAV III GFC 700 AFCS

STALLS

The stall characteristics are conventional and aural warning is provided by a stall warning horn which sounds between 5 and 10 knots above the stall in all configurations.

Power off stall speeds at maximum weight for both forward and aft C.G. positions are presented in Section 5.

SPINS

Intentional spins are approved when the airplane is operated in the utility category. Spins with baggage loadings or occupied rear seat(s) are not approved.

However, before attempting to perform spins several items should be carefully considered to assure a safe flight. No spins should be attempted without first having received dual instruction both in spin entries and spin recoveries from a qualified instructor who is familiar with the spin characteristics of the Cessna 172S NAV III airplane.

The cabin should be clean and all loose equipment (including the microphone and rear seat belts) should be stowed or secured. For a solo flight in which spins will be conducted, the front passenger's seat belt and shoulder harness should also be secured. Care should be taken to ensure that the pilot can easily reach the flight controls and produce maximum control travels.

(Continued Next Page)

4-40

172SPHBUS-01

SECTION 4 NORMAL PROCEDURES

SPINS (Continued)

It is recommended that entries be accomplished at high enough altitude that recoveries are completed 4000 feet or more Above Ground Level (AGL). At least 1000 feet of altitude loss should be allowed for a 1-turn spin and recovery, while a 6-turn spin and recovery may require somewhat more than twice that amount. For example, the recommended entry altitude for a 6-turn spin would be 6000 feet AGL. In any case, entries should be planned so that recoveries are completed well above the minimum 1500 feet AGL required by 14 CFR 91.303. Another reason for using high altitudes for practicing spins is that a greater field of view is provided which will assist in maintaining pilot orientation.

The normal entry is made from a power off stall. As the stall is approached, the elevator control should be smoothly pulled to the full aft position. Just prior to reaching the stall "break", rudder control in the desired direction of the spin rotation should be applied so that full rudder deflection is reached almost simultaneously with reaching full aft elevator. A slightly greater rate of deceleration than for normal stall entries, application of ailerons in the direction of the desired spin, and the use of power at the entry will assure more consistent and positive entries to the spin. As the airplane begins to spin, reduce the power to idle and return the ailerons to neutral. Both elevator and rudder controls should be held full with the spin until the spin recovery is initiated. An inadvertent relaxation of either of these controls could result in the development of a nose down spiral.

For the purpose of training in spins and spin recoveries, a 1 or 2 turn spin is adequate and should be used. Up to 2 turns, the spin will progress to a fairly rapid rate of rotation and a steep attitude. Application of recovery controls will produce prompt recoveries (within 1/4 turn). During extended spins of two to three turns or more, the spin will tend to change into a spiral, particularly to the right. This will be accompanied by an increase in airspeed and gravity loads on the airplane. If this occurs, recovery should be accomplished promptly but smoothly by leveling the wings and recovering from the resulting dive.

(Continued Next Page)

SECTION 4 NORMAL PROCEDURES

SPINS (Continued)

Regardless of how many turns the spin is held or how it is entered, the following recovery technique should be used:

- 1. VERIFY THAT THROTTLE IS IN IDLE POSITION AND AILERONS ARE NEUTRAL.
- 2. APPLY AND **HOLD** FULL RUDDER OPPOSITE TO THE DIRECTION OF ROTATION.
- 3. JUST AFTER THE RUDDER REACHES THE STOP, MOVE THE CONTROL WHEEL BRISKLY FORWARD FAR ENOUGH TO BREAK THE STALL.
- 4. HOLD THESE CONTROL INPUTS UNTIL ROTATION STOPS.
- 5. AS ROTATION STOPS, NEUTRALIZE RUDDER, AND MAKE A SMOOTH RECOVERY FROM THE RESULTING DIVE.

NOTE

If disorientation makes the direction of rotation difficult to determine, see the turn vector near the index at the top of the Horizontal Situation Indicator (HSI).

Variations in basic airplane rigging or in weight and balance due to installed equipment or right seat occupancy can cause differences in behavior, particularly in extended spins. These differences are normal and will result in variations in the spin characteristics and in the spiraling tendencies for spins of more than 2 turns. However, the recovery technique should always be used and will result in the most expeditious recovery from any spin.

Intentional spins with flaps extended are prohibited, since the high airspeeds which may occur during recovery can be more than the flap airspeed limitation and can damage the flap and wing structures.

LANDING

NORMAL LANDING

Normal landing approaches can be made with power on or power off with any flap setting within the flap airspeed limits. Surface winds and air turbulence are usually the primary factors in determining the most comfortable approach speeds. Steep slips with flap settings greater than 20° can cause a slight tendency for the elevator to oscillate under certain combinations of airspeed, sideslip angle, and center of gravity loadings.

Landing at slower speeds will result in shorter landing distances and minimum wear to tires and brakes. Power must be at idle as the main wheels touch the ground. The main wheels must touch the ground before the nosewheel. The nosewheel must be lowered to the runway carefully after the speed has diminished to avoid unnecessary nose gear loads. This procedure is very important for rough or soft field landings.

SHORT FIELD LANDING

For a short field landing in smooth air conditions, approach at 61 KIAS with FULL flaps using enough power to control the glide path. Slightly higher approach speeds should be used in turbulent air conditions. After all approach obstacles are cleared, smoothly reduce power and hold the approach speed by lowering the nose of the airplane. The main wheels must touch the ground before the nosewheel with power at idle. Immediately after the main wheels touch the ground, carefully lower the nosewheel and apply heavy braking as required. For maximum brake performance, retract the flaps, hold the control wheel full back, and apply maximum brake pressure without skidding the tires.

(Continued Next Page)

SECTION 4 NORMAL PROCEDURES

LANDING (Continued)

CROSSWIND LANDING

When landing in a strong crosswind, use the minimum flap setting required for the field length. If flap settings greater than 20° are used in sideslips with full rudder deflection, some elevator oscillation may be felt at normal approach speeds. However, this does not affect control of the airplane. Although the crab or combination method of drift correction may be used, the wing low method gives the best control. After touchdown, hold a straight course with the steerable nosewheel, with aileron deflection as applicable, and occasional braking if necessary.

The maximum allowable crosswind velocity is dependent upon pilot capability as well as airplane limitations. Operation in direct crosswinds of 15 knots has been demonstrated (not an operating limitation).

BALKED LANDING

In a balked landing (go-around) climb, reduce the flap setting to 20° immediately after full power is applied and climb at 60 KIAS. If obstacles must be cleared during the go-around climb, reduce the wing flap setting to 10° and maintain a safe airspeed until the obstacles are cleared. Above 3000 feet pressure altitude, lean the mixture to obtain maximum RPM. After clearing any obstacles, carefully retract the flaps and allow the airplane to accelerate to normal climb airspeed.

COLD WEATHER OPERATIONS

Special consideration should be given to the operation of the airplane fuel system during the winter season or prior to any flight in cold temperatures. Proper preflight draining of the fuel system is especially important and will eliminate any free water accumulation. The use of additives such as isopropyl alcohol or Diethylene Glycol Monomethyl Ether (DIEGME) may also be desirable. Refer to Section 8 for information on the proper use of additives.

Cold weather often causes conditions that require special care during airplane operations. Even small accumulations of frost, ice, or snow must be removed, particularly from wing, tail and all control surfaces to assure satisfactory flight performance and handling. Also, control surfaces must be free of any internal accumulations of ice or snow.

If snow or slush covers the takeoff surface, allowance must be made for takeoff distances which will be increasingly extended as the snow or slush depth increases. The depth and consistency of this cover can, in fact, prevent takeoff in many instances.

(Continued Next Page)

SECTION 4 NORMAL PROCEDURES

COLD WEATHER OPERATION (Continued)

STARTING

When air temperatures are below 20°F (-6°C), use an external preheater and an external power source whenever possible to obtain positive starting and to reduce wear and abuse to the engine and electrical system. Preheat will thaw the oil trapped in the oil cooler, which probably will be congealed prior to starting in extremely cold temperatures.

WARNING

WHEN TURNING THE PROPELLER BY HAND, TREAT IT AS IF THE MAGNETOS SWITCH IS IN THE ON POSITION. A LOOSE OR BROKEN GROUND WIRE ON EITHER MAGNETO COULD ENERGIZE THE ENGINE.

Prior to starting on cold mornings, it is advisable to turn the propeller manually through several engine compression cycles by hand to loosen the oil, so the engine cranks (motors) more easily and uses less battery power. When the propeller is turned manually, turn it in the opposite direction to normal engine rotation for greater safety. Opposite rotation disengages the magneto impulse couplings and prevents possible unwanted ignition.

When using an external power source, the MASTER switch ALT and BAT sections must be in the OFF position before connecting the external power source to the airplane receptacle. Refer to Section 7, External Power Receptacle, for external power source operations.

(Continued Next Page)

4-46

172SPHBUS-00

COLD WEATHER OPERATION (Continued)

STARTING (Continued)

Cold weather starting procedures are the same as the normal starting procedures. However, to conserve battery power the beacon light can be left off until the engine is started. Use caution to prevent inadvertent forward movement of the airplane during starting when parked on snow or ice.

During cold weather starting, when performing the Standby Battery energy level test, the test lamp may not illuminate and the BUS E volts may be less than 24 volts before turning on the MASTER (ALT and BAT) switch. After engine start, verify the S BATT ammeter shows a charge (positive) at 1000 RPM or greater. Prior to takeoff verify the S BATT ammeter shows a charge less than 0.4 amps.

NOTE

If the engine does not start during the first few attempts, or if engine firing diminishes in strength, the spark plugs may be frosted over. Preheat must be used before another start is attempted.

During cold weather operations, the oil temperature indicator may not be in the green band prior to takeoff if outside air temperatures are very cold. After a suitable warm up period (2 to 5 minutes at 1000 RPM), accelerate the engine several times to higher engine RPMs. If the engine accelerates smoothly and the oil pressure remains normal and steady, the airplane is ready for takeoff.

WINTERIZATION KIT

An optional winterization kit is available and may be utilized when cold weather operations are conducted. Refer to Section 9, Supplement 4 for installation and operational details.

172SPHBUS-00

4-47

HOT WEATHER OPERATIONS

Refer to the general warm temperature starting information under Starting Engine in this section. Avoid prolonged engine operation on the ground.

NOISE CHARACTERISTICS

The certified takeoff noise level for the Model 172S at 2550 pounds maximum weight is 75.1 dB(A) per 14 CFR 36 Appendix G (through Amendment 36-21) and 78.2 dB(A) per ICAO Annex 16 Chapter 10 (through Amendment 4). No determination has been made that the noise levels of this airplane are, or should be, acceptable or unacceptable for operation at, into, or out of, any airport.

The following procedures are suggested to minimize the effect of airplane noise on the public:

- Pilots operating airplanes under VFR over outdoor assemblies of persons, recreational and park areas, and other noise sensitive areas should make every effort to fly not less than 2000 feet AGL, weather permitting, even though flight at a lower level may be consistent with the provisions of government regulations.
- 2. During departure from or approach to an airport, climb after takeoff and descent for landing should be made so as to avoid prolonged flight at low altitude near noise sensitive areas.

NOTE

The above recommended procedures do not apply where they would conflict with Air Traffic Control clearances or instructions, or where, in the pilot's judgment, an altitude of less than 2000 feet AGL is necessary to adequately exercise the duty to see and avoid other airplanes.

SECTION 5 PERFORMANCE

PERFORMANCE

TABLE OF CONTENTS

Page

Introduction
Use of Performance Charts
Sample Problem
Takeoff
Cruise
Fuel Required
Landing
Demonstrated Operating Temperature
Airspeed Calibration - Normal Static Source
Airspeed Calibration - Alternate Static Source
Temperature Conversion Chart
Stall Speeds At 2550 Pounds5-13
Crosswind Component
Short Field Takeoff Distance At 2550 Pounds
Short Field Takeoff Distance At 2400 Pounds
Short Field Takeoff Distance At 2200 Pounds
Maximum Rate Of Climb At 2550 Pounds
Time, Fuel And Distance To Climb At 2550 Pounds
Cruise Performance
Range Profile
Endurance Profile
Short Field Landing Distance At 2550 Pounds
9

INTRODUCTION

Performance data charts on the following pages are presented so that you may know what to expect from the airplane under various conditions and to facilitate the planning of flights in detail with reasonable accuracy. The data in the charts has been computed from actual flight tests with the airplane and engine in good condition and using average piloting techniques.

It should be noted that performance information presented in the range and endurance profile charts allows for 45 minutes reserve fuel at the specified power setting. Fuel flow data for cruise is based on the recommended lean mixture setting at all altitudes. Some indeterminate variables such as mixture leaning technique, fuel metering characteristics, engine and propeller condition, and air turbulence may account for variations of 10% or more in range and endurance. Therefore, it is important to utilize all available information to estimate the fuel required for the particular flight and to flight plan in a conservative manner.

USE OF PERFORMANCE CHARTS

Performance data is presented in tabular or graphical form to illustrate the effect of different variables. Sufficiently detailed information is provided in the tables so that conservative values can be selected and used to determine the particular performance figure with reasonable accuracy.

SECTION 5 PERFORMANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS

SAMPLE PROBLEM

The following sample flight problem utilizes information from the various charts to determine the predicted performance data for a typical flight. Assume the following information has already been determined:

AIRPLANE CONFIGURATION:

Takeoff weight	2550 Pounds			
Usable fuel	53.0 Gallons			

TAKEOFF CONDITIONS:

Field pressure altitude	1500 Feet
Temperature	28°C (16°C Above Standard)
Wind component along runway	12 Knot Head Wind
Field length	3500 Feet

CRUISE CONDITIONS:

360 Nautical Miles
7500 Feet
16°C (16°C Above Standard)
10 Knot Head Wind

LANDING CONDITIONS:

Field pressure altitude Temperature Field length 2000 Feet 25°C 3000 Feet

(Continued Next Page)

SAMPLE PROBLEM (Continued)

TAKEOFF

The takeoff distance chart, Figure 5-5, should be consulted, keeping in mind that distances shown are based on the short field technique. Conservative distances can be established by reading the chart at the next higher value of weight, altitude and temperature. For example, in this particular sample problem, the takeoff distance information presented for a weight of 2550 pounds, pressure altitude of 2000 feet and a temperature of 30°C should be used and results in the following:

Ground roll

1285 Feet

Total distance to clear a 50-foot obstacle 2190 Feet

These distances are well within the available takeoff field length. However, a correction for the effect of wind may be made based on information presented in the note section of the takeoff chart. The correction for a 12 knot head wind is:

12 Knots X 10% = 13% Decrease

This results in the following distances, corrected for wind:

Ground roll, zero wind	1285	Feet
Decrease in ground roll (1285 feet X 13%)	-167	Feet
Corrected ground roll	1118	Feet

Total distance to clear a 50-foot obstacle, zero wind	2190	Feet
Decrease in total distance (2190 feet X 13%)	-285	Feet
Corrected total distance to clear 50-foot obstacle	1905	Feet

(Continued Next Page)

172SPHBUS-00

U.S. 5-5

SAMPLE PROBLEM (Continued)

CRUISE

The cruising altitude should be selected based on a consideration of trip length, winds aloft and the airplane's performance. A typical cruising altitude and the expected wind enroute have been given for this sample problem. However, the power setting selection for cruise must be determined based on several considerations. These include the cruise performance characteristics presented in Figure 5-8, the range profile chart presented in Figure 5-9, and the endurance profile chart presented in Figure 5-10.

The relationship between power and range is illustrated by the range profile chart. Considerable fuel savings and longer range result when lower power settings are used. For this sample problem, a cruise power of approximately 65% will be used.

The cruise performance chart, Figure 5-8, is entered at 8000 feet pressure altitude and 20°C above standard temperature. These values most nearly correspond to the planned altitude and expected temperature conditions. The engine speed chosen is 2600 RPM, which results in the following:

Power	64%
True airspeed	117 Knots
Cruise fuel flow	8.9 GPH

(Continued Next Page)

SAMPLE PROBLEM (Continued)

FUEL REQUIRED

The total fuel requirement for the flight may be estimated using the performance information in Figure 5-7 and Figure 5-8. For this sample problem, the time, fuel and distance to climb may be determined from Figure 5-7 for normal climb. The difference between the values shown in the table for 2000 feet and 8000 feet results in the following:

Time:11 MinutesFuel:2.2 GallonsDistance:15 Nautical Miles

These values are for a standard temperature and are sufficiently accurate for most flight planning purposes. However, a further correction for the effect of temperature may be made as noted on the climb chart. The approximate effect of a nonstandard temperature is to increase the time, fuel and distance by 10% for each 10°C above standard temperature, due to the lower rate of climb. In this case, assuming a temperature 16°C above standard the correction would be:

 $\frac{16^{\circ}C}{10^{\circ}C}$ X 10% = 16% Increase

With this factor included, the fuel estimate would be calculated as follows:

Fuel to climb, standard temperature2.2 GallonsIncrease due to non-standard temperature (2.2 X 16%)0.4 GallonsCorrected fuel to climb2.6 Gallons

Using a similar procedure for the distance to climb results in 18 nautical miles.

The resultant cruise distance is:

Nautical Miles
Nautical Miles
Nautical Miles

(Continued Next Page)

SAMPLE PROBLEM (Continued)

FUEL REQUIRED (Continued)

With an expected 10 knot head wind, the ground speed for cruise is predicted to be:

117 Knots -10 Knots 107 Knots

Therefore, the time required for the cruise portion of the trip is:

342 Nautical Miles = 3.2 Hours 107 Knots

The fuel required for cruise is:

3.2 hours X 8.9 gallons/hour = 28.5 Gallons

A 45-minute reserve requires:

 $\frac{45}{60}$ X 8.9 gallons/hour = 6.7 Gallons

The total estimated fuel required is as follows:

Engine start, taxi, and takeoff	1.4	Gallons
Climb	2.6	Gallons
Cruise	28.5	Gallons
Reserve	6.7	Gallons
Total fuel required	39.2	Gallons

Once the flight is underway, ground speed checks will provide a more accurate basis for estimating the time enroute and the corresponding fuel required to complete the trip with ample reserve.

(Continued Next Page)

SAMPLE PROBLEM (Continued)

LANDING

A procedure similar to takeoff should be used for estimating the landing distance at the destination airport. Figure 5-11 presents landing distance information for the short field technique. The distances corresponding to 2000 feet and 30°C are as follows:

Ground roll

650 Feet

Total distance to clear a 50-foot obstacle 1455 Feet

A correction for the effect of wind may be made based on information presented in the note section of the landing chart, using the same procedure as outlined for takeoff.

DEMONSTRATED OPERATING TEMPERATURE

Satisfactory engine cooling has been demonstrated for this airplane with an outside air temperature 23°C above standard. This is not to be considered as an operating limitation. Reference should be made to Section 2 for engine operating limitations.

AIRSPEED CALIBRATION

NORMAL STATIC SOURCE

CONDITIONS:

Power required for level flight or maximum power descent.

Flaps UP	-									1		
KIAS	50	60	70	80	90	100	110	120	130	140	150	160
KCAS	56	62	70	78	87	97	107	117	127	137	147	157
Flaps 10°		1.2			m		-		16			
KIAS	40	50	60	70	80	90	100	110				
KCAS	51	57	63	71	80	89	99	109				
Flaps FULL												
KIAS	40	50	60	70	80	85						
KCAS	50	56	63	72	81	86						

Figure 5-1 (Sheet 1 of 2)

SECTION 5 PERFORMANCE

AIRSPEED CALIBRATION

ALTERNATE STATIC SOURCE

CONDITIONS:

Power required for level flight or maximum power descent.

FLAPS UP KIAS		50	60	70	80	90	100	110	120	130	140	150	160	
ALT KIAS		50	60	73	82	92	102	112	122	132	143	153	163	
FLAPS 10° KIAS	40	50	60	70	80	90	100	110						
ALT KIAS	40	54	64	73	83	93	103	114						
FLAPS FULL KIAS	40	50	60	70	80	85								
ALT KIAS	42	53	63	73	83	88								

NOTE

Windows and ventilators closed. Cabin heat, cabin air and defroster on maximum.

Figure 5-1 (Sheet 2)*

U.S. 5-11

SECTION 5 PERFORMANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS



TEMPERATURE CONVERSION CHART

Degrees - Celsius



172SPHBUS-00

SECTION 5 PERFORMANCE

STALL SPEED AT 2550 POUNDS

CONDITIONS:

Power IDLE

MOST REARWARD CENTER OF GRAVITY

FLAD			A	ANGLE (OF BAN	K			
SETTINGS	0°		30°		4	5°	60°		
SET TINGS	KIAS KCAS		KIAS	KCAS	KIAS KCAS		KIAS	KCAS	
UP	48	53	52	57	62	63	76	75	
10°	42	50	45	54	54	59	70	71	
FULL	40	48	43	52	52	57	65	68	

MOST FOREWARD CENTER OF GRAVITY

ELAD			F	ANGLE (OF BAN	K			
SETTINGS	0°		30°		4	5°	60°		
OLT INCO	KIAS	KCAS	KIAS	KCAS	KIAS	KCAS	KIAS	KCAS	
UP	48	53	52	57	61	63	76	75	
10°	43	51	46	55	56	61	71	72	
FULL	40	48	43	52	52	57	65	68	

NOTE

- Altitude loss during a stall recovery may be as much as 230 feet.
- KIAS values are approximate.

SECTION 5 PERFORMANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS

B3094 35 Headwind 30 wind Velocity 25 thois 20 Wind Component - Knots 15 60 10 0 5 80 0 90° Angle between wind direction and runway 1000 5 Tailwind 10 15 20 25 30 0 5 10 15 35

CROSSWIND COMPONENT

Crosswind Component - Knots

NOTE

Maximum demonstrated crosswind velocity is 15 knots (not a limitation).



5-14

SECTION 5 PERFORMANCE

SHORT FIELD TAKEOFF DISTANCE AT 2550 POUNDS

CONDITIONS: Flaps 10° Full Throttle prior to brake release. Paved, Level, Dry Runway Zero Wind

Lift Off: 51 KIAS Speed at 50 Feet: 56 KIAS

	0°C		10	°C	20°C		30°C		40°C	
Pressure Altitude Feet	Gnd Roll Feet	Total Feet To Clear 50 Foot Obst								
Sea Level	860	1465	925	1575	995	1690	1070	1810	1150	1945
1000	940	1600	1010	1720	1090	1850	1170	1990	1260	2135
2000	1025	1755	1110	1890	1195	2035	1285	2190	1380	2355
3000	1125	1925	1215	2080	1310	2240	1410	2420	1515	2605
4000	1235	2120	1335	2295	1440	2480	1550	2685	1660	2880
5000	1355	2345	1465	2545	1585	2755	1705	2975	1825	3205
6000	1495	2605	1615	2830	1745	3075	1875	3320	2010	3585
7000	1645	2910	1785	3170	1920	3440	2065	3730	2215	4045
8000	1820	3265	1970	3575	2120	3880	2280	4225	2450	4615

NOTE

- Short field technique as specified in Section 4.
- Prior to takeoff from fields above 3000 feet pressure altitude, the mixture should be leaned to give maximum RPM in a full throttle, static run-up.
- Decrease distances 10% for each 9 knots head wind. For operation with tail winds up to 10 knots, increase distances by 10% for each 2 knots.
- For operation on dry grass runway, increase distances by 15% of the "ground roll" figure.

Figure 5-5 (Sheet 1 of 3)

172SPHBUS-00

SHORT FIELD TAKEOFF DISTANCE AT 2400 POUNDS

CONDITIONS: Flaps 10° Full Throttle prior to brake release. Paved, Level, Dry Runway Zero Wind

Lift Off:	48 KIAS
Speed at 50 Feet:	54 KIAS

	0	°C	10	°C	20°C		30°C		40	°C
Pressure Altitude Feet	Gnd Roll Feet	Total Feet To Clear 50 Foot Obst								
Sea Level	745	1275	800	1370	860	1470	925	1570	995	1685
1000	810	1390	875	1495	940	1605	1010	1720	1085	1845
2000	885	1520	955	1635	1030	1760	1110	1890	1190	2030
3000	970	1665	1050	1795	1130	1930	1215	2080	1305	2230
4000	1065	1830	1150	1975	1240	2130	1335	2295	1430	2455
5000	1170	2015	1265	2180	1360	2355	1465	2530	1570	2715
6000	1285	2230	1390	2410	1500	2610	1610	2805	1725	3015
7000	1415	2470	1530	2685	1650	2900	1770	3125	1900	3370
8000	1560	2755	1690	3000	1815	3240	1950	3500	2095	3790

NOTE

- Short field technique as specified in Section 4.
- Prior to takeoff from fields above 3000 feet pressure altitude, the mixture should be leaned to give maximum RPM in a full throttle, static run-up.
- Decrease distances 10% for each 9 knots head wind. For operation with tail winds up to 10 knots, increase distances by 10% for each 2 knots.
- For operation on dry grass runway, increase distances by 15% of the "ground roll" figure.

172SPHBUS-00

SECTION 5 PERFORMANCE

SHORT FIELD TAKEOFF DISTANCE AT 2200 POUNDS

CONDITIONS: Flaps 10° Full Throttle prior to brake release. Paved, Level, Dry Runway Zero Wind

Lift Off: 44 KIAS Speed at 50 Feet: 50 KIAS

	0°	C	10	°C	20	°C	30	°C	40	°C
Pressure Altitude Feet	Gnd Roll Feet	Total Feet To Clear 50 Foot Obst								
Sea Level	610	1055	655	1130	705	1205	760	1290	815	1380
1000	665	1145	720	1230	770	1315	830	1410	890	1505
2000	725	1250	785	1340	845	1435	905	1540	975	1650
3000	795	1365	860	1465	925	1570	995	1685	1065	1805
4000	870	1490	940	1605	1010	1725	1090	1855	1165	1975
5000	955	1635	1030	1765	1110	1900	1195	2035	1275	2175
6000	1050	1800	1130	1940	1220	2090	1310	2240	1400	2395
7000	1150	1985	1245	2145	1340	2305	1435	2475	1540	2650
8000	1270	2195	1370	2375	1475	2555	1580	2745	1695	2950

NOTE

- Short field technique as specified in Section 4.
- Prior to takeoff from fields above 3000 feet pressure altitude, the mixture should be leaned to give maximum RPM in a full throttle, static run-up.
- Decrease distances 10% for each 9 knots head wind. For operation with tail winds up to 10 knots, increase distances by 10% for each 2 knots.
- For operation on dry grass runway, increase distances by 15% of the "ground roll" figure.

Figure 5-5 (Sheet 3)

172SPHBUS-00

SECTION 5 PERFORMANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS

MAXIMUM RATE OF CLIMB AT 2550 POUNDS

CONDITIONS:

Flaps UP Full Throttle

Pressure	Climb Speed		Rate of C	limb - FPM	
Feet	- KIAS	-20°C	0°C	20°C	40°C
Sea Level	74	855	785	710	645
2000	73	760	695	625	560
4000	73	685	620	555	495
6000	73	575	515	450	390
8000	72	465	405	345	285
10,000	72	360	300	240	180
12,000	72	255	195	135	

NOTE

Mixture leaned above 3000 feet pressure altitude for maximum RPM.

Figure 5-6

SECTION 5 PERFORMANCE

TIME, FUEL AND DISTANCE TO CLIMB AT 2550 POUNDS

CONDITIONS:

Flaps UP Full Throttle Standard Temperature

Pressure	Temp	Climb	Rate of	F	rom Sea Lev	vel
Altitude Feet	°C	Speed KIAS	Climb FPM	Time Minutes	Fuel Used Gallons	Distance NM
Sea Level	15	74	730	0	0.0	0
1000	13	73	695	1	0.4	2
2000	11	73	655	3	0.8	4
3000	9	73	620	4	1.2	6
4000	7	73	600	6	1.5	8
5000	5	73	550	8	1.9	10
6000	3	73	505	10	2.2	13
7000	1	73	455	12	2.6	16
8000	-1	72	410	14	3.0	19
9000	-3	72	360	17	3.4	22
10,000	-5	72	315	20	3.9	27
11,000	-7	72	265	24	4.4	32
12,000	-9	72	220	28	5.0	38

NOTE

- Add 1.4 gallons of fuel for engine start, taxi and takeoff allowance.
- Mixture leaned above 3000 feet pressure altitude for maximum RPM.
- Increase time, fuel and distance by 10% for each 10°C above standard temperature.
- · Distances shown are based on zero wind.

Figure 5-7

SECTION 5 PERFORMANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS

CRUISE PERFORMANCE

CONDITIONS: 2550 Pounds Recommended Lean Mixture

Pressure Altitude	RPM	20°C BELOW STANDARD TEMP			ST TEM	ANDAF PERAT	RD WRE	20°C ABOVE STANDARD TEMP			
Feet		%			%			%			
		MCP	KTAS	GPH	MCP	KTAS	GPH	MCP	KTAS	GPH	
2000	2550	83	117	11.1	77	118	10.5	72	117	9.9	
_	2500	78	115	10.6	73	115	9.9	68	115	9.4	
	2400	69	111	9.6	64	110	9.0	60	109	8.5	
	2300	61	105	8.6	57	104	8.1	53	102	7.7	
	2200	53	99	7.7	50	97	7.3	47	95	6.9	
	2100	47	92	6.9	44	90	6.6	42	89	6.3	
4000	2600	83	120	11.1	77	120	10.4	72	119	9.8	
	2550	79	118	10.6	73	117	9.9	68	117	9.4	
	2500	74	115	10.1	69	115	9.5	64	114	8.9	
1 1 1	2400	65	110	9.1	61	109	8.5	57	107	8.1	
	2300	58	104	8.2	54	102	7.7	51	101	7.3	
	2200	51	98	7.4	48	96	7.0	45	94	6.7	
	2100	45	91	6.6	42	89	6.4	40	87	6.1	
	1		1200012	Children P			-				
6000	2650	83	122	11.1	77	122	10.4	72	121	9.8	
10000000	2600	78	120	10.6	73	119	9.9	68	118	9.4	
	2500	70	115	9.6	65	114	9.0	60	112	8.5	
	2400	62	109	8.6	57	108	8.2	54	106	7.7	
	2300	54	103	7.8	51	101	7.4	48	99	7.0	
	2200	48	96	7.1	45	94	6.7	43	92	6.4	

NOTE

- Maximum cruise power using recommended lean mixture is 75% MCP. Power settings above 75% MCP are listed to aid interpolation. Operations above 75% MCP must use full rich mixture.
- Cruise speeds are shown for an airplane equipped with speed fairings. Without speed fairings, decrease speeds shown by 2 knots.

Figure 5-8 (Sheet 1 of 2)

172SPHBUS-00

5-20

SECTION 5 PERFORMANCE

C 700 AFCS

CRUISE PERFORMANCE

CONDITIONS: 2550 Pounds Recommended Lean Mixture

Pressure Altitude	RPM	20° STAN	C BEL	OW TEMP	ST TEM	ANDAR PERAT	RD WRE	20°C ABOVE STANDARD TEMP		
Feet		%		James	%	C sale because	11210230100	%	1120200	
		MCP	KTAS	GPH	MCP	KTAS	GPH	MCP	KTAS	GPH
8000	2700	83	125	11.1	77	124	10.4	71	123	9.7
	2650	78	122	10.5	72	122	9.9	67	120	9.3
	2600	74	120	10.0	68	119	9.4	64	117	8.9
	2500	65	114	9.1	61	112	8.6	57	111	8.1
	2400	58	108	8.2	54	106	7.8	51	104	7.4
	2300	52	101	7.5	48	99	7.1	46	97	6.8
	2200	46	94	6.8	43	92	6.5	41	90	6.2
		1.1							1.000	1.000
10,000	2700	78	124	10.5	72	123	9.8	67	122	9.3
	2650	73	122	10.0	68	120	9.4	63	119	8.9
	2600	69	119	9.5	64	117	9.0	60	115	8.5
	2500	62	113	8.7	57	111	8.2	54	109	7.8
	2400	55	106	7.9	51	104	7.5	49	102	7.1
	2300	49	100	7.2	46	97	6.8	44	95	6.5
				1.44						
12,000	2650	69	121	9.5	64	119	8.9	60	117	8.5
_	2600	65	118	9.1	61	116	8.5	57	114	8.1
	2500	58	111	8.3	54	109	7.8	51	107	7.4
	2400	52	105	7.5	49	102	7.1	46	100	6.8
	2300	47	98	6.9	44	95	6.6	41	92	6.3

NOTE

- Maximum cruise power using recommended lean mixture is 75% MCP. Power settings above 75% MCP are listed to aid interpolation. Operations above 75% MCP must use full rich mixture.
- Cruise speeds are shown for an airplane equipped with speed fairings. Without speed fairings, decrease speeds shown by 2 knots.

Figure 5-8 (Sheet 2)

172SPHBUS-00

SECTION 5 PERFORMANCE CESSNA MODEL 172S NAV III GFC 700 AFCS

RANGE PROFILE 45 MINUTES RESERVE 53 GALLONS USABLE FUEL

CONDITIONS: 2550 Pounds

Recommended Lean Mixture for Cruise at all altitudes

Standard Temperature Zero Wind



NOTE

- This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the distance during a normal climb.
- Cruise speeds are shown for an airplane equipped with speed fairings. Without speed fairings, decrease speeds shown by 2 knots.

Figure 5-9

172SPHBUS-00

SECTION 5 PERFORMANCE

ENDURANCE PROFILE **45 MINUTES RESERVE 53 GALLONS USABLE FUEL**

CONDITIONS:

2550 Pounds

Standard Temperature



NOTE

This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the time during a normal climb.

Figure 5-10

172SPHBUS-00

SHORT FIELD LANDING DISTANCE AT 2550 POUNDS

CONDITIONS:

Flaps FULL Power IDLE Maximum Braking Zero Wind Paved, Level, Dry Runway Speed at 50 ft: 61 KIAS

	0	°C	10	10°C 20°C		30°C		40°C		
Pressure Altitude Feet	Gnd Roll Feet	Total Feet To Clear 50 Foot Obst								
Sea Level	545	1290	565	1320	585	1350	605	1380	625	1415
1000	565	1320	585	1350	605	1385	625	1420	650	1450
2000	585	1355	610	1385	630	1420	650	1455	670	1490
3000	610	1385	630	1425	655	1460	675	1495	695	1530
4000	630	1425	655	1460	675	1495	700	1535	725	1570
5000	655	1460	680	1500	705	1535	725	1575	750	1615
6000	680	1500	705	1540	730	1580	755	1620	780	1660
7000	705	1545	730	1585	760	1625	785	1665	810	1705
8000	735	1585	760	1630	790	1670	815	1715	840	1755

NOTE

- · Short field technique as specified in Section 4.
- Decrease distances 10% for each 9 knots head wind. For operation with tail winds up to 10 knots, increase distances by 10% for each 2 knots.
- For operation on dry grass runway, increase distances by 45% of the "ground roll" figure.
- If landing with flaps up, increase the approach speed by 9 KIAS and allow for 35% longer distances.

Figure 5-11

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

WEIGHT AND BALANCE/ EQUIPMENT LIST

TABLE OF CONTENTS

Page

Introduction
Airplane Weighing Procedures
Airplane Weighing Form
Sample Weight and Balance Record
Weight And Balance
Baggage Tiedown
Sample Loading Problem
Loading Graph
Loading Arrangements
Internal Cabin Dimensions
Center Of Gravity Moment Envelope
Center of Gravity Limits
Comprehensive Equipment List
SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

INTRODUCTION

This section describes the procedure for establishing the basic empty weight and moment of the airplane. Sample forms are provided for reference. Procedures for calculating the weight and moment for various operations are also provided. For additional information regarding Weight and Balance procedures, refer to the Aircraft Weight and Balance Handbook (FAA-H-8083-1). A comprehensive list of Cessna equipment available for this airplane is included at the back of this section.

Specific information regarding the weight, arm, moment and installed equipment for this airplane as delivered from the factory can be found in the plastic envelope in the back of this POH.

WARNING

IT IS THE RESPONSIBILITY OF THE PILOT TO MAKE SURE THE AIRPLANE IS LOADED PROPERLY. OPERATION OUTSIDE OF PRESCRIBED WEIGHT AND BALANCE LIMITATIONS COULD RESULT IN AN ACCIDENT AND SERIOUS OR FATAL INJURY.

AIRPLANE WEIGHING PROCEDURES

1. Preparation:

- a. Inflate tires to recommended operating pressures.
- b. Defuel airplane. Refer to the Maintenance Manual.
- c. Service engine oil as required to obtain a normal full indication (approximately 7 quarts on dipstick).
- d. Move sliding seats to the most forward position.
- e. Raise flaps to the fully retracted position.
- f. Place all control surfaces in neutral position.
- g. Remove all non-required items from airplane.

(Continued Next Page)

U.S.

AIRPLANE WEIGHING PROCEDURES (Continued)

- 2. Level:
 - a. Place scales under each wheel (minimum scale capacity, 1000 pounds).
 - b. Deflate the nose tire and/or lower or raise the nose strut to properly center the bubble in the level (Refer to Figure 6-1 Sheet 1).
- 3. Weigh:
 - a. Weigh airplane in a closed hangar to avoid errors caused by air currents.
 - b. With the airplane level and brakes released, record the weight shown on each scale. Deduct the tare, if any, from each reading.
- 4. Measure:
 - a. Obtain measurement A by measuring horizontally (along the airplane centerline) from a line stretched between the main wheel centers to a plumb bob dropped from the firewall.
 - b. Obtain measurement B by measuring horizontally and parallel to the airplane centerline, from center of nosewheel axle, left side, to a plumb bob dropped from the line between the main wheel centers. Repeat on right side and average the measurements.
- 5. Using weights from step 3 and measurements from step 4, the Basic Empty Weight and C.G. can be determined by completing Figure 6-1 (Sheet 2).
- 6. Changes to the Airplane Weight and Balance due to alteration or repair must be documented in a permanent record within the POH similar to that shown in Figure 6-2.
- 7. A new Basic Empty Weight and CG Arm based on actual airplane weight (as weighed) is required after a major repair or alteration. It is recommended that the airplane be weighed to verify Basic Empty Weight and CG Arm at intervals not to exceed 5 years.

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

AIRPLANE WEIGHING FORM



NOTE

It is the responsibility of the pilot to make sure that the airplane is loaded properly.

0510T1005

Figure 6-1 (Sheet 1 of 2)

B4073

CESSNA MODEL 172S NAV III GFC 700 AFCS

AIRPLANE WEIGHING FORM

Locating CG with Airplane on Landing Gear

X (Inches Aft of Datum) = A $-\left[\frac{\text{Nosewheel Weight x B}}{\text{Total Weight}^*}\right]$

Locating Percent MAC

*(Nose + L + R Wheel Weights)

CG Percent MAC = $\frac{(CG \text{ Arm of Airplane}) - 25.90}{0.5880}$

Leveling Provisions Longitudinal – Left side of tailcone at FS 108.00 and 142.00

Measuring A and B

Measure A and B per pilot's operating handbook instructions to assist in locating CG with airplane weighed on landing gear.

Airplane as Weighed Table

Position	Scale reading	Scale drift	Tare	Net weight
Left Wheel				
Right Wheel				
Nose Wheel				

Airplane total as weighed

Basic Empty Weight and Center-of-Gravity Table

Item	Weight Pounds	CG Arm (Inches)	Moment (Inch–Pounds /1000)
Airplane (calculated or as weighed) (includes all undrainable fluids and full oil)			
Drainable unusable fuel at 6.0 pounds per gallon – (3 gallons)	18.0	46.00	0.83
Basic Empty Weight			

Figure 6-1 (Sheet 2)

172SPHBUS-00

6-6

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

SAMPLE WEIGHT AND BALANCE RECORD

B3099

SAMPLE WEIGHT AND BALANCE RECORD

is Running basic empty 72.724 Moment /1000 weight (Continuous history of changes in structure or equipment affecting weight and balance) Page number 733 Arm Moment WT. (Ib.) /1000 Removed (-) (in.) Weight change Serial number WT. (Ib.) Moment 22 /1000 5 4342 45.8 52 33 Added (+) Arm 1145 (in.) er. 39 5 12 WT. (Ib.) 40 N x 42 10 ADF Receiver Antening Ant nodification Description of article or DNE As delivered 21-50112 Airplane model 68 NX KN63 ADE Out tem no. 5 3 Date 60 20 12/04 50 0585T1009

Figure 6-2

CESSNA MODEL 172S NAV III GFC 700 AFCS

WEIGHT AND BALANCE

The following information will enable you to operate your Cessna within the prescribed weight and center of gravity limitations. To determine weight and balance, use the Sample Loading Problem (Figure 6-3), Loading Graph (Figure 6-4), and Center of Gravity Moment Envelope (Figure 6-7) as follows:

Enter the appropriate basic empty weight and moment/1000 from the weight and balance records for your airplane in the YOUR AIRPLANE column of the Sample Loading Problem.

NOTE

In addition to the basic empty weight and moment noted on these records, the C.G. arm (FS) is also shown, but need not be used on the Sample Loading Problem. The moment which is shown must be divided by 1000 and this value used as the moment/1000 on the loading problem.

Use the Loading Graph to determine the moment/1000 for each additional item to be carried; then list these on the loading problem.

NOTE

Loading Graph information for the pilot, passengers and baggage is based on seats positioned for average occupants and baggage loaded in the center of the baggage areas as shown on the Loading Arrangements diagram. For loadings which may differ from these, the Sample Loading Problem lists fuselage stations (FS) for these items to indicate their forward and aft C.G. range limitations (seat travel and baggage area limitation). Refer to Figures 6-5 and 6-6 for additional loading information. Additional moment calculations, based on the actual weight and C.G. arm (FS) of the item being loaded, must be made if the position of the load is different from that shown on the Loading Graph.

Total the weights and moments/1000 and plot these values on the Center of Gravity Moment Envelope to determine whether the point falls within the envelope, and if the loading is acceptable.

(Continued Next Page)

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

WEIGHT AND BALANCE (Continued)

BAGGAGE TIEDOWN

A nylon baggage net having four tiedown straps is provided as standard equipment to secure baggage on the cabin floor aft of the rear seat (baggage area A) and in the aft baggage area (baggage area B). Six eyebolts serve as attaching points for the net. Two eyebolts for the forward tiedown straps are mounted on the cabin floor near each sidewall just forward of the baggage door approximately at station FS 90; two eyebolts are installed on the cabin floor slightly inboard of each sidewall approximately at FS 107; and two eyebolts are located below the aft window near each sidewall approximately at FS 107. A placard on the baggage door defines the weight limitations in the baggage areas.

When baggage area A is utilized for baggage only, the two forward floor mounted eyebolts and the two aft floor mounted eyebolts (or the two eyebolts below the aft window) may be used, depending on the height of the baggage. When baggage is carried in the baggage area B only, the aft floor mounted eyebolts and the eyebolts below the aft window should be used. When baggage is loaded in both areas, all six eyebolts should be utilized.

CESSNA MODEL 172S NAV III GFC 700 AFCS

SAMPLE LOADING PROBLEM

	WEIGHT AND MOMENT TABULATION				
ITEM DESCRIPTION	SAN AIRP	IPLE LANE	YOUR		
	Weight (lbs)	Moment (lb-ins/ 1000)	Weight (Ibs)	Moment (lb-ins/ 1000)	
 Basic Empty Weight (Use the data pertaining to your airplane as it is presently equipped. Includes unusable fuel and full oil) 	1642	62.6			
2 - Usable Fuel (At 6 Lbs./Gal.)					
- Standard Fuel - 53 Gallons Maximum					
- Reduced Fuel - 35 Gallons	210	10.1			
3 - Pilot and Front Passenger (FS 34 to 46)	340	12.6	1		
4 - Rear Passengers (FS 73)	310	22.6			
5 - *Baggage "A" (FS 82 to 108) 120 Pounds Maximum	56	5.3			
6 - *Baggage "B" (FS 108 to 142) 50 Pounds Maximum					
7 - RAMP WEIGHT AND MOMENT	2558	113.2	0		
8 - Fuel allowance for engine start, taxi and runup	-8.0	-0.4			
9 - TAKEOFF WEIGHT AND MOMENT (Subtract Step 8 from Step 7)	2550	112.8			

10 - Locate this point (2550 at 112.8) on the Center of Gravity Moment Envelope, and since this point falls within the envelope, the loading is acceptable.

*The maximum allowable combined weight capacity for baggage in areas "A" and "B" is 120 pounds.

Figure 6-3 (Sheet 1 of 2)

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

SAMPLE LOADING PROBLEM

YO AIRP	UR LANE		YOUR			YOUR AIRPLANE		
Weight (Ibs.)	Moment (Lb-ins, /1000)		Weight (Ibs.)	Moment (Lb-ins, /1000)		Weight (lbs.)	Moment (Lb-ins, /1000)	
		_						

NOTE

When several loading configurations are representative of your operations, it may be useful to fill out one or more of the above columns so specific loadings are available at a glance.

Figure 6-3 (Sheet 2)



LOADING GRAPH

NOTE

Line representing adjustable seats shows the pilot and front seat passenger center of gravity on adjustable seats positioned for average occupant. Refer to the Loading Arrangements diagram for forward and aft limits of occupant C.G. range.

Figure 6-4

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

LOADING ARRANGEMENTS



0585T1016

*Pilot and front seat passenger center of gravity on adjustable seats positioned for average occupant. Numbers in parentheses indicate forward and aft limits of occupant center of gravity range.

**Arm measured to the center of the areas shown.

NOTE

- The usable fuel C.G. arm is located at FS 48.00.
- The aft baggage wall (approximate FS 108.00) or aft baggage wall (approximate FS 142.00) can be used as a convenient interior reference point for determining the location of baggage area fuselage stations.
- To achieve an airplane loading within the utility category, it may be necessary to remove the rear passenger seat assembly from the airplane. Refer to Figure 6-9 for applicable weight and arm.

Figure 6-5

172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS



INTERNAL CABIN DIMENSIONS

.50 39.00
.00 21.00

NOTE

- Maximum allowable floor loading is 200 pounds per square foot.
- All dimensions shown are in inches.

Figure 6-6

CENTER OF GRAVITY MOMENT ENVELOPE



Figure 6-7

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

CENTER OF GRAVITY LIMITS



Figure 6-8

U.S.

172SPHBUS-00

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

COMPREHENSIVE EQUIPMENT LIST

Figure 6-9 is a comprehensive list of all Cessna equipment which is available for the Model 172S airplane equipped with Garmin G1000 Integrated Cockpit System and GFC 700 Autopilot (if installed) (Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On). This comprehensive equipment list provides the following information in column form:

In the **ITEM NO** column, each item is assigned a coded number. The first two digits of the code represent the identification of the item within Air Transport Association Specification 100 (11 for Paint and Placards; 24 for Electrical Power; 77 for Engine Indicating, etc.). These assignments also correspond to the Maintenance Manual chapter for the airplane. After the first two digits, items receive a unique sequence number (01, 02, 03, etc.). After the sequence number, a suffix letter is assigned to identify equipment as a required item, a standard item or an optional item.

Suffix letters are as follows:

- R = Required items or equipment for FAA certification (14 CFR 23 or 14 CFR 91).
- S = Standard equipment items.
- O = Optional equipment items replacing required or standard items.
- A = Optional equipment items which are in addition to required or standard items.

In the **EQUIPMENT LIST DESCRIPTION** column, each item is assigned a descriptive name to help identify its function.

In the **REF DRAWING** column, a Cessna drawing number is provided which corresponds to the item.

NOTE

If additional equipment is to be installed, it must be done in accordance with the reference drawing, service bulletin or a separate FAA approval.

In the **WT LBS** and **ARM INS** columns, information is provided on the weight (in pounds) and arm (in inches) of the equipment item.

NOTE

- Unless otherwise indicated, true values (not net change values) for the weight and arm are shown. Positive arms are distances aft of the airplane datum; negative arms are distances forward of the datum.
- Asterisks (*) in the weight and arm column indicate complete assembly installations. Some major components of the assembly are listed on the lines immediately following. The sum of these major components does not necessarily equal the complete assembly installation.

172SPHBUS-00

U.S. 6-17/6-18

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
	11 - PAINT AND PLACARDS	No.		
11-01-S	PAINT, OVERALL WHITE WITH COLOR STRIPE	0500531	19.2*	95.4*
	- OVERALL WHITE COLOR		18.4	91.5
	- COLOR STRIPING		0.8	135.9
	21 - AIR CONDITIONING			
21-01-S	VENTILATORS, ADJUSTABLE, CABIN AIR	0513575-2	1.7	60.0
21-02-S	CABIN HEATER SYSTEM, SHROUDED MUFFLER TYPE	0550365	2.5	-20.75
21-03-R	FORWARD AVIONICS COOLING FAN - MC24B3	3930379	0.5	12.4
21-04-R	AFT AVIONICS COOLING FAN	3940397	1.1	109.5
	22 - AUTO FLIGHT		Series Series	
22-01-O	GFC 700 AUTOPILOT		6.9	118.5
	- PITCH SERVO	3940475	2.3	150.6
	- PITCH TRIM SERVO	3940475	2.3	150.6
	- ROLL SERVO	3940474	2.3	54.2
	23 - COMMUNICATIONS	And some		
23-01-S	STATIC DISCHARGE WICKS, (SET OF 10)	0501048-1	0.4	143.2
23-02-R	AUDIO/INTERCOM/MARKER BEACON			-
	- GMA 1347 AUDIO PANEL	3930377	1.7	16.3
	- CI-102 MARKER BEACON ANTENNA	3960188	0.5	129.0
23-03-R	NAV/COM/GPS #1 COMPUTER	3921165		
	- GIA 63W INTEGRATED AVIONICS UNIT	3940397	5.2	113.3
	- CI 2580-200 VHF COMM/GPS ANTENNA	3960220	0.5	61.2
23-04-S	NAV/COM/GPS #2 COMPUTER	3921165		
	- GIA 63W INTEGRATED AVIONICS UNIT	3940397	5.2	113.3
	- CI 2580-200 VHF COMM/GPS ANTENNA	3960220	0.5	61.2
	- CI 420-10 XM ANTENNA	3960233	0.5	43.5
La L	24 - ELECTRICAL POWER			AR
24-01-R	ALTERNATOR, 28 VOLT, 60 AMP, -9910591-11	0550365	10.0	-29.0
24-02-R	BATTERY, 24 VOLT, 8.0 AMP HOUR	0518034	23.2	-5.0
24-03-R	POWER DISTRIBUTION MODULE - S3100-366	0518034	6.4*	-2.5*
	- ALTERNATOR CONTROL UNIT - AC2101	0518034	0.2	-2.5
	- MASTER CONTACTOR - X61-0007	0518034	0.7	-2.5
	- STARTER CONTACTOR - X61-0027	0518034	0.7	-2.5
	- AMMETER TRANSDUCER - CS3200	0518034	0.1	-2.0
24-04-S	BATTERY, STANDBY - AVT 200413	0518025	14.0	11.2

Figure 6-9 (Sheet 1 of 6)

172SPHBUS-01

U.S. 6-19

CESSNA MODEL 172S NAV III GFC 700 AFCS

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
	25 - EQUIPMENT/FURNISHINGS	Charles wanted		100000
25-01-R	SEAT, PILOT, ADJUSTABLE, LEATHER/VINYL COVER	0719025-4	33.0	41.5
25-02-S	SEAT, FRONT PASSENGER, ADJUSTABLE, LEATHER/VINYL COVER	0719025-4	33.0	41.5
25-03-S	SEAT, REAR PASSENGER, ONE-PIECE BACK, LEATHER/VINYL COVER	0519101-1	38.7	79.5
25-04-0	SEAT, REAR OBSERVER, ADJUSTABLE, LEATHER/VINYL COVER	0519109-2	27.9	72.5
25-07-R	SEAT BELT AND SHOULDER HARNESS, INERTIA REEL, AUTO ADJUST, PILOT AND FRONT PASSENGER	0519031-1	5.2	54.0
25-08-S	SEAT BELT AND SHOULDER HARNESS, INERTIA REEL, AUTO ADJUST, REAR SEAT	0519031-1	5.2	90.0
25-09-S	SUN VISOR (SET OF 2)	0514166-2	1.1	32.8
25-10-S	BAGGAGE RESTRAINT NET	2015009-7	0.5	95.0
25-11-S	CARGO TIEDOWN RINGS (SET OF 6)	0515055-6	0.2	95.0
25-12-S	TOW BAR, NOSE GEAR (STOWED)	0501019-1	1.7	124.0
25-13-R	PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL (STOWED IN FRONT PASSENGER'S SEAT BACK)	0500832-1	1.2	50.0
25-14-R	GARMIN G1000 COCKPIT REFERENCE GUIDE (STOWED IN COCKPIT SIDE PANEL POCKET)		1.5	15.0
25-15-0	APPROACH PLATE HOLDER	0519107-1	0.1	22.0
25-16-S	FUEL SAMPLING CUP	S2107-1	0.1	14.3
25-17-S	ARTEX ME406 - 2 FREQUENCY ELT	3940458-1	2.6*	134.6
	- ELT TRANSMITTER	ME406	2.1	135.5
	- ANTENNA AND CABLE ASSY	110-338	0.5	130.0
25-18-O	ARTEX C406-N - 3 FREQUENCY ELT	3940460-1	5.1*	135.0
	- ELT TRANSMITTER	C406-N	4.6	135.5
	- ANTENNA AND CABLE ASSY	110-338	0.5	130.0

Figure 6-9 (Sheet 2)

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
S. Siles	26 - FIRE PROTECTION	2		
26-01-S	FIRE EXTINGUISHER	0501011-2	5.3*	43.0*
	- FIRE EXTINGUISHER, HAND TYPE	A352GS	4.8	44.0
a desta	- MOUNTING CLAMP AND HARDWARE	1290010-1	0.5	42.2
	27 - FLIGHT CONTROLS			1.23
27-01-S	DUAL CONTROLS, RIGHT SEAT	0506008-1	5.5*	12.4*
	- CONTROL WHEEL, COPILOT	0513576-4	2.6	26.0
	- RUDDER AND BRAKE PEDAL, COPILOT	0510402-16	1.1	6.8
27-02-A	RUDDER PEDAL EXTENSION (SET OF 2)	0501082-1	2.0	8.0
	(INSTALLED ARM SHOWN)			
	28 - FUEL		ATTA-	
28-01-R	AUXILIARY FUEL PUMP - 5100-00-4	0516015	1.9	9.5
28-02-R	FUEL SENDER - 76-207-3	0522644	0.9	47.4
Summer Bank	30 - ICE AND RAIN PROTECTION	- Andrew Contraction		D.
30-01-S	PITOT HEAT	0523080	0.1	28.0
	31 - INDICATING/RECORDING SYSTEM		1	10000
31-01-S	RECORDING HOURMETER - C664503-0103	0506009	0.5	16.1
31-02-R	PNEUMATIC STALL WARNING SYSTEM	0523112	0.4	28.5
31-03-R	GEA 71 ENGINE/AIRFRAME UNIT	3930377	2.2	11.4
31-04-R	GTP 59 OUTSIDE AIR TEMPERATURE (OAT) PROBE	0518006	0.1	41.5
	32 - LANDING GEAR			
32-01-R	WHEEL BRAKE AND TIRE, 6.00 X 6 MAIN (2)	0541200-7, -8	34.4*	57.8*
	- WHEEL ASSY (EACH)	C163001-0104	6.2	58.2
	- BRAKE ASSY (EACH)	C163030-0111	1.8	54.5
	- TIRE, 6-PLY, 6.00 X 6, BLACKWALL (EACH)	C262003-0101	7.9	58.2
	- TUBE, (EACH)	C262023-0102	1.3	58.2
32-02-R	WHEEL AND TIRE ASSY, 5.00 X 5 NOSE	0543062-17	9.5*	-6.8*
	- WHEEL ASSY	1241156-12	3.5	-6.8
	- TIRE, 6-PLY, 5.00 X 5, BLACKWALL	C262003-0202	4.6	-6.8
	- TUBE	C262023-0101	1.4	-6.8
32-03-S	WHEEL FAIRING AND INSTALLATION	0541225-1	16.5*	46.1*
	- WHEEL FAIRING, NOSE	0543079-3	3.5	-3.5
	- WHEEL FAIRINGS, MAIN (SET OF 2)	0541223-1, -2	10.1	61.1
	- BRAKE FAIRINGS (SET OF 2)	0541224-1, -2	1.1	55.6
	- MOUNTING PLATE (SET OF 2)	0541220-1, -2	0.8	59.5

Figure 6-9 (Sheet 3)

172SPHBUS-01

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
	33 - LIGHTS		Transferra	
33-01-S	MAP LIGHT IN CONTROL WHEEL	0706015	0.2	22.0
33-02-S	COURTESY LIGHTS UNDER WING	0521101-8	0.5	61.0
33-03-S	FLASHING BEACON	0506003-6	1.4	240.7
33-04-R	STROBE LIGHT	0723628	3.4	43.3
33-05-S	LANDING AND TAXI LIGHT	0523029-7	2.8	26.6
· 第三人一世	34 - NAVIGATION	and the second		-
34-01-R	STANDBY AIRSPEED INDICATOR - S3325-6	0506009	0.7	16.2
34-02-R	STANDBY ATTITUDE INDICATOR - \$3326-2	0501135	2.2	14.0
34-03-R	STANDBY ALTIMETER, SENSITIVE WITH 20 FOOT MARKINGS, INCHES OF MERCURY AND MILLBARS - S3827-1	0506009	0.9	14.0
34-04-S	ALTERNATE STATIC AIR SOURCE	0501017-1	0.2	15.5
34-05-R	COMPASS, MAGNETIC	0513262-3	0.5	18.0
34-06-R	TRANSPONDER	3940397	3.1*	114.0*
	- GTX-33 TRANSPONDER	3910317	3.6	134.0
	- CI 105-16 TRANSPONDER ANTENNA	3960191	0.4	86.3
34-07-R	PFD DISPLAY	3930377		
	- GDU DISPLAY	3910317	6.4	16.26
34-08-R	MFD DISPLAY	3930377		
	- GDU DISPLAY	3910317	6.4	16.26
34-09-R	ATTITUDE HEADING REFERENCE SENSOR (AHRS)	3940397	2.5*	118.75
	- GRS 77 AHRS	3910317	2.4	134.0
	- GMU 44 MAGNETOMETER	3940398	0.3	52.7
34-10-R	AIR DATA COMPUTER	3940397	1.7*	118.69
	- GDC 74A AIR DATA COMPUTER	3910317	1.7	11.4
34-11-S	GDL-69A DATALINK	3940397	4.0	47.0
34-12-0	AUTOMATIC DIRECTION FINDER (ADF)		8.2*	26.9*
	- KR 87 ADF RECEIVER	3930494	3.2	12.1
	- ADF ANTENNA	3960187	4.2	39.3
34-13-0	DISTANCE MEASURING EQUIPMENT (DME)		3.2*	146.9*
	- KN 63 REMOTE DME	3940448	2.8	154.0
	- CI 105-16 DME ANTENNA	3960231	0.4	114.5

Figure 6-9 (Sheet 4)

SECTION 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
	37 - VACUUM		2	
37-01-R	ENGINE DRIVEN VACUUM PUMP			
	- VACUUM PUMP - AA3215CC	0501135	2.1	-5.0
	- COOLING SHROUD	1201998-1	0.2	-5.6
	- FILTER	1201075-2	0.3	2.0
	- VACUUM REGULATOR	AA2H3-2	0.5	2.0
37-02-R	VACUUM TRANSDUCER - P165-5786	0501135	0.3	10.3
	53 - FUSELAGE		5.4	
53-01-S	REFUELING STEPS AND HANDLE	0513415-2	1.7	16.3
	56 - WINDOWS			No.
56-01-S	WINDOW, HINGED RIGHT SIDE (NET CHANGE)	0517001-40	2.3*	48.5
56-02-S	WINDOW, HINGED LEFT SIDE (NET CHANGE)	0517001-39	2.3*	48.5
	61 - PROPELLER			1665
61-01-R	FIXED PITCH PROPELLER ASSEMBLY	0550320-18	38.8*	-38.2*
	- MCCAULEY 76 INCH PROPELLER	IA170E/JHA7660	35.0	-38.4
	- MCCAULEY 3.5 INCH PROPELLER SPACER	C5464	3.6	-36.0
61-02-R	SPINNER INSTALLATION, PROPELLER	0550320-11	1.8*	-41.0*
	- SPINNER DOME ASSEMBLY	0550236-14	1.0	-42.6
	- FWD SPINNER BULKHEAD	0552231-1	0.3	-40.8
	- AFT SPINNER BULKHEAD	0550321-10	0.4	-37.3
	71 - POWERPLANT	The second se		11.12
71-01-R	FILTER, INDUCTION AIR	0550365	0.6	-27.5
71-02-0	WINTERIZATION KIT INSTALLATION (STOWED) (INSTALLED ARM SHOWN)	0501128-3	0.8*	-20.3*
	- BREATHER TUBE INSULATION	0552011	0.4	-13.8
	- COWL INLET COVERS (INSTALLED)	0552229-3, -4	0.3	-32.0
	- COWL INLET COVERS (STOWED)	0552229-3, -4	0.3	95.0
	72 - ENGINES			
72-01-R	ENGINE, LYCOMING IO-360-L2A	0550365	297.8*	-18.6*

Figure 6-9 (Sheet 5)

172SPHBUS-01

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WT LBS	ARM INS.
	73 - ENGINE FUEL AND CONTROL		HOLE	
73-01-R	FUEL FLOW TRANDUCER - 680501K	0501168	0.8	-22.6
	77 - ENGINE INDICATING			12 34
77-01-R	ENGINE TACHOMETER SENSOR - 1A3C-2	0501168	0.2	-8.0
77-02-S	CYLINDER HEAD THERMOCOUPLES	0501168	0.2	-12.0
	(ALL CYLINDERS) - 32DKWUE006F0126			
77-03-S	EXHAUST THERMOCOUPLES	0501168	0.3	-12.0
	(ALL CYLINDERS) - 86317			
	78 - EXHAUST	STORE THE STORE	1.11	10, 143
78-01-R	EXHAUST SYSTEM	9954100-1	16.3*	-20.0*
	- MUFFLER AND TAILPIPE WELD ASSEMBLY	9954100-2	4.6	-22.7
	- SHROUD ASSEMBLY, MUFFLER HEATER	9954100-3	0.8	-22.7
	79 - OIL	Hart Harting	12000	11 Million State
79-01-R	OIL COOLER - 10877A	0550365	3.3	-11.0
79-02-R	OIL PRESSURE SENSOR - P165-5281	0550365	0.2	-12.9
79-03-R	OIL TEMPERATURE SENSOR - S2335-1	0550365	0.2	-8.5

Figure 6-9 (Sheet 6)

T

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

AIRPLANE AND SYSTEMS DESCRIPTION

TABLE OF CONTENTS

Page

Introduction
Airframe
Flight Controls
Trim Systems
Instrument Panel
Pilot Panel Lavout
Center Panel Lavout
Right Panel Lavout
Center Pedestal Lavout 7-13
Flight Instruments 7-16
Attitude Indicator 7-17
Airspeed Indicator 7-18
Altimeter 7-18
Harizontal Situation Indicator 7-10
Vortical Speed Indicator 7-20
Cround Control 7.21
Wing Elan System
Villy Flap System
Landing Gear System
Seats
Integrated Seat Belt/Shoulder Harness
Entrance Doors And Cabin Windows
Control Locks
Engine
Engine Controls
Engine Instruments7-30
RPM (Tachometer)7-31
Fuel Flow
Oil Pressure
Oil Temperature

(Continued Next Page)

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

TABLE OF CONTENTS (Continued)

Page

Cylinder Head Temperature	7-34
Exhaust Gas Temperature	7-34
New Engine Break-In And Operation	7-35
Engine Lubrication System	7-35
Ignition And Starter System	7-36
Air Induction System	7-36
Exhaust System	7-37
Fuel Injection System	7-37
Cooling System	7-37
Propeller	7-37
Fuel System	7-38
Fuel Distribution.	7-39
Fuel Indicating System	7-39
Fuel Calculations	7-41
Auxiliary Fuel Pump Operation	7-43
Fuel Beturn System	7-44
Fuel Venting.	7-44
Reduced Tank Capacity. 7	7-44
Fuel Selector Valve	7-45
Fuel Drain Valves	7-46
Brake System 7	7-46
Electrical System	7-47
G1000 Annunciator Panel	7-51
Master Switch 7	7-51
Standby Battery Switch 7	7-52
Avionics Switch	7-52
Flectrical System Monitoring And Annunciations	7-53
Bus Voltage (Voltmeters)	7-53
Ammeters 7	-50
Standby Battery Annunciation	7-54
Low Voltage Annunciation	7-55
High Voltage Annunciation	7-56
Circuit Brookers And Fuses	-50
External Dower Recentacle	-57
	-20

(Continued Next Page)

U.S.

CESSNA GFC 700 AFCS

SECTION 7 MODEL 172S NAV III AIRPLANE AND SYSTEM DESCRIPTION

TABLE OF CONTENTS (Continued)

	Page
Lighting Systems . Exterior Lighting . Interior Lighting . Cabin Heating, Ventilating And Defrosting System . Pitot-Static System And Instruments . Vacuum System And Instruments . Attitude Indicator . Vacuum Indicator .	.7-59 .7-60 .7-62 .7-64 .7-65 .7-65 .7-65
Low Vacuum Annunciation	.7-65
Clock/O.A.T. Indicator	.7-67
Stall Warning System	.7-67
Standard Avionics	.7-68
Garmin Display Units (GDU)	.7-68
Audio Panel (GMA)	.7-69
Attitude and Heading Reference System (AHRS)	.7-69
and Magnetometer (GRS)	7-60
Air Data Computer (GDC)	7-70
Engine Monitor (GEA)	7-70
Transponder (GTX)	.7-70
XM Weather and Radio Data Link (GDL)	.7-71
GFC 700 Automatic Flight Control System (AFCS) (if installed)	.7-71
Control Wheel Steering (CWS)	.7-71
Avionics Support Equipment	.7-73
Avionics Cooling Fans	.7-73
Antennas	.7-74
Microphone And Headset Installations	.7-75
Auxiliary Audio Input Jack	.7-76
12V Power Outlet	.7-77
Static Dischargers	.7-78
Cabin Features	.7-79
Emergency Locator Transmitter (ELT)	. /-/9
Carbon Manavida Detection System	.1-19
	. / -00

7-3/7-4

INTRODUCTION

This section provides description and operation of the airplane and its systems. Some equipment described herein is optional and may not be installed in the airplane. Refer to Section 9, Supplements, for details of other optional systems and equipment.

AIRFRAME

The airplane is an all metal, four-place, high wing, single-engine airplane equipped with tricycle landing gear and is designed for general utility and training purposes.

The construction of the fuselage is a conventional formed sheet metal bulkhead, stringer, and skin design referred to as semimonocoque. Major items of structure are the front and rear carry through spars to which the wings are attached, a bulkhead and forgings for main landing gear attachment at the base of the rear door posts, and a bulkhead with attach fittings at the base of the forward door posts for the lower attachment of the wing struts. Four engine mount stringers are also attached to the forward door posts and extend forward to the firewall.

The externally braced wings, containing integral fuel tanks, are constructed of a front and rear spar with formed sheet metal ribs, doublers, and stringers. The entire structure is covered with aluminum skin. The front spars are equipped with wing-to-fuselage and wing-to-strut attach fittings. The aft spars are equipped with wing-to-fuselage attach fittings, and are partial span spars. Conventional hinged ailerons and single slot type flaps are attached to the trailing edge of the wings. The ailerons are constructed of a forward spar containing balance weights, formed sheet metal ribs and V type corrugated aluminum skin joined together at the trailing edge. The flaps are constructed basically the same as the ailerons, with the exception of the balance weights and the addition of a formed sheet metal leading edge section.

The empennage (tail assembly) consists of a conventional vertical stabilizer, rudder, horizontal stabilizer, and elevator. The vertical stabilizer consists of a spar, formed sheet metal ribs and reinforcements, a wraparound skin panel, formed leading edge skins and a dorsal.

(Continued Next Page)

172SPHBUS-00

U.S.

7-5

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

AIRFRAME (Continued)

The rudder is constructed of a formed leading edge skin and spar with attached hinge brackets and ribs, a center spar, a wrap around skin, and a ground adjustable trim tab at the base of the trailing edge. The top of the rudder incorporates a leading edge extension which contains a balance weight.

The horizontal stabilizer is constructed of a forward and aft spar, ribs and stiffeners, center, left, and right wrap around skin panels, and formed leading edge skins. The horizontal stabilizer also contains the elevator trim tab actuator.

Construction of the elevator consists of formed leading edge skins, a forward spar, aft channel, ribs, torque tube and bellcrank, left upper and lower "V" type corrugated skins, and right upper and lower "V" type corrugated skins incorporating a trailing edge cutout for the trim tab. The elevator tip leading edge extensions incorporate balance weights. The elevator trim tab consists of a spar, rib, and upper and lower "V" type corrugated skins.

FLIGHT CONTROLS

The airplane's flight control system, Refer to Figure 7-1, consists of conventional aileron, rudder, and elevator control surfaces. The control surfaces are manually operated through cables and mechanical linkage using a control wheel for the ailerons and elevator, and rudder/brake pedals for the rudder.

TRIM SYSTEMS

A manually operated elevator trim system is provided on this airplane, Refer to Figure 7-1. Elevator trimming is accomplished through the elevator trim tab by utilizing the vertically mounted trim control wheel on the center pedestal. Forward rotation of the trim wheel will trim nose down, conversely, aft rotation will trim nose up.

(Continued Next Page)

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

FLIGHT CONTROLS AND TRIM SYSTEM

B3106



Rudder Control System Figure 7-1 (Sheet 1 of 2)

172SPHBUS-00

CESSNA GFC 700 AFCS

SECTION 7 MODEL 172S NAV III AIRPLANE AND SYSTEM DESCRIPTION

FLIGHT CONTROLS AND TRIM SYSTEMS

B3107



Elevator Trim Control System

Figure 7-1 (Sheet 2)

172SPHBUS-00

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

INSTRUMENT PANEL

The instrument panel, Refer to Figure 7-2, is of all metal construction and is installed in sections so equipment can be easily removed for maintenance. The glareshield, above and projecting aft from the instrument panel, limits undesirable reflections on the windshield from lighted equipment and displays mounted in the instrument panel.

The Nav III instrument panel contains the Garmin Display Unit (GDU) Primary Flight Display (PFD) and Multifunction Display (MFD) and the Garmin Audio Panel. For specific details regarding the instruments, switches, circuit breakers and controls on the instrument panel, refer to the related topics in this section.

PILOT PANEL LAYOUT

The PFD, centered on the instrument panel in front of the pilot, shows the primary flight instruments during normal operation. During engine start, reversionary operation (MFD failure), or when the DISPLAY BACKUP switch is selected, the Engine Indication System (EIS) is shown on the PFD. Refer to the Garmin G1000 Cockpit Reference Guide (CRG) for specific operating information.

The Standby Battery (STBY BATT) switch is found at the upper left corner of the pilot instrument panel on an internally lighted subpanel. The switch positions (ARM/OFF/TEST) select the standby battery operating modes. The rocker-type MASTER and AVIONICS switches are found immediately below the standby battery switch.

The controls for adjusting instrument panel, equipment, and pedestal lighting are found together on the subpanel below the MASTER and AVIONICS switches. See the INTERNAL LIGHTING paragraphs of this section for more information.

(Continued Next Page)

7-10

INSTRUMENT PANEL (Continued)

PILOT PANEL LAYOUT (Continued)

Switches for the airplane electrical systems and equipment are found on an internally lighted subpanel found below the lower left corner of the PFD. Each switch is labeled for function and is ON when the handle is in the up position. See the ELECTRICAL EQUIPMENT descriptions in this section for further information.

The circuit breaker panel is found along the lower edge of the pilot's instrument panel below the electrical equipment switch panel and pilot control wheel column. Each circuit breaker is identified for the equipment or function it controls and for the bus from which it receives power. Lighting for this subpanel is controlled using the SW/CB PANELS dimmer control. See the ELECTRICAL EQUIPMENT descriptions in this section for further information.

CENTER PANEL LAYOUT

The Garmin audio panel is found on the upper half of the center instrument panel, immediately to the right of the PFD. A pushbutton switch labeled DISPLAY BACKUP, to manually select display reversion mode, is found on the lower face of the audio panel. Refer to the Garmin G1000 CRG for operating information.

The MFD is found on the upper center panel to the right of the audio panel. The MFD depicts EIS information along the left side of the display and shows navigation, terrain, lightning and traffic data on the moving map. Flight management or display configuration information can be shown on the MFD in place of the moving map pages. Refer to the Garmin G1000 CRG for operating information.

(Continued Next Page)

U.S.

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

CESSNA MODEL 172S NAV III GFC 700 AFCS

INSTRUMENT PANEL (Continued)

CENTER PANEL LAYOUT (Continued)

The standby instrument cluster is in the center instrument panel below the audio panel. A conventional (mechanical) airspeed indicator and a sensitive aneroid altimeter are on each side of the vacuum-powered attitude indicator. The pitot-static instruments share the airplane pitot head and static ports with the air data computer. The attitude indicator features a low vacuum flag to provide immediate warning of vacuum system failure.

The engine controls are found on the lower center instrument panel below the standby instrument cluster. The controls are conventional push-pull-type controls for throttle and mixture. See ENGINE description in this section for operating information.

The alternate static air valve is found adjacent to the throttle control. Refer to the PITOT-STATIC SYSTEM AND INSTRUMENTS description in this section for operating information.

The wing flap control lever and indicator are found at the lower right side of the center panel. Refer to the WING FLAP SYSTEM description in this section for operating information.

(Continued Next Page)

INSTRUMENT PANEL (Continued)

RIGHT PANEL LAYOUT

The Emergency Locator Transmitter (ELT) remote switch (ON/ARM/ TEST RESET) is positioned at the upper inboard corner of the right panel adjacent to the MFD. Refer to Section 9, Supplements 1 or 2 for appropriate ELT operating information.

The Hour (Hobbs) meter is found to the right of the ELT switch and records engine operating time, when oil pressure is greater than 20 PSI, for maintenance purposes. Refer to the ENGINE INSTRUMENTS description in this section for further information.

CENTER PEDESTAL LAYOUT

The center pedestal, located below the center panel, contains the elevator trim control wheel, trim position indicator, 12V power outlet, aux audio input jack, fuel shutoff valve, and the hand-held microphone. The fuel selector valve handle is located at the base of the pedestal.

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION CESSNA MODEL 172S NAV III GFC 700 AFCS

INSTRUMENT PANEL



SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

INSTRUMENT PANEL

- 1. MASTER Switch (ALT and BAT)
- 2. STBY BATT Switch
- 3. STBY BATT Test Annunciator
- 4. AVIONICS Switch (BUS 1 and BUS 2)
- 5. Primary Flight Display
- 6. Standby Airspeed Indicator
- 7. Audio Control Panel
- 8. Standby Attitude Indicator
- 9. Standby Altimeter
- 10. Multifunction Display
- 11. ELT Remote Switch/Annunciator
- 12. Flight Hour Recorder
- 13. Bendix/King KR87 Automatic Direction Finder (if installed)
- 14. Microphone Button
- 15. Glove Box
- 16. Cabin Heat Control
- 17. Cabin Air Control
- 18. Wing Flap Control Lever And Position Indicator
- 19. Mixture Control Knob
- 20. Handheld Microphone
- 21. Fuel Shutoff Valve
- 22. Fuel Selector Valve
- 23. 12V/10A Power Outlet
- 24. Aux Audio Input Jack
- 25. Elevator Trim Control Wheel And Position Indicator
- 26. Throttle Control Knob (With Friction Lock)
- 27. Go-Around Button
- 28. ALT Static Air Valve Control
- 29. Yoke Mounted Map Light
- 30. Parking Brake Handle
- 31. Circuit Breaker Panel
- 32. Electrical Switch Panel
- 33. MAGNETOS/START Switch
- 34. DIMMING Panel

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION CESSNA MODEL 172S NAV III GFC 700 AFCS

FLIGHT INSTRUMENTS

The G1000 Integrated Cockpit System primary flight instrument indications are shown on the PFD. The primary flight instruments are arranged on the PFD in the basic T configuration. The Attitude Indicator (AI) and Horizontal Situation Indicator (HSI) are centered vertically on the PFD and are conventional in appearance and operation. Vertical tape-style (scrolling scale) indicators with fixed pointers and digital displays, show airspeed, altitude, and vertical speed. The vertical indicators take the place of analog indicators with a fixed circular scale and rotating pointer.

Knobs, knob sets (two knobs on a common shaft) and membrane type push button switches, found on the bezel surrounding each GDU display, control COM, NAV, XPDR, AUTOPILOT (if installed) and GPS avionics, set BARO (barometric pressure), CRS (course), and HDG (heading), and work various flight management functions. Some push button switches are dedicated to certain functions (keys) while other switches have functions defined by software (softkeys). A softkey may perform various operations or functions at various times based on software definition. Softkeys are found along the lower bezel of the GDU displays.

(Continued Next Page)
FLIGHT INSTRUMENTS (Continued)

ATTITUDE INDICATOR

The G1000 attitude indicator is shown on the upper center of the PFD. The attitude indication data is provided by the Attitude and Heading Reference System (AHRS). The G1000 attitude indicator provides a horizon line that is the full width of the GDU display.

The roll index scale is conventional with 10° graduations to 30° and then 15° graduations to 60° of roll. The roll pointer is slaved to the airplane symbol. The pitch index scale is graduated in 5° increments with every 10° of pitch labeled. If pitch limits are exceeded in either the nose-up or nose-down direction, red warning chevrons will appear on the indicator to point the way back to level flight. A small white trapezoid located below the roll pointer moves laterally left and right to provide the slip-skid information previously supplied by the skid indicator ball. The trapezoid should be centered below the roll pointer for coordinated turns. The standby (vacuum) attitude indicator is found on the lower center instrument panel.

(Continued Next Page)

172SPHBUS-00

U.S.

7-17

CESSNA MODEL 172S NAV III GFC 700 AFCS

FLIGHT INSTRUMENTS (Continued)

AIRSPEED INDICATOR

The G1000 vertical tape airspeed indicator is shown along the upper left side of the PFD. The airspeed indication data is provided by the air data computer unit. Colored bands are provided to indicate the maximum speed, high cruise speed caution range, normal operating range, full wing flap operating range and low airspeed awareness band. Calculated true airspeed is displayed in a window at the bottom edge of the airspeed tape.

The standby (pneumatic) airspeed indicator is found on the lower center instrument panel. Colored arcs are provided to indicate the maximum speed, high cruise speed caution range, normal operating range, full wing flap operating range and low airspeed awareness band.

ALTIMETER

The primary altitude indicator (altimeter) is found along the right side of the attitude indicator on the PFD. The altitude indication data is provided by the air data computer unit. The local barometric pressure is set using the BARO knob on the GDU displays.

A cyan selectable altitude reference pointer, bug, is displayed on the altimeter tape and is set using the ALT SEL knob on the GDU displays. The altitude bug set-point is shown in a window at the top edge of the altimeter.

The standby (aneroid) sensitive altimeter is found on the lower center instrument panel.

(Continued Next Page)

172SPHBUS-00

FLIGHT INSTRUMENTS (Continued)

HORIZONTAL SITUATION INDICATOR

The Horizontal Situation Indicator (HSI) is found along the lower center area of the PFD. The heading indication data is provided by the AHRS and magnetometer units. The HSI combines a stabilized magnetic direction indicator (compass card) with selectable navigation deviation indicators for GPS or VHF navigation. The HSI is conventional in appearance and operation.

Magnetic heading is shown numerically in a window centered above the heading index (lubber line) at the top of the HSI. Reference index marks are provided at 45° intervals around the compass card. A circular segment scale below the heading window at the top of the HSI shows half and standard rates of turn based on the length of the magenta turn vector.

The cyan HSI heading reference pointer, bug, is set using the HDG knob on the GDU display. The selected heading is shown digitally in a window above the upper left 45° index mark. The selected heading will provide control input to the autopilot, if installed, when engaged in HDG mode.

The CDI navigation source shown on the HSI is set using the CDI softkey to select from GPS, NAV 1 or NAV 2 inputs. The course reference pointer is set using the CRS knob on the GDU display. The selected course is shown digitally in a window above the upper right 45° index mark. The selected navigation source will provide control input to the autopilot, if installed, when engaged in NAV, APR or BC mode and it is receiving a navigation signal from the selected GPS or VHF NAV radios.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

FLIGHT INSTRUMENTS (Continued)

HORIZONTAL SITUATION INDICATOR (Continued)

WARNING

WHEN THE AUTOPILOT IS ENGAGED IN NAV. APR OR BC OPERATING MODES, IF THE HSI NAVIGATION SOURCE IS CHANGED MANUALLY, USING THE CDI SOFTKEY. THE CHANGE WILL INTERRUPT THE NAVIGATION SIGNAL TO THE AUTOPILOT AND WILL CAUSE THE AUTOPILOT TO REVERT TO ROL MODE OPERATION. NO AURAL ALERT WILL BE PROVIDED. IN ROL MODE, THE AUTOPILOT WILL ONLY KEEP THE WINGS LEVEL AND WILL NOT CORRECT THE AIRPLANE HEADING OR COURSE. SET THE HDG BUG TO THE CORRECT HEADING AND SELECT THE CORRECT NAVIGATION SOURCE ON THE HSI, USING THE CDI SOFTKEY, BEFORE ENGAGING THE AUTOPILOT IN ANY OTHER OPERATING MODE.

VERTICAL SPEED INDICATOR

The Vertical Speed Indicator (VSI) tape is found on the right side of the altimeter display along the upper right side of the PFD. The vertical speed pointer moves up and down the fixed VSI scale and shows the rate of climb or descent in digits inside the pointer. The VSI tape has a notch on the right edge at the 0 feet/min index for reference. Rate of descent is shown with a negative sign in front of the digits. Vertical speed must exceed 100 feet/min in climb or descent before digits will appear in the VSI pointer.

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

GROUND CONTROL

Effective ground control while taxiing is accomplished through nosewheel steering by using the rudder pedals; left rudder pedal to steer left and right rudder pedal to steer right. When a rudder pedal is depressed, a spring loaded steering bungee, which is connected to the nose gear and to the rudder bars, will turn the nosewheel through an arc of approximately 10° each side of center. By applying either left or right brake, the degree of turn may be increased up to 30° each side of center.

Moving the airplane by hand is most easily accomplished by attaching a towbar to the nose gear strut. If a towbar is not available, or pushing is required, use the wing struts as push points. Do not use the vertical or horizontal surfaces to move the airplane. If the airplane is to be towed by vehicle, never turn the nosewheel more than 30° either side of center or structural damage to the nose gear could result.

The minimum turning radius of the airplane, using differential braking and nosewheel steering during taxi, is approximately 27 feet. To obtain a minimum radius turn during ground handling, the airplane may be rotated around either main landing gear by pressing down on a tailcone bulkhead just forward of the horizontal stabilizer to raise the nosewheel off the ground. Care should be exercised to ensure that pressure is exerted only on the bulkhead area and not on skin between the bulkheads. Pressing down on the horizontal stabilizer to raise the nosewheel off the ground is not recommended.

CESSNA MODEL 172S NAV III GFC 700 AFCS

WING FLAP SYSTEM

The single slot type wing flaps, Refer to Figure 7-3, are extended or retracted by positioning the wing flap control lever on the instrument panel to the desired flap deflection position. The wing flap control lever is moved up or down in a slotted panel that provides mechanical stops at the 10°, 20° and FULL positions. To change flap setting, the wing flap control lever is moved to the right to clear mechanical stops at the 10° and 20° positions. A scale and pointer to the left of the wing flap control lever indicates flap travel in degrees. The wing flap system circuit is protected by a 10-ampere circuit breaker, labeled FLAP, on the left side of the circuit breaker panel.

B3109



LANDING GEAR SYSTEM

The landing gear is of the tricycle type, with a steerable nosewheel and two main wheels. Wheel fairings are standard equipment for both the main wheels and nosewheel. Shock absorption is provided by the tubular spring steel main landing gear struts and the air/oil nose gear shock strut. Each main gear wheel is equipped with a hydraulicallyactuated disc type brake on the inboard side of each wheel.

BAGGAGE COMPARTMENT

The baggage compartment consists of two areas, one extending from behind the rear passengers seat to the aft cabin bulkhead, and an additional area aft of the bulkhead. Access to both baggage areas is gained through a lockable baggage door on the left side of the airplane, or from within the airplane cabin. A baggage net with tiedown straps is provided for securing baggage and is attached by tying the straps to tiedown rings provided in the airplane. For baggage area and door dimensions, refer to Section 6.

CESSNA MODEL 172S NAV III GFC 700 AFCS

SEATS

The seating arrangement consists of two vertically adjusting crew seats for the pilot and front seat passenger, and a single bench seat with adjustable back for rear seat passengers.

Seats used for the pilot and front seat passenger are adjustable forward and aft, and up and down. Additionally, the angle of the seat back is infinitely adjustable.

Forward and aft adjustment is made using the handle located below the center of the seat frame. To position the seat, lift the handle, slide the seat into position, release the handle and check that the seat is locked in place. To adjust the height of the seat, rotate the large crank under the right corner of the seat until a comfortable height is obtained. To adjust the seat back angle, pull up on the release button, located in center front of seat, just under the seat bottom, position the seat back to the desired angle, and release the button. When the seat is not occupied, the seat back will automatically fold forward whenever the release button is pulled up.

The rear passenger seat consists of a fixed, one piece seat bottom and a three-position reclining back. The reclining back is adjusted by a lever located below the center of the seat frame. To adjust the seat back, raise the lever, position the seat back to the desired angle, release the lever, and check that the seat back is securely locked in place.

Headrests are installed on both the front and rear seats. To adjust the headrest, apply enough pressure to it to raise or lower it to the desired level.

INTEGRATED SEAT BELT/SHOULDER HARNESS

All seat positions are equipped with integrated seat belts/shoulder harness assemblies, Refer to Figure 7-4. The design incorporates an overhead inertia reel for the shoulder portion, and a retractor assembly for the lap portion of the belt. This design allows for complete freedom of movement of the upper torso area while providing restraint in the lap belt area. In the event of a sudden deceleration, reels lock up to provide positive restraint for the user.

In the front seats, the inertia reels are located on the centerline of the upper cabin area. In the rear seats, the inertia reels are located outboard of each passenger in the upper cabin.

To use the integrated seat belt/shoulder harness, grasp the link with one hand, and, in a single motion, extend the assembly and insert into the buckle. Positive locking has occurred when a distinctive "snap" sound is heard.

Proper locking of the lap belt can be verified by ensuring that the belts are allowed to retract into the retractors and the lap belt is snug and low on the waist as worn normally during flight. No more than one additional inch of belt should be able to be pulled out of the retractor once the lap belt is in place on the occupant. If more than one additional inch of belt can be pulled out of the retractor, the occupant is too small for the installed restraint system and the seat should not be occupied until the occupant is properly restrained.

Removal is accomplished by pressing the release button on the buckle and pulling out and up on the harness. Spring tension on the inertia reel will automatically stow the harness.

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

INTEGRATED SEAT BELT/SHOULDER HARNESS



Figure 7-4*

ENTRANCE DOORS AND CABIN WINDOWS

Entry to and exit from the airplane is accomplished through either of two entry doors, one on each side of the cabin, at the front seat positions, Refer to Section 6 for cabin and cabin door dimensions. The doors incorporate a recessed exterior door handle, a conventional interior door handle, a key operated door lock, left door only, a door stop mechanism, and openable windows in both the left and right doors.

NOTE

The door latch design on this model requires that the outside door handle on the pilot and front passenger doors be extended out whenever the doors are open. When closing the door, do not attempt to push the door handle in until the door is fully shut.

To open the doors from outside the airplane, utilize the recessed door handle near the aft edge of either door by grasping the forward edge of the handle and pulling outboard. To close or open the doors from inside the airplane, use the combination door handle and arm rest. The inside door handle has three positions and a placard at its base which reads OPEN, CLOSE, and LOCK. The handle is spring loaded to the CLOSE (up) position. When the door has been pulled shut and latched, lock it by rotating the door handle forward to the LOCK position (flush with the arm rest). When the handle is rotated to the LOCK position, an over center action will hold it in that position. Both cabin doors should be locked prior to flight, and should not be opened intentionally during flight.

NOTE

Accidental opening of a cabin door in flight, due to improper closing, does not constitute a need to land the airplane. The best procedure is to set up the airplane in a trimmed condition at approximately 75 KIAS, momentarily shove the door outward slightly, and forcefully close and lock the door.

(Continued Next Page)

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

ENTRANCE DOORS AND CABIN WINDOWS

(Continued)

Exit from the airplane is accomplished by rotating the door handle from the LOCK position, past the CLOSE position, aft to the OPEN position and pushing the door open. To lock the airplane, lock the right cabin door with the inside handle, close the left cabin door, and using the ignition key, lock the door.

The left and right cabin doors are equipped with openable windows which are held in the closed position by a detent equipped latch on the lower edge of the window frame. To open the windows, rotate the latch upward. Each window is equipped with a spring-loaded retaining arm which will help rotate the window outward, and hold it there. If required, either window may be opened at any speed up to 163 KIAS. The rear side windows and rear windows are of the fixed type and cannot be opened.

CONTROL LOCKS

A control lock is provided to lock the aileron and elevator control surfaces to prevent damage to these systems by wind buffeting while the airplane is parked. The lock consists of a shaped steel rod and flag. The flag identifies the control lock and cautions about its removal before starting the engine. To install the control lock, align the hole in the top of the pilot's control wheel shaft with the hole in the top of the shaft collar on the instrument panel and insert the rod into the aligned holes. Installation of the lock will secure the ailerons in a neutral position and the elevators in a slightly trailing edge down position. Proper installation of the lock will place the flag over the ignition switch. In areas where high or gusty winds occur, a control surface lock should be installed over the vertical stabilizer and rudder. The control lock and any other type of locking device should be removed prior to starting the engine.

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION

ENGINE

The airplane is powered by a direct drive, horizontally opposed, four cylinder, overhead valve, air cooled, fuel injected engine with a wet sump lubrication system. The engine is a Lycoming Model IO-360-L2A rated at 180 horsepower at 2700 RPM. Major accessories include a starter and belt driven alternator mounted on the front of the engine, dual magnetos, vacuum pump, engine driven fuel pump, and a full flow oil filter mounted on the rear of the engine accessory case.

ENGINE CONTROLS

Engine power is set using the throttle control. The throttle control is a smooth black knob located at the center of the instrument panel below the standby instruments. The throttle control is configured so that the throttle is open in the forward position and closed in the full aft position. A friction lock, located at the base of the throttle, is operated by rotating the lock clockwise to increase friction or counterclockwise to decrease friction.

Engine fuel mixture is controlled by the mixture control. The mixture control is a red knob, with raised points around the circumference, located immediately to the right of the throttle control and is equipped with a lock button in the end of the knob. The rich position is full forward, and full aft is the idle cutoff position. For small adjustments, the control may be moved forward by rotating the knob clockwise, and aft by rotating the knob counterclockwise. For rapid or large adjustments, the knob may be moved forward or aft by depressing the lock button in the end of the control, and then positioning the control as desired.

(Continued Next Page)

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

ENGINE (Continued)

ENGINE INSTRUMENTS

The G1000 Engine Indication System (EIS) provides graphical indicators and numeric values for engine, fuel, and electrical system parameters to the pilot. The EIS is shown in a vertical strip on the left side of the PFD during engine starts and on the MFD during normal operation. If either the MFD or PFD fails during flight, the EIS is shown on the remaining display.

The EIS consists of three pages that are selected using the ENGINE softkey. The ENGINE page provides indicators for Tachometer (RPM), Fuel Flow (FFLOW GPH), Oil Pressure (OIL PRES), Oil Temperature (OIL TEMP), Exhaust Gas Temperature (EGT), Vacuum (VAC), Fuel Quantity (FUEL QTY GAL), Engine Hours (ENG HRS), Electrical Bus Voltages (VOLTS), and Battery Currents (AMPS). When the ENGINE softkey is pressed, the LEAN and SYSTEM softkeys appear adjacent to the ENGINE softkey. The LEAN page provides simultaneous indicators for Exhaust Gas Temperature (EGT °F) and Cylinder Head Temperature (CHT °F) on all cylinders to be used for adjusting, or leaning, the fuel/air mixture along with a digital value for FFLOW GPH and a indicator for FUEL QTY GAL. The SYSTEM page provides numerical values for parameters on the ENGINE page that are shown as indicators only. The SYSTEM page also provides a digital value for Fuel Used (GAL USED) and Fuel Remaining (GAL REM).

The engine and airframe unit, located forward of the instrument panel, receives signals from the engine/system sensors for the parameters that are being monitored. The engine and airframe unit provides data to the EIS, which displays the data for the ENGINE page described on the following pages.

ENGINE (Continued)

ENGINE INSTRUMENTS (Continued)

RPM (TACHOMETER)

Engine speed (RPM) is shown by the tachometer indicator found on all EIS pages. The tachometer indicator uses a circular scale with moving pointer and a digital value. The pointer moves through a range from 0 to 3000 RPM. The numerical RPM value is displayed in increments of 10 RPM in white numerals below the pointer.

The normal engine speed operating limit (top of green arc) changes with altitude. For standard-day conditions, between sea level and 5000 feet, 2500 RPM is the upper limit of the normal operating range. From 5000 feet to 10,000 feet, 2600 RPM is the top of the normal range. And above 10,000 feet, 2700 RPM is the upper limit of the normal operating range.

When engine speed is 2780 RPM or more, the pointer, digital value, and label (RPM) turn red to show engine speed is more than the limit. The digital value and label (RPM) will flash. The engine speed (tachometer) is displayed in the same configuration and location on the LEAN and SYSTEM pages. If engine speed becomes 2780 RPM or more, while on the LEAN or SYSTEM page, the display will return to the ENGINE page.

A speed sensor, mounted on the engine tachometer drive accessory pad, provides a digital signal to the engine and airframe unit which processes and outputs the RPM data to the EIS. A red X through the RPM indicator shows the indicating system is inoperative.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

ENGINE (Continued)

ENGINE INSTRUMENTS (Continued)

FUEL FLOW

Fuel flow is shown on the ENGINE page by the FFLOW GPH horizontal indicator. The indicator range is from 0 to 20 gallons per hour (GPH) with 2 GPH graduations, with a green band from 0 to 12 GPH. A white pointer shows the measured fuel flow.

A digital value for FFLOW GPH is included on both the EIS LEAN and SYSTEM pages.

The fuel flow transducer is located in the engine fuel injection system between the fuel/air control unit (servo) and the fuel distribution manifold (flow divider). The transducer provides a signal to the engine display that is processed and shown as fuel flow (FFLOW) on the EIS pages. A red X through the indicator means the indicating system is inoperative.

OIL PRESSURE

Engine oil pressure is shown on the ENGINE page by the OIL PRES horizontal indicator. The indicator range is 0 to 120 PSI with a red band from 0 to 20 PSI, a green band from 50 to 90 PSI (normal operating range) and a red band from 115 to 120 PSI. A white pointer indicates actual oil pressure. Oil pressure is shown numerically on the SYSTEM page.

When oil pressure is 0 to 20 PSI or 115 to 120 PSI, the pointer, digital value, and label (OIL PRES) will change to red to show that oil pressure is outside normal limits. If oil pressure exceeds either the upper or lower limit while on the LEAN or SYSTEM page, the EIS will return to the ENGINE page.

When the engine speed (RPM) is in the green arc and the oil temperature is in the green band, the oil pressure should be in the green band. If oil pressure is below the green band or above the green band, adjust the engine speed to maintain adequate oil pressure. When engine speed is at idle or near idle, the oil pressure indication must be above the lower red band. With the engine at normal operating oil temperature, and engine speed at or close to idle, oil pressure below the green band, but above the lower red band, is acceptable.

(Continued Next Page)

172SPHBUS-00

7-32

ENGINE (Continued)

ENGINE INSTRUMENTS (Continued)

OIL PRESSURE (Continued)

In cold weather, the oil pressure will initially be high (close to the upper red band when the engine is started). As the engine and oil warm up, the oil pressure will come down into the green band range.

The oil pressure transducer, connected to the engine forward oil pressure port, provides a signal to the engine display that is processed and shown as oil pressure. A separate low oil pressure switch causes an OIL PRESSURE annunciation on the PFD when oil pressure is 0 to 20 PSI. A red X through the oil pressure indicator means that the indicating system is inoperative.

OIL TEMPERATURE

Engine oil temperature is shown on the ENGINE page by the OIL TEMP horizontal indicator. The indicator range is from 75°F to 250°F with a green band (normal operating range) from 100°F to 245°F and a red band from 245°F to 250°F. A white pointer indicates actual oil temperature. Oil temperature is displayed numerically on the SYSTEM page.

When oil temperature is in the red band, 245°F to 250°F, the pointer and OIL TEMP turn red and flash to show oil temperature is higher than the limit. If oil temperature becomes hotter than 245°F while on the LEAN or SYSTEM page, the display will default to the ENGINE page.

The oil temperature sensor is installed in the engine oil filter adapter and provides a signal to the engine display that is processed and shown as oil temperature. A red X through the indicator shows that the indicating system is inoperative.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ENGINE (Continued)

ENGINE INSTRUMENTS (Continued)

CYLINDER HEAD TEMPERATURE

Cylinder head temperature (CHT) for all four cylinders are shown on the LEAN page. The cylinder with the hottest CHT is indicated by a cyan bar graph. The indicator range is from 100°F to 500°F with a normal operating range from 200°F to 500°F and a warning range (red line) at 500°F. When the CHT is 500°F or hotter, the bar segments, CHT label and °F digital value will change to red to show that the CHT is greater than the limit.

A thermocouple is installed in each cylinder head and provides a signal to the engine display that is processed and shown as CHT on the EIS LEAN page. The LEAN page will show a red X over any cylinder that has a probe or wiring failure.

EXHAUST GAS TEMPERATURE

Exhaust gas temperature (EGT) is shown on the ENGINE page by the EGT horizontal indicator. The indicator range is from 1250°F to 1650°F with graduations every 50°F. The white pointer indicates relative EGT with the number of the hottest cylinder displayed inside the pointer. If a cylinder EGT probe or wiring failure occurs for the hottest EGT, the next hottest EGT will be displayed.

The EGT for all four cylinders is shown on the LEAN page of the EIS. The hottest cylinder is indicated by the cyan bar graph. The EGT for a particular cylinder may be shown by using the CYL SLCT softkey to select the desired cylinder. Automatic indication of the hottest cylinder will resume a short time after the CYL SLCT is last selected. The LEAN page will show a red X over a cylinder that has a probe or wiring failure.

A thermocouple is installed in the exhaust pipe of each cylinder which measures EGT and provides a signal to the engine display that is processed and shown as EGT on the EIS LEAN page.

ENGINE (Continued)

NEW ENGINE BREAK-IN AND OPERATION

The engine run-in was accomplished at the factory and is ready for the full range of use. It is suggested that cruising be accomplished at 75% power as much as practicable until a total of 50 hours has accumulated or oil consumption has stabilized. This will ensure proper seating of the piston rings.

ENGINE LUBRICATION SYSTEM

The engine utilizes a full pressure, wet sump type lubrication system with aviation grade oil as the lubricant. The capacity of the engine sump, located on the bottom of the engine, is eight quarts with one additional quart contained in the engine oil filter. Oil is drawn from the sump through a filter screen on the end of a pickup tube to the engine driven oil pump. Oil from the pump passes through a full-flow oil filter, a pressure relief valve at the rear of the right oil gallery, and a thermostatically controlled remote oil cooler. Oil from the remote cooler is then circulated to the left oil gallery. The engine parts are then lubricated by oil from the galleries. After lubricating the engine, the oil returns to the sump by gravity. The filter adapter in the full-flow filter is equipped with a bypass valve which will cause lubricating oil to bypass the filter in the event the filter becomes plugged, or the oil temperature is extremely cold.

An oil dipstick/filler tube is located at the right rear of the engine case. The oil dipstick/filler tube is accessed through a door located on the right side of the engine cowling. The engine should not be operated on less than five quarts of oil. To minimize loss of oil through the breather, fill to eight quarts for normal flights of less than three hours. For extended flight, fill to eight quarts (dipstick indication only). For engine oil grade and specifications, refer to Section 8 of this POH.

(Continued Next Page)

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

ENGINE (Continued)

IGNITION AND STARTER SYSTEM

Engine ignition is provided by two engine driven magnetos, and two spark plugs in each cylinder. The left magneto fires the upper left and lower right spark plugs, and the right magneto fires the lower left and upper right spark plugs. Normal operation is conducted with both magnetos due to the more complete burning of the fuel/air mixture with dual ignition.

Ignition and starter operation is controlled by a rotary-type switch located on the left switch and control panel. The MAGNETOS switch is labeled clockwise, OFF, R, L, BOTH, and START. The engine should be operated on both magnetos (BOTH position) except for magneto checks. The R and L positions are for checking purposes and emergency use only. When the MAGNETOS switch is rotated to the spring-loaded START position, with the MASTER switch in the ON position, the starter contactor is closed and the starter, now energized, will crank the engine. When the switch is released, it will automatically return to the BOTH position.

AIR INDUCTION SYSTEM

The engine air induction system receives ram air through an intake on the lower front portion of the engine cowling. The intake is covered by an air filter which removes dust and other foreign matter from the induction air. Airflow passing through the filter enters an air box, which is equipped with a spring-loaded alternate air door. If the air induction filter should become blocked, suction created by the engine will open the door and draw unfiltered air from inside the lower cowl area. An open alternate air door will result in an approximate 10% power loss at full throttle. After passing through the air box, induction air enters a fuel/ air control unit under the engine, and is then ducted to the engine cylinders through intake manifold tubes.

ENGINE (Continued)

EXHAUST SYSTEM

Exhaust gas from each cylinder passes through a riser assembly to a common muffler, located below the engine, and then overboard through a single tailpipe. Outside air is supplied to a shroud constructed around the outside of the muffler to form a heating chamber. The air heated by the shroud is then supplied to the cabin.

FUEL INJECTION SYSTEM

The engine is equipped with a fuel injection system. The system is comprised of an engine driven fuel pump, fuel/air control unit, fuel manifold, fuel flow indicator, and air-bleed type injector nozzles.

Fuel is delivered by the engine driven fuel pump to the fuel/air control unit. The fuel/air control unit correctly proportions the fuel flow to the induction air flow. After passing through the control unit, induction air is delivered to the cylinders through the intake manifold tubes and metered fuel is delivered to a fuel manifold (flow divider). The fuel manifold, through spring tension on a diaphragm and valve, evenly distributes the fuel to an air-bleed type injector nozzle in the intake valve chamber of each cylinder. A turbine-type fuel flow transducer mounted between the fuel/air control unit and the fuel distribution unit produces a digital signal that displays fuel flow on the EIS pages.

COOLING SYSTEM

Ram air for engine cooling enters through two intake openings in the front of the engine cowling. The cooling air is directed from above the engine, around the cylinders and other areas of the engine by baffling, and then exits through an opening at the bottom aft edge of the engine cowling.

A winterization kit is available for the airplane. Refer to Section 9, Supplement 4 for description and operating information.

PROPELLER

The airplane is equipped with a two bladed, fixed pitch, one-piece forged aluminum alloy propeller which is anodized to retard corrosion. The propeller is 76 inches in diameter.

172SPHBUS-00

U.S.

7-37

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL SYSTEM

The airplane fuel system, Refer to Figure 7-6, consists of two vented integral fuel tanks (one tank in each wing), three-position selector valve, fuel reservoir tank, electrically-driven auxiliary fuel pump, fuel shutoff valve, and a fuel strainer. The engine-mounted portion of the system consists of the engine driven fuel pump, a fuel/air control unit, fuel flow transducer, a fuel distribution valve (flow divider) and fuel injection nozzles.

WARNING

UNUSABLE FUEL LEVELS FOR THIS AIRPLANE WERE DETERMINED IN ACCORDANCE WITH FEDERAL AVIATION REGULATIONS. FAILURE TO OPERATE THE AIRPLANE IN COMPLIANCE WITH FUEL LIMITATIONS SPECIFIED IN SECTION 2 MAY FURTHER REDUCE THE AMOUNT OF FUEL AVAILABLE IN FLIGHT.

FUEL QUANTITY DATA IN U.S. GALLONS

FUEL TANKS	FUEL LEVEL (QUANTITY EACH TANK)	TOTAL FUEL	TOTAL UNUSABLE	TOTAL USABLE ALL FLIGHT CONDITIONS
Two	Full (28.0)	56.0	3.0	53.0
Two	Reduced (17.5)	35.0	3.0	32.0

Figure 7-5

FUEL SYSTEM (Continued)

FUEL DISTRIBUTION

Fuel flows by gravity from the two wing tanks to a three-position fuel selector valve, labeled BOTH, RIGHT and LEFT, and on to the fuel reservoir tank. From the fuel reservoir tank, fuel flows through the electrically-driven auxiliary fuel pump, through the fuel shutoff valve, the fuel strainer, and to the engine-driven fuel pump. From the engine-driven fuel pump, fuel is delivered to the fuel/air control unit on the bottom of the engine. The fuel/air control unit (fuel servo) meters fuel flow in proportion to induction air flow. After passing through the control unit, metered fuel goes to a fuel distribution valve (flow divider) located on the top of the engine. From the fuel distribution valve, individual fuel lines are routed to air bleed type injector nozzles located in the intake chamber of each cylinder.

FUEL INDICATING SYSTEM

Fuel quantity is measured by two fuel quantity sensors, one in each fuel tank, and is displayed on the EIS pages. The indicators are marked in gallons of fuel (GAL). An empty tank is displayed on the fuel quantity indicator (FUEL QTY GAL) as a red line on the far left of the indicator scale, and the number 0. When an indicator shows an empty tank, approximately 1.5 gallons of unusable fuel remain in the tank. The indicators should not be relied upon for accurate readings during skids, slips or unusual attitudes.

The fuel quantity indicator shows the fuel available in the tank up to the limit of the sensor measurement range. At this level, additional fuel may be added to completely fill the tank, but no additional movement of the indicator will result. The limit for sensor measurement range is approximately 24 gallons and is indicated by the maximum limit of the green band. When the fuel level decreases below the maximum limit of the fuel sensor, the fuel quantity indicator will display fuel quantity measured in each tank. A visual check of each wing tank fuel level must be performed prior to each flight. Compare the visual fuel level and indicated fuel quantity to accurately estimate usable fuel.

(Continued Next Page)

172SPHBUS-00

U.S.

7-39

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL SYSTEM (Continued)

FUEL INDICATING SYSTEM (Continued)

The fuel quantity indicators detect low fuel conditions and incorrect sensor outputs. When fuel quantity is less than 5 gallons indicated (and remains less than this level for more than 60 seconds), LOW FUEL L (left) and/or LOW FUEL R (right) will be displayed in amber on the PFD and a tone will sound. The fuel quantity indicator pointer(s) and indicator label will change from white to steady amber. When fuel quantity reaches the calibrated usable fuel empty level, the LOW FUEL L and/or LOW FUEL R remain amber and the indicator pointer(s) and label change to flashing red.

NOTE

Takeoff is not recommended if both fuel quantity indicator pointers are in the yellow band range and/or amber LOW FUEL L or LOW FUEL R annunciator is displayed on the PFD.

In addition to low fuel annunciation, the warning logic is designed to report failures with each sensor. If the system detects a failure, the affected fuel indicator will display a red X. A red X through the top part of the indicator indicates a failure associated with the left fuel tank. A red X through the bottom part of the indicator indicates a failure associated with the right fuel tank.

Fuel flow is measured by use of a turbine type transducer mounted on top of the engine between the fuel/air control unit and the fuel distribution unit. This flow meter produces a signal that is displayed as the rate of fuel flow on the FFLOW GPH indicator on the EIS pages. FFLOW GPH is shown as either a horizontal analog indicator or a digital value, depending on the active EIS page.

(Continued Next Page)

172SPHBUS-00

FUEL SYSTEM (Continued)

FUEL CALCULATIONS

NOTE

Fuel calculations do not use the airplane's fuel quantity indicators and are calculated from the last time the fuel was reset.

For fuel consumption information, a fuel used totalizer function is provided on the EIS SYSTEM page as GAL USED. This digital indicator shows total fuel used since last reset of the totalizer. To reset the GAL USED, the EIS SYSTEM page must be active and the RST USED softkey must be selected. GAL USED is calculated after reset using information from the fuel flow transducer signal.

For fuel remaining information, a count down fuel totalizer function is provided on the EIS SYSTEM page as GAL REM. This digital indicator shows calculated fuel remaining since last GAL REM pilot adjustment. To adjust GAL REM, the EIS SYSTEM page must be active and the GAL REM softkey must be selected followed by the appropriate quantity adjustment softkeys. Refer to the Garmin G1000 CRG for details for resetting and adjusting fuel calculations. GAL REM is calculated after pilot adjustment using information from the fuel flow transducer signal.

NOTE

GAL USED and GAL REM provide no indication of the actual amount of fuel remaining in each tank and should only be used in conjunction with other fuel management procedures to estimate total fuel remaining.

(Continued Next Page)

172SPHBUS-00

U.S.

7-41

CESSNA MODEL 172S NAV III GFC 700 AFCS



Figure 7-6

172SPHBUS-00

FUEL SYSTEM (Continued)

AUXILIARY FUEL PUMP OPERATION

The auxiliary fuel pump is used primarily for priming the engine before starting. Priming is accomplished through the fuel injection system. The engine may be flooded if the auxiliary FUEL PUMP switch is accidentally placed in the ON position for prolonged periods, with MASTER Switch ON and mixture rich, with the engine stopped.

The auxiliary fuel pump is also used for vapor suppression in hot weather. Normally, momentary use will be sufficient for vapor suppression; however, continuous operation is permissible if required. Turning on the auxiliary fuel pump with a normally operating enginedriven fuel pump will result in only a very minor enrichment of the mixture.

It is not necessary to operate the auxiliary fuel pump during normal takeoff and landing, since gravity and the engine-driven fuel pump will supply adequate fuel flow. In the event of failure of the engine-driven fuel pump, use of the auxiliary fuel pump will provide sufficient fuel to maintain flight at maximum continuous power.

Under hot day, high altitude conditions, or conditions during a climb that are conducive to fuel vapor formation, it may be necessary to utilize the auxiliary fuel pump to attain or stabilize the fuel flow required for the type of climb being performed. In this case, turn the auxiliary fuel pump on, and adjust the mixture to the desired fuel flow. If fluctuating fuel flow (greater than 1 GPH) is observed during climb or cruise at high altitudes on hot days, place the auxiliary fuel pump switch in the ON position to clear the fuel system of vapor. The auxiliary fuel pump may be operated continuously in cruise.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL SYSTEM (Continued)

FUEL RETURN SYSTEM

A fuel return system was incorporated to improve engine operation during extended idle operation in hot weather environments. The major components of the system include an orifice fitting located in the top of the fuel-air control unit (fuel servo), fuel return line, with check valve, and a fuel reservoir tank. The fuel return system is designed to return a metered amount of fuel/vapor back to the fuel reservoir tank. The increased fuel flow, due to the fuel return system, results in lower fuel operating temperatures at the engine inlet, which minimizes the amount of fuel vapor generated in the fuel lines during hot weather operations. Refer to Section 4 for Hot Weather operating information.

FUEL VENTING

Fuel system venting is essential to system operation. Complete blockage of the fuel venting system will result in decreasing fuel flow and eventual engine stoppage. The fuel venting system consists of an interconnecting vent line between the fuel tanks and a check valve equipped overboard vent in the left fuel tank assembly. The overboard vent protrudes from the bottom surface of the left wing, just inboard of the wing strut upper attachment point. The fuel filler caps are vacuum vented; the fuel filler cap vents will open and allow air to enter the fuel tanks in case the overboard vents become blocked.

REDUCED TANK CAPACITY

The airplane may be serviced to a reduced capacity to permit heavier cabin loadings. This is accomplished by filling each tank to the bottom edge of the fuel filler indicator tab, thus giving a reduced fuel load of 17.5 gallons usable in each tank.

FUEL SYSTEM (Continued)

FUEL SELECTOR VALVE

The fuel selector is a three-position selector valve, labeled BOTH, RIGHT and LEFT. The fuel selector valve should be in the BOTH position for takeoff, climb, landing, and maneuvers that involve prolonged slips or skids of more than 30 seconds. Operation on either LEFT or RIGHT fuel tank is reserved for level cruising flight only.

NOTE

- When the fuel selector valve is placed in the BOTH position, while in cruise flight, unequal fuel flow from each tank may occur if the wings are not maintained exactly level. Unequal fuel flow can be detected by one fuel tank indicating more fuel than the other on the L FUEL and R FUEL indicators. The resulting fuel imbalance can be corrected by turning the fuel selector valve to the fuel tank indicating the highest fuel quantity. Once the L FUEL and R FUEL and R FUEL indicators have equalized, position the fuel selector valve to the BOTH position.
- It is not practical to measure the time required to consume all of the fuel in one tank, and, after switching to the opposite tank, expect an equal duration from the remaining fuel. The airspace in both fuel tanks is interconnected by a vent line and, therefore, some sloshing of fuel between tanks can be expected when the tanks are nearly full and the wings are not level.
- When the fuel tanks are 1/4 tank or less, prolonged uncoordinated flight, such as slips or skids, can uncover the fuel tank outlets causing fuel starvation and engine stoppage. Therefore, if operating with one fuel tank dry or operating on either LEFT or RIGHT tank with 1/4 tank or less, do not allow the airplane to remain in uncoordinated flight for periods in excess of 30 seconds.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL SYSTEM (Continued)

FUEL DRAIN VALVES

The fuel system is equipped with drain valves to provide a means for the examination of fuel in the system for contamination and grade. The system should be examined before each flight and after each refueling, by using the sampler cup provided to drain fuel from each wing tank sump, the fuel reservoir tank sump, the fuel selector valve drain and the fuel strainer sump. If any evidence of fuel contamination is found, it must be eliminated in accordance with the preflight inspection checklist and the discussion in Section 8. If takeoff weight limitations for the next flight permit, the fuel tanks should be filled after each flight to prevent condensation.

BRAKE SYSTEM

The airplane has a single-disc, hydraulically-actuated brake on each main landing gear wheel. Each brake is connected, by a hydraulic line, to a master cylinder attached to each of the pilot's rudder pedals. The brakes are operated by applying pressure to the top of either the left (pilot's) or right (copilot's) set of rudder pedals, which are interconnected. When the airplane is parked, both main wheel brakes may be set by utilizing the parking brake which is operated by a handle under the left side of the instrument panel. To apply the parking brake, set the brakes with the rudder pedals, pull the handle aft, and rotate it 90° down.

For maximum brake life, keep the brake system properly maintained, and minimize brake usage during taxi operations and landings.

Some of the symptoms of impending brake failure are: gradual decrease in braking action after brake application, noisy or dragging brakes, soft or spongy pedals, and excessive travel and weak braking action. If any of these symptoms appear, the brake system is in need of immediate attention. If, during taxi or landing roll, braking action decreases, let up on the pedals and then reapply the brakes with heavy pressure. If the brakes become spongy or pedal travel increases, pumping the pedals should build braking pressure. If one brake becomes weak or fails, use the other brake sparingly while using opposite rudder, as required, to offset the good brake

ELECTRICAL SYSTEM

The airplane is equipped with a 28-volt direct current (DC) electrical system, Refer to Figure 7-7. A belt-driven 60 ampere alternator powers the system. A 24-volt main storage battery is located inside the engine cowling on the left firewall. The alternator and main battery are controlled through the MASTER switch found near the top of the pilot's switch panel.

Power is supplied to most electrical circuits through two primary buses (ELECTRICAL BUS 1 and ELECTRICAL BUS 2), with an essential bus and a crossfeed bus connected between the two primary buses to support essential equipment.

The system is equipped with a secondary or standby battery located between the firewall and the instrument panel. The STBY BATT switch controls power to or from the standby battery. The standby battery is available to supply power to the essential bus in the event that alternator and main battery power sources have both failed.

The primary buses are supplied with power whenever the MASTER switch is turned on, and are not affected by starter or external power usage. Each primary bus is also connected to an avionics bus through a circuit breaker and the AVIONICS BUS 1 and BUS 2 switches. Each avionics bus is powered when the MASTER switch and the corresponding AVIONICS switch are in the ON position.

CAUTION

BOTH BUS 1 AND BUS 2 AVIONICS SWITCHES SHOULD BE TURNED OFF TO PREVENT ANY HARMFUL TRANSIENT VOLTAGE FROM DAMAGING THE AVIONICS EQUIPMENT PRIOR TO TURNING THE MASTER SWITCH ON OR OFF, STARTING THE ENGINE OR APPLYING AN EXTERNAL POWER SOURCE.

The airplane includes a power distribution module, located on the left forward side of the firewall, to house all the relays used in the airplane electrical system. The Alternator Control Unit (ACU), main battery current sensor, and the external power connector are also housed within the module.

(Continued Next Page)

172SPHBUS-00

U.S.

7-47

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)



Figure 7-7 (Sheet 1 of 3)

172SPHBUS-00

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION



Figure 7-7 (Sheet 2)*

172SPHBUS-01

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)



Figure 7-7 (Sheet 3)

172SPHBUS-00

7-50

ELECTRICAL SYSTEM (Continued)

G1000 ANNUNCIATOR PANEL

All system alerts, cautions and warnings are shown on the right side of the PFD screen adjacent to the vertical speed indicator. The following annunciations are supported:

OIL PRESSURE	LOW VACUUM	
LOW FUEL L	LOW FUEL R	
LOW VOLTS	HIGH VOLTS	
STBY BATT	CO LVL HIGH	

Refer to the Garmin G1000 CRG Appendix A for more information on system annunciations.

MASTER SWITCH

The MASTER switch is a two-pole, rocker-type switch. The BAT side of the switch controls the main battery electrical power to the airplane. The ALT side of the switch controls the alternator system.

In normal operation, both sides of the switch (ALT and BAT) are ON simultaneously; however, the BAT side of the switch may be selected separately as necessary. The ALT side of the switch can not be set to ON without the BAT side of the switch also being set to ON.

If the alternator system fails, the MASTER switch may be set in the OFF position to preserve main battery capacity for later in the flight. With the MASTER switch OFF and the STBY BATT switch in the ARM position, the standby battery will power the essential bus for a limited time. Time remaining may be estimated by monitoring essential bus voltage. At 20 Volts, the standby battery has little or no capacity remaining.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)

STANDBY BATTERY SWITCH

The STBY BATT master switch is a three position (ARM-OFF-TEST) switch that tests and controls the standby battery system. The energy level of the battery shall be checked before starting the engine, Refer to Section 4, by placing the switch in the momentary TEST position and observing the correct illumination of the TEST lamp found to the right of the switch. Energy level tests after starting engine are not recommended.

Placing the switch in the ARM position during the engine start cycle allows the standby battery to help regulate and filter essential bus voltage during the start cycle. The switch is set to the ARM position during normal flight operation to allow the standby battery to charge and to be ready to power the essential bus in the event of alternator and main battery failure. Placing the switch in the OFF position disconnects the standby battery from the essential bus. Operation with the STBY BATT switch in the OFF position prevents the standby battery from charging and from automatically providing power should an electrical system failure occur.

AVIONICS SWITCH

The AVIONICS switch is a two-pole rocker-type switch that controls electrical power to AVIONICS BUS 1 and BUS 2. Placing either side of the rocker switch in the ON position supplies power to the corresponding avionics bus. Both sides of the AVIONICS switch should be placed in the OFF position before turning the MASTER switch ON or OFF, starting the engine, or applying an external power source.
ELECTRICAL SYSTEM (Continued)

ELECTRICAL SYSTEM MONITORING AND ANNUNCIATIONS

BUS VOLTAGE (VOLTMETERS)

Voltage indication (VOLTS) for the main and essential buses is provided at the bottom of the EIS bar (along the left margin of the MFD or PFD), labeled M BUS E. Main bus voltage is shown numerically below the M. Essential bus voltage is displayed numerically below the E. The main bus voltage is measured at the WARN circuit breaker on the crossfeed bus. The essential bus voltage is measured at the NAV1 ENG circuit breaker on the essential bus.

Normal bus voltages with the alternator operating shall be about 28.0 volts. When the voltage for either main or essential buses is above 32.0 volts, the numerical value and VOLTS text turns red. This warning indication, along with the HIGH VOLTS annunciation, is an indication that the alternator is supplying too high of a voltage. The ALT MASTER Switch should immediately be positioned to OFF (Refer to Section 3, Emergency Procedures, HIGH VOLTS ANNUNCIATOR COMES ON).

When the voltage for either main or essential buses is below 24.5 volts, the numeric value and VOLTS text turns red. This warning indication, along with the LOW VOLTS annunciation, is an indication that the alternator is not supplying all the power that is required by the airplane. Indicated voltages between 24.5 and 28.0 volts may occur during low engine RPM conditions (Refer to note under LOW VOLTAGE ANNUNCIATION).

(Continued Next Page)

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)

ELECTRICAL SYSTEM ANNUNCIATIONS (Continued)

MONITORING

AND

AMMETERS

Current indication (AMPS) for both the main and standby batteries is provided at the bottom of the EIS bar (along the left margin of the MFD or PFD), labeled M BATT S. Main battery current is numerically displayed below the M. Main battery current greater than -1.5 amps is shown in white. Standby battery current is displayed numerically below the S. A positive current value (shown in white) indicates that the battery is charging. A negative current value (shown in amber) indicates that the battery is discharging. In the event the alternator is not functioning or the electrical load exceeds the output of the alternator, the main battery ammeter indicates the main battery discharge rate.

In the event that standby battery discharge is required, normal steady state discharge should be less than 4.0 amps. The STBY BATT annunciator will come on when discharge rates are greater than 0.5 amps for more than 10 seconds. After engine start, with the STBY BATT switch in the ARM position, the standby battery ammeter should indicate a charge showing correct charging of the standby battery system.

STANDBY BATTERY ANNUNCIATION

The STBY BATT annunciator will come on when discharge rates are greater then 0.5 amps for more than 10 seconds. This caution annunciation is an indication that the alternator and the main battery are not supplying the power that is required by the essential bus. If the condition causing the caution can not be resolved, flight should be terminated as soon as practicable.

ELECTRICAL SYSTEM (Continued)

ELECTRICAL SYSTEM M ANNUNCIATIONS (Continued)

MONITORING AND

LOW VOLTAGE ANNUNCIATION

A signal from the ACU, located inside the power distribution module, provides the trigger for a red LOW VOLTS annunciation shown on the PFD. LOW VOLTS is displayed when the main bus voltage measured in the power distribution module is below 24.5 volts. The LOW VOLTS warning annunciation is an indication that the alternator is not supplying the power that is required by the airplane. If the conditions causing the LOW VOLTS warning can not be resolved, nonessential electrical loads should be eliminated and the flight should be terminated as soon as practicable.

NOTE

During low RPM operation, with a high electrical load on the system, such as during a low RPM taxi, the LOW VOLTS annunciation may come on, the bus voltage values may turn red, and main battery ammeter discharge indications may occur. Under these conditions, increase RPM or decrease electrical loads to reduce demand on the battery.

In the event an overvoltage condition (or other alternator fault) occurs, the ACU will automatically open the ALT FIELD circuit breaker, removing alternator field current and stopping alternator output. The main battery will then supply current to the electrical system as shown by a discharge (negative number) on the M BATT ammeter. The LOW VOLTS annunciator will come on when the system voltage drops below 24.5 volts. Set the ALT FIELD circuit breaker to the ON position (push in) to energize the ACU. If the warning annunciation goes out and the main battery (M BATT) ammeter indicates positive current, normal alternator charging has resumed. If the annunciator comes on again, or the ALT FIELD circuit breaker opens again, an alternator malfunction has occurred. If the circuit breaker opens again, do not SET it to the ON position again. Have a qualified technician determine the cause and correct the malfunction. Turn off nonessential electrical loads and land as soon as practicable.

(Continued Next Page)

172SPHBUS-00

U.S.

7-55

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)

ELECTRICAL SYSTEM MONITORING AND ANNUNCIATIONS (Continued)

LOW VOLTAGE ANNUNCIATION (Continued)

The ALT FIELD circuit breaker may open on occasion during normal engine starts due to transient voltages. Provided that normal alternator output is resumed after the ALT FIELD circuit breaker is reset, these occurrences are considered nuisance events. If the ALT FIELD circuit breaker opens after reset, do not close again. Repeated occurrences indicate a problem with the electrical system that must be corrected by a qualified maintenance technician before flight.

HIGH VOLTAGE ANNUNCIATION

The HIGH VOLTS annunciator will come on when main or essential bus voltage is above 32.0 volts. This warning annunciation is an indication that the alternator is supplying too high of a voltage. The ALT MASTER switch should immediately be positioned to OFF (Refer to Section 3, Emergency Procedures, HIGH VOLTS ANNUNCIATOR COMES ON).

In the event a HIGH VOLTS condition occurs, the ACU will automatically open the ALT FIELD circuit breaker, removing alternator field current and stopping alternator output. The HIGH VOLTS annunciator is a warning that the ACU automatic alternator shutdown circuit is not operational and an action from the pilot is required to position the ALT MASTER to OFF.

ELECTRICAL SYSTEM (Continued)

CIRCUIT BREAKERS AND FUSES

Individual system circuit breakers are found on the circuit breaker panel below the pilot's control wheel. All circuit breakers on ESSENTIAL BUS, AVIONICS BUS 1 and AVIONICS BUS 2 are capable of being opened, or disengaged from the electrical system, by pulling straight out on the outer ring for emergency electrical load management. Using a circuit breaker as a switch is discouraged since the practice will decrease the life of the circuit breaker. All circuit breakers on ELECTRICAL BUS 1, ELECTRICAL BUS 2 and CROSSFEED BUS are not capable of being opened or disengaged.

The power distribution module uses three push-to-reset circuit breakers for the electrical bus feeders. A fast blow automotive type fuse is used at the standby battery. The standby battery current shunt circuit uses two field replaceable fuses located on the standby battery controller printed circuit board.

Most Garmin G1000 equipment has internal non-field replaceable fuses. Equipment must be returned to Garmin by an approved service station for replacement.

(Continued Next Page)

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

ELECTRICAL SYSTEM (Continued)

EXTERNAL POWER RECEPTACLE

A external power receptacle is integral to the power distribution module and allows the use of an external power source for cold weather starting or for lengthy maintenance work on electrical and avionics equipment. The receptacle is located on the left side of the cowl near the firewall. Access to the receptacle is gained by opening the receptacle door.

NOTE

Set the AVIONICS switches BUS 1 and BUS 2 to OFF if no avionics are required. If maintenance on the avionics equipment is required, a 28 VDC regulated and filtered external power source must be provided to prevent damage to the avionics equipment from transient voltages. Set AVIONICS switches BUS 1 and BUS 2 to OFF before starting the engine.

The following check should be made whenever the engine has been started using external power (after disconnecting the external power source).

- 1. MASTER Switch (ALT and BAT) OFF
- 2. TAXI and LAND Light Switches ON
- 3. Throttle Control REDUCE TO IDLE
- 4. MASTER Switch (ALT and BAT) ON (with taxi and landing lights turned on)
- 5. Throttle Control INCREASE (to approximately 1500 RPM)
- 6. Main Battery (M BATT) Ammeter CHECK (Battery charging, Amps Positive)
- 7. LOW VOLTS Annunciator CHECK (Verify annunciator is not shown)

WARNING

IF M BATT AMMETER DOES NOT SHOW POSITIVE CHARGE (+ AMPS), OR LOW VOLTS ANNUNCIATOR DOES NOT GO OFF, REMOVE THE BATTERY FROM THE AIRPLANE AND SERVICE OR REPLACE THE BATTERY BEFORE FLIGHT.

LIGHTING SYSTEMS

EXTERIOR LIGHTING

Exterior lighting consists of navigation lights on the wing tips and the tip of the vertical stabilizer, landing/taxi lights located on the left wing leading edge, a flashing beacon mounted on top of the vertical stabilizer, and a strobe light on each wing tip.

Two courtesy lights are recessed into the lower surfaces of each wing and provide illumination for each cabin door area. The switch for the courtesy lights is found on the pilot's overhead console. The rear dome light and under-wing courtesy lights share the same control switch. Pressing the rear dome light switch will make the lights come on and pressing it again will make the lights go out.

All other exterior lights are operated by switches found on the lighted switch panel to the left of the PFD. Exterior lights are grouped together in the LIGHTS section of the switch panel. To activate the BEACON, LAND (landing light), TAXI (taxi light), NAV, and STROBE light(s), place the switch in the up position. Circuit breakers for the lights are found on the lighted circuit breaker panel on the lower left instrument panel, below the PFD. Circuit breakers are grouped by electrical bus with BEACON and LAND on ELECTRICAL BUS 1 and TAXI, NAV and STROBE on ELECTRICAL BUS 2.

NOTE

The strobes and flashing beacon should not be used when flying through clouds or overcast; the flashing light reflected from water droplets or particles in the atmosphere, particularly at night, can produce vertigo and loss of orientation.

CESSNA MODEL 172S NAV III GFC 700 AFCS

LIGHTING SYSTEMS (Continued)

INTERIOR LIGHTING

Interior lighting is controlled by a combination of dimmable crew area flood lighting, internally lit switch and circuit breaker panels, avionics panel lighting, standby instrument lighting, pedestal lighting, pilot control wheel map lighting and passenger area flood lighting.

Flood lighting is accomplished using two dimmable lights in the front crew area and one dome light in the rear passenger area. These lights are contained in the overhead console, and are controlled by dimmer controls for the front flood lights, and an on-off type push button switch for the rear dome light. The front flood lights can be rotated to provide directional lighting for the pilot and front passenger. The rear dome light provides for general illumination in the rear cabin area. Rear dome light and courtesy lights, located under the wing, share the same control switch.

Lighting of the switch panel, circuit breaker panel, engine controls and environmental control panel is accomplished by using internally lit LED panels. Rotating the SW/CB PANELS dimmer, found on the switch panel in the DIMMING group, controls the lighting level for both panels. Rotating the dimmer counterclockwise decreases light intensity from the highest level to off.

Pedestal lighting consists of a LED strip light incorporated into the Throttle/Flap Control Lever panel located on the bottom of the center instrument panel and a second LED strip light incorporated into the pedestal directly above the 12 volt cabin power outlet. Rotating the PEDESTAL light dimmer, found on the switch panel in the DIMMING group, controls the pedestal lights. Rotating the dimmer counterclockwise decreases light intensity from the highest level to off.

LIGHTING SYSTEMS (Continued)

INTERIOR LIGHTING (Continued)

Avionics panel lighting consists of the PFD and MFD bezel and display lighting and audio panel lighting. Rotating the AVIONICS dimmer, found on the switch panel in the DIMMING group, controls the lighting level. Positioning the dimmer control in the off position, rotated fully counterclockwise, causes the avionics displays to use internal photocells to automatically control the lighting levels. This is the recommended use of the avionics lighting for all day and lower lighting levels where lighting of the avionics bezels and keys is not required. In low to night lighting levels rotating the AVIONICS dimmer control clockwise from the off position places all avionics lighting level control to the AVIONICS dimmer control. This is the recommended use of avionics lighting for night and low lighting conditions to allow the pilot control of the avionics illumination levels as dark adaptation occurs.

Rotating the STBY IND dimmer control, found on the switch panel in the DIMMING group, controls lighting of the standby airspeed indicator, attitude indicator, altimeter and non-stabilized magnetic compass. Rotating the dimmer control counterclockwise decreases light intensity from the highest level to off.

Pilot's chart (map) lighting is accomplished by use of a rheostat and a light assembly, both found on the lower surface of the pilot's control wheel. The light provides downward illumination from the bottom of the control wheel to the pilot's lap area. To operate the light, first turn the NAV light switch ON, and then adjust the map light intensity using the knurled rheostat knob. Rotating the dimmer clockwise (when facing up) increases light intensity, and rotating the dimmer counterclockwise decreases light intensity.

Regardless of the light system in question, the most probable cause of a light failure is a burned out bulb. However, in the event any lighting systems fails to come on, check the appropriate circuit breaker. For interior lighting failure check the PANEL LTS circuit breaker, and for exterior lighting failure check the associated light function circuit breaker (i.e. landing light, LAND LT circuit breaker). If the circuit breaker has opened, and there is no obvious indication of a short circuit (smoke or odor), turn the affected lights OFF, reset the circuit breaker, and turn the lights ON again. If the circuit breaker opens again, do not reset until maintenance has been performed.

CESSNA MODEL 172S NAV III GFC 700 AFCS

CABIN HEATING, VENTILATING AND DEFROSTING SYSTEM

The temperature and volume of airflow into the cabin can be regulated by manipulation of the push-pull CABIN HT and CABIN AIR control knobs, Refer to Figure 7-8. Both control knobs are the double button locking-type and permit intermediate control settings.

For cabin ventilation, pull the CABIN AIR control knob full out. To raise the air temperature, pull the CABIN HT control knob out approximately 1/4 to 1/2 inch for a small amount of cabin heat. Additional heat is available by pulling the CABIN HT control knob out farther; maximum heat is available with the CABIN HT control knob pulled full out and the CABIN AIR control knob pushed full in. When no heat is desired in the cabin, the CABIN HT control knob is pushed full in.

Front cabin heat and ventilating air is supplied by outlet holes spaced across a cabin manifold just forward of the pilot's and front passenger's feet. Rear cabin heat and air is supplied by two ducts from the manifold, one extending down each side of the cabin to an outlet just aft of the rudder pedals at floor level. Windshield defrost air is also supplied by two ducts leading from the cabin manifold to defroster outlets near the lower edge of the windshield. Two knobs control sliding valves in either defroster outlet to permit regulation of defroster airflow.

Separate adjustable ventilators supply additional air; one near each upper corner of the windshield supplies air for the pilot and front passenger, and two ventilators are available for the rear cabin area to supply air to the rear seat passengers. There are additional ventilators located in various positions in the cockpit.

SECTION 7 AIRPLANE AND SYSTEM DESCRIPTION



Figure 7-8

172SPHBUS-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

PITOT-STATIC SYSTEM AND INSTRUMENTS

The pitot-static system uses a heated total pressure (pitot) head mounted on the lower surface of the left wing, external static port mounted on the left side of the forward fuselage and associated plumbing to connect the air data computer and the conventional pitotstatic instruments to the sources.

The heated pitot system uses an electrical heating element built in the body of the pitot head. The PITOT HEAT control switch is found on the switch panel below the lower left corner of the PFD. The PITOT HEAT circuit breaker is found on the circuit breaker panel at the lower left side of the pilot panel.

A static pressure alternate source valve (ALT STATIC AIR) is located adjacent to the throttle control. The ALT STATIC AIR valve provides static pressure from inside the cabin if the external static pressure source becomes blocked.

If erroneous instrument readings are suspected due to water or ice in the pressure line going to the standard external static pressure source, the alternate static source valve should be pulled on.

Pressures within the cabin will vary with open heaters/vents and windows. Refer to Section 5, Figure 5-1 (Sheet 2), for the Airspeed Calibration, Alternate Static Source correction chart.

VACUUM SYSTEM AND INSTRUMENTS

The vacuum system, Refer to Figure 7-9, provides the vacuum necessary to operate the standby attitude indicator. The system consists of one engine-driven vacuum pump, a vacuum regulator, the standby attitude indicator, a vacuum system air filter, and a vacuum transducer. The vacuum transducer provides a signal to the engine display that is processed and displayed as vacuum on the EIS ENGINE page. If available vacuum, from the engine-driven vacuum pump, drops below 3.5 in.hg., the LOW VACUUM annunciator will display in amber on the PFD.

ATTITUDE INDICATOR

The standby attitude indicator is a vacuum-powered gyroscopic instrument, found on the center instrument panel below the MFD. The attitude indicator includes a low-vacuum warning flag (GYRO) that comes into view when the vacuum is below the level necessary for reliable gyroscope operation.

VACUUM INDICATOR

The vacuum indicator is incorporated on the EIS ENGINE page, found along the left side of the PFD during engine start or the left edge of the MFD during normal operation. During reversionary operation, the EIS bar appears along the left side of the operational display.

LOW VACUUM ANNUNCIATION

A low vacuum condition is annunciated along the right side of the PFD by a amber LOW VACUUM annunciator.

CESSNA MODEL 172S NAV III GFC 700 AFCS

VACUUM SYSTEM





172SPHBUS-00

CLOCK/O.A.T. INDICATOR

A numerical time or clock window, based on GPS time, and an outside air temperature (O.A.T.) indicator window are provided along the lower edge of the PFD. The O.A.T. indicator uses an air temperature sensor located on top of the cabin.

STALL WARNING SYSTEM

The airplane is equipped with a pneumatic-type stall warning system consisting of an inlet in the leading edge of the left wing, an airoperated horn near the upper left corner of the windshield, and associated plumbing. As the airplane approaches a stall, the low pressure on the upper surface of the wings moves forward around the leading edge of the wings. This low pressure creates a differential pressure in the stall warning system which draws air through the warning horn, resulting in a audible warning at 5 to 10 knots above stall in all flight conditions.

The stall warning system should be checked during the preflight inspection by applying suction to the system either by placing a clean handkerchief over the vent opening and applying suction or using some other type of suction device to activate the warning horn. The system is operational if the warning horn sounds when suction is applied.

CESSNA MODEL 172S NAV III GFC 700 AFCS

STANDARD AVIONICS

The Garmin G1000 Avionics System is an integrated flight control and navigation system. The system combines primary flight instruments, communications, airplane system information and navigational information all displayed on two color displays. The G1000 system consists of the following pieces of equipment:

GARMIN DISPLAY UNITS (GDU)

Two identical units are mounted on the instrument panel. One, located in front of the pilot, is configured as a PFD. A second panel, located to the right, is configured as a MFD.

The PFD displays roll and pitch information, heading and course navigation information, plus altitude, airspeed and vertical speed information to the pilot. The PFD also controls and displays all communication and navigation frequencies as well as displaying warning/status annunciations of airplane systems.

The MFD displays a large scalable, moving map that corresponds to the airplane's current location. Data from other components of the system can be overlaid on this map. Location and direction of movement of nearby aircraft, lightning and weather information can all be displayed on the MFD. The MFD is also the principle display for all of the engine, fuel, and electrical system parameters.

The reversionary mode places the flight information and basic engine information on both the PFD and the MFD. This feature allows the pilot full access to all necessary information should either of the display screens malfunction.

STANDARD AVIONICS (Continued)

AUDIO PANEL (GMA)

The audio panel for the G1000 system integrates all of the communication and navigation digital audio signals, intercom system and marker beacon controls in one unit. It is installed on the instrument panel between the PFD and the MFD. The audio panel also controls the reversionary mode for the PFD and MFD.

NOTE

Use of the COM 1/2 function is not approved.

INTEGRATED AVIONICS UNIT (GIA)

Two integrated avionics units are installed in the G1000 system. They are mounted in racks in the tailcone, behind the baggage curtain. These units act as the main communications hub linking all of the other peripheral parts to the GDU displays. Each unit contains a GPS receiver, a VHF navigation receiver, VHF communication transceiver and the main system microprocessors. The first GIA unit to acquire a GPS satellite 3-D navigation signal is the active GPS source.

ATTITUDE AND HEADING REFERENCE SYSTEM (AHRS) AND MAGNETOMETER (GRS)

The AHRS provides airplane attitude and flight characteristics information to the G1000 displays and to the integrated avionics units, which is located in the tailcone of the airplane. The AHRS unit contains accelerometers, tilt sensors and rate sensors that replace spinning mass gyros used in other airplanes. The magnetometer is located inside the left wing panel and interfaces with the AHRS to provide heading information.

(Continued Next Page)

172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

STANDARD AVIONICS (Continued)

AIR DATA COMPUTER (GDC)

The Air Data Computer (ADC) compiles information from the airplane's pitot-static system. The ADC unit is mounted behind the instrument panel, just forward of the MFD. An outside air temperature probe, mounted on top of the cabin, is connected to the ADC. The ADC calculates pressure altitude, airspeed, true airspeed, vertical speed and outside air temperature.

ENGINE MONITOR (GEA)

The Engine Monitor is responsible for receiving and processing the signals from all of the engine and airframe sensors. It is connected to all of the CHT measuring sensors, EGT sensors, RPM, fuel flow and to the fuel gauging system. This unit transmits this information to the engine display computers.

TRANSPONDER (GTX)

The full-featured Mode S transponder provides Mode A, C and S functions. Control and operation of the transponder is accomplished using the PFD. The transponder unit is mounted in the tailcone avionics racks.

XM WEATHER AND RADIO DATA LINK (GDL)

The XM weather and radio data link provides weather information and digital audio entertainment in the cockpit. The unit is mounted in the tailcone, behind the baggage curtain. This unit communicates with the MFD on the high-speed data bus. XM weather and XM radio operate in the S-band frequency range to provide continuous uplink capabilities at any altitude throughout North America. A subscription to the XM satellite radio service is required for the XM weather and radio data link to be used.

STANDARD AVIONICS (Continued)

GFC 700 AUTOMATIC FLIGHT CONTROL SYSTEM (AFCS) (if installed)

Refer to the Garmin G1000 CRG for more information on system operation.

CONTROL WHEEL STEERING (CWS)

The Control Wheel Steering (CWS) button, located on the pilot's control wheel, immediately disconnects the pitch and roll servos when activated. Large pitch changes while using CWS will cause the airplane to be out of trim. Retrim the airplane as necessary during CWS operation to reduce control forces or large pitch oscillations that may occur after releasing the CWS button.

WARNING

WHEN THE AUTOPILOT IS ENGAGED IN NAV, APR OR BC OPERATING MODES, IF THE HSI NAVIGATION SOURCE IS CHANGED MANUALLY, USING THE CDI SOFTKEY, THE CHANGE WILL INTERRUPT THE NAVIGATION SIGNAL TO THE AUTOPILOT AND WILL CAUSE THE AUTOPILOT TO REVERT TO ROL MODE OPERATION. NO AURAL ALERT WILL BE PROVIDED. IN ROL MODE, THE AUTOPILOT WILL ONLY KEEP THE WINGS LEVEL AND WILL NOT CORRECT THE AIRPLANE HEADING OR COURSE. SET THE HDG BUG TO THE CORRECT HEADING AND SELECT THE CORRECT NAVIGATION SOURCE ON THE HSI, USING THE CDI SOFTKEY, BEFORE ENGAGING THE AUTOPILOT IN ANY OTHER OPERATING MODE.

CESSNA MODEL 172S NAV III GFC 700 AFCS

GFC 700 SYSTEM SCHEMATIC



Figure 7-10

172SPHBUS-00

7-72

AVIONICS SUPPORT EQUIPMENT

Avionics cooling fans, antennas, microphone and headset provisions, power converter and static discharge wicks support the operation of the avionics equipment installations.

AVIONICS COOLING FANS

Four DC electric fans provide forced air and ambient air circulation cooling for the G1000 avionics equipment. A single fan in the tailcone provides forced air cooling to the integrated avionics units and to the transponder. A fan located forward of the instrument panel removes air from between the firewall bulkhead and instrument panel, directing the warm air up at the inside of the windshield. Two additional fans blow air directly onto the heat sinks located on the forward sides of the PFD and MFD.

Power is provided to these fans when the MASTER (BAT) switch and the AVIONICS (BUS 1 and BUS 2) switch are all ON.

NOTE

None of the cooling fans will operate when the essential bus avionics equipment is being powered by the standby battery.

(Continued Next Page)

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

AVIONICS SUPPORT EQUIPMENT (Continued)

ANTENNAS

Two dual-mode VHF COM/GPS antennas are mounted on the top of the cabin. The COM 1/GPS 1 antenna is mounted on the right side and the COM 2/GPS 2 antenna is mounted on the left side. They are connected to the two VHF communication transceivers and the two GPS receivers in the integrated avionics units.

The GDL antenna is also mounted on the top of the cabin. It provides a signal to the GDL-69A XM Data Link receiver.

A blade-type navigation antenna is mounted on either side of the vertical stabilizer. This antenna provides VOR and glideslope signals to the VHF navigation receivers contained in the integrated avionics units.

The marker beacon antenna is mounted on the bottom of the tailcone. It provides the signal to the marker beacon receiver located in the audio panel.

The transponder antenna is mounted on the bottom of the cabin and is connected to the Mode S transponder by a coaxial transmission cable.

The Bendix/King Distance Measuring Equipment (DME) antenna (if installed) is mounted on the bottom of the tailcone and is connected to the Bendix/King DME receiver by a coaxial cable.

(Continued Next Page)

U.S.

7-74

AVIONICS SUPPORT EQUIPMENT (Continued)

MICROPHONE AND HEADSET INSTALLATIONS

Standard equipment for the airplane includes a hand-held microphone, an overhead speaker, two remote-keyed microphone switches on the control wheels, and provisions for communications headsets at each pilot and passenger station.

The hand-held microphone includes an integral push-to-talk switch. This microphone is plugged in at the center pedestal and is accessible to both the pilot and front passenger. Pressing the push-to-talk switch allows voice transmission on the COM radios.

The overhead speaker is located in the center overhead console. Volume and output for this speaker are controlled through the audio panel.

Each control wheel contains a push-to-talk switch. This switch allows the pilot or front passenger to transmit on the COM radios using remote microphones.

Each seat position of the airplane has provisions for aviation-style headsets. Microphone and headphone jacks are located on each respective sidewall panel for communications between passengers and pilot. The system is designed so that microphones are voice activated. Only the pilot or front passenger can transmit through the COM radios.

NOTE

To ensure audibility and clarity when transmitting with the hand-held microphone, always hold it as closely as possible to the lips, then press the transmit switch and speak directly into it. Avoid covering the opening on the back side of microphone for optimum noise canceling.

(Continued Next Page)

172SPHBUS-00

U.S.

7-75

CESSNA MODEL 172S NAV III GFC 700 AFCS

AVIONICS SUPPORT EQUIPMENT (Continued)

AUXILIARY AUDIO INPUT JACK

An auxiliary audio input jack (AUX AUDIO IN) is located on the center pedestal, Refer to Figure 7-2. It allows entertainment audio devices such as cassette, compact disc, and MP3 players to play music over the airplane's headsets.

The signal from AUX AUDIO IN is automatically muted during radio communications or pilot selection of crew intercom isolation modes located on the audio panel. The AUX key on the audio panel does not control the AUX AUDIO IN signal. For a more complete description and operating instructions of the audio panel, refer to the Garmin G1000 CRG.

Since the entertainment audio input is not controlled by a switch, there is no way to deselect the entertainment source except to disconnect the source at the audio input connector. In the event of a high pilot workload and/or heavy traffic, it is wise to disable the entertainment audio to eliminate a source of distraction for the flight crew.

NOTE

- Passenger briefing should specify that AUX AUDIO IN (entertainment audio input) and Portable Electronic Device (PED) use is permitted only during the enroute phase of flight.
- Disconnect the cable from the AUX AUDIO IN jack when not in use.
- Use caution with audio cables in the cabin to avoid entangling occupants or cabin furnishings and to prevent damage to cables.

AVIONICS SUPPORT EQUIPMENT (Continued)

12V POWER OUTLET

A power converter, located on the cabin side of the firewall just forward of the right instrument panel, reduces the airplane's 28 VDC power to 12 VDC. This converter provides up to 10 amps of power to operate portable devices such as notebook computers and audio players. The power output connector (POWER OUTLET 12V -10A) is located on the center pedestal, Refer to Figure 7-2.

A switch located on the switch panel labeled CABIN PWR 12V controls the operation of the power outlet.

NOTE

- Charging of lithium batteries may cause the lithium batteries to explode.
- Take care to observe the manufacturer's power requirements prior to plugging any device into the 12 volt cabin power system connector. This system is limited to a maximum of 10 amps.
- Use caution with power/adapter cables in the cabin to avoid entangling occupants or cabin furnishings and to prevent damage to cables supplying live electric current.
- Disconnect power/adapter cables when not in use.

CESSNA MODEL 172S NAV III GFC 700 AFCS

AVIONICS SUPPORT EQUIPMENT (Continued)

STATIC DISCHARGERS

Static dischargers are installed at various points throughout the airframe to reduce interference from precipitation static. Under some severe static conditions, loss of radio signals is possible even with static dischargers installed. Whenever possible, avoid known severe precipitation areas to prevent loss of dependable radio signals. If avoidance is impractical, minimize airspeed and anticipate temporary loss of radio signals while in these areas.

Static dischargers lose their effectiveness with age, and therefore, should be checked periodically, at least at every annual inspection, by a qualified technician.

CABIN FEATURES

EMERGENCY LOCATOR TRANSMITTER (ELT)

Refer to Section 9, Supplements 1 or 2 for appropriate ELT operating information.

CABIN FIRE EXTINGUISHER

A portable Halon 1211 (Bromochlorodifluoromethane) fire extinguisher is installed in a holder on the floorboard between the front seats to be accessible in case of fire. The extinguisher is classified 5B:C by Underwriters Laboratories.

The extinguisher should be checked prior to each flight to ensure that the pressure of the contents, as indicated by the gage at the top of the extinguisher, is within the green arc (approximately 125 psi) and the operating lever lock pin is securely in place.

To operate the fire extinguisher:

- 1. Loosen retaining clamp(s) and remove extinguisher from bracket.
- 2. Hold extinguisher upright, pull operating ring pin, and press lever while directing the liquid at the base of the fire at the near edge. Progress toward the back of the fire by moving the nozzle rapidly with a side-to-side sweeping motion.

WARNING

VENTILATE THE CABIN PROMPTLY AFTER SUCCESSFULLY EXTINGUISHING THE FIRE TO REDUCE THE GASES PRODUCED BY THERMAL DECOMPOSITION.

3. The contents of the cabin fire extinguisher will empty in approximately eight seconds of continuous use.

Fire extinguishers should be recharged by a qualified fire extinguisher agency after each use. After recharging, secure the extinguisher to its mounting bracket.

(Continued Next Page)

172SPHBUS-00

U.S.

7-79

CESSNA MODEL 172S NAV III GFC 700 AFCS

CABIN FEATURES (Continued)

CARBON MONOXIDE DETECTION SYSTEM

The carbon monoxide (CO) detection system consist of a single detector located behind the instrument panel, powered by the airplane's DC electrical system and integrated in the Garmin G1000 system with a warning annunciation and alert messages displayed on the PFD.

When the CO detection system senses a CO level of 50 parts-permillion (PPM) by volume or greater the alarm turns on a flashing warning annunciation, CO LVL HIGH, in the annunciation window on the PFD with a continuous tone until the PFD softkey below WARNING is pushed. It then remains on steady until the CO level drops below 50 PPM and automatically resets the alarm.

If the CO system detects a problem within the system that requires service, a CO DET SRVC message is displayed in the alerts window of the PFD. If there is an interface problem between the G1000 system and the CO system a CO DET FAIL message is displayed in the alerts window of the PFD.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

AIRPLANE HANDLING, SERVICE AND MAINTENANCE

TABLE OF CONTENTS

Page

Introduction
Identification Plate
Cessna Owner Advisories
United States Airplane Owners
International Airplane Owners
Publications 8-5
Airplane File 8-6
Airplane Inspection Periods 8-7
EAA Dequired Inspections
Casene Inspection Brograms
Cessna Customer Care Program8-8
Pilot Conducted Preventive Maintenance
Alterations Or Repairs
Ground Handling
Towing
Parking
Tiedown
Jacking
Leveling
Flyable Storage
Servicing 8-12
Oil 8-13
Oil Specification 8-13
Pacammonded Viscosity For Tomporature Pange 8-13
Cenerity Of Engine Cump
Old And Old Filter Change
Oil And Oil Filter Change8-14

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE CESSNA MODEL 172S NAV III GFC 700 AFCS

TABLE OF CONTENTS (Continued)

Page

Fuel	3-15
Approved Fuel Grades (And Colors)	3-15
Fuel Capacity	3-15
Fuel Additives 8	3-16
Fuel Contamination 8	3-20
Landing Gear	3-21
Cleaning And Care 8	3-22
Windshield And Windows 8	3-22
Painted Surfaces 8	3-23
Propeller Care 8	3-24
Engine Care	3-24
Interior Care	3-26
Avionics Care	3-26

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

INTRODUCTION

This section contains factory recommended procedures for proper ground handling and routine care and servicing of your airplane. It also identifies certain inspection and maintenance requirements which must be followed if your airplane is to retain that new airplane performance and dependability. It is important to follow a planned schedule of lubrication and preventive maintenance based on climatic and flying conditions encountered in your local area.

Keep in touch with your local Cessna Service Station and take advantage of their knowledge and experience. Your Cessna Service Station knows your airplane and how to maintain it, and will remind you when lubrications and oil changes are necessary, as well as other seasonal and periodic services.

The airplane should be regularly inspected and maintained in accordance with information found in the airplane maintenance manual and in company issued service bulletins and service newsletters. All service bulletins pertaining to the airplane by serial number should be accomplished and the airplane should receive repetitive and required inspections. Cessna does not condone modifications, whether by Supplemental Type Certificate (STC) or otherwise, unless these certificates are held and/or approved by Cessna. Other modifications may void warranties on the airplane since Cessna has no way of knowing the full effect on the overall airplane. Operation of an airplane that has been modified may be a risk to the occupants, and operating procedures and performance data set forth in the POH may no longer be considered accurate for the modified airplane.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

CESSNA MODEL 172S NAV III GFC 700 AFCS

IDENTIFICATION PLATE

All correspondence regarding your airplane should include the Serial Number. The Serial Number, Model Number, Production Certificate Number (PC) and Type Certificate Number (TC) can be found on the Identification Plate, located on the aft left tailcone. The Finish and Trim Plate, which is installed on the lower part of the left forward doorpost, contains a code describing the exterior paint combination of the airplane. The code may be used in conjunction with an applicable Illustrated Parts Catalog if finish and trim information is needed.

CESSNA OWNER ADVISORIES

Cessna Owner Advisories are sent to Cessna Aircraft FAA Registered owners of record at no charge to inform them about mandatory and/or beneficial airplane service requirements and product changes. Copies of the actual bulletins are available from Cessna Service Stations and Cessna Propeller Aircraft Customer Services.

UNITED STATES AIRPLANE OWNERS

If your airplane is registered in the U.S., appropriate Cessna Owner Advisories will be mailed to you automatically according to the latest airplane registration name and address which you have provided to the FAA. Therefore, it is important that you provide correct and up to date mailing information to the FAA.

If you require a duplicate Owner Advisory to be sent to an address different from the FAA aircraft registration address, please complete and return an Owner Advisory Application (otherwise no action is required on your part).

INTERNATIONAL AIRPLANE OWNERS

To receive Cessna Owner Advisories, please complete and return an Owner Advisory Application.

Receipt of a valid Owner Advisory Application will establish your Cessna Owner Advisory service for one year, after which you will be sent a renewal notice. It is important that you respond promptly to update your address for this critical service.

PUBLICATIONS

Various publications and flight operation aids are furnished in the airplane when delivered from the factory. These items are listed below.

- Customer Care Program Handbook
- Pilot's Operating Handbook and FAA Approved Airplane Flight Manual
- Pilot's Checklist
- Passenger Briefing Card
- Cessna Service Station Directory

To obtain additional publications or owner advisory information, you may contact Cessna Propeller Aircraft Customer Services at (316) 517-5800, Fax (316) 517-7271 or write to Cessna Aircraft Company, P.O. Box 7706, Wichita, KS 67277, Dept 751C.

The following additional publications, plus many other supplies that are applicable to your airplane, are available from a Cessna Service Station.

- Information Manual (contains Pilot's Operating Handbook Information)
- Maintenance Manual, Wiring Diagram Manual and Illustrated Parts Catalog

Cessna Service Stations have a Customer Care Supplies and Publications Catalog covering all available items, many of which the Service Station keeps on hand. The Service Station can place an order for any item which is not in stock.

NOTE

A Pilot's Operating Handbook and FAA Approved Airplane Flight Manual which is lost or destroyed may be replaced by contacting a Cessna Service Station. An affidavit containing the owner's name, airplane serial number and reason for replacement must be included in replacement requests since the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual is identified for specific serial numbered airplanes only.

U.S.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE CESSNA MODEL 172S NAV III GFC 700 AFCS

AIRPLANE FILE

There are miscellaneous data, information and licenses that are a part of the airplane file. The following is a checklist for that file. In addition, a periodic check should be made of the latest Federal Aviation Regulations to ensure that all data requirements are met.

To be displayed in the airplane at all times:

- 1. Aircraft Airworthiness Certificate (FAA Form 8100-2)
- 2. Aircraft Registration Certificate (FAA Form 8050-3)
- 3. Aircraft Radio Station License, (if applicable)

To be carried in the airplane at all times:

- 1. Current Pilot's Operating Handbook and FAA Approved Airplane Flight Manual
- 2. Garmin G1000 Cockpit Reference Guide (190-00384-00 Rev. B or subsequent)
- 3. Weight and Balance, and associated papers (latest copy of the Repair and Alteration Form, FAA Form 337, if applicable)
- 4. Equipment List

To be made available upon request:

- 1. Airplane Logbook
- 2. Engine Logbook

Most of the items listed are required by the United States Federal Aviation Regulations. Since the regulations of other nations may require other documents and data, owners of airplanes not registered in the United States should check with their own aviation officials to determine their individual requirements.

Cessna recommends that these items, plus the Pilot's Checklists, Customer Care Program Handbook and Customer Care Card, be carried in the airplane at all times.

AIRPLANE INSPECTION PERIODS

FAA REQUIRED INSPECTIONS

As required by U.S. Federal Aviation Regulations, all civil aircraft of U.S. registry must undergo a complete inspection (annual) each twelve calendar months. In addition to the required annual inspection, aircraft operated commercially (for hire) must have a complete inspection every 100 hours of operation.

The FAA may require other inspections by the issuance of airworthiness directives applicable to the airplane, engine, propeller and components. It is the responsibility of the owner/operator to ensure compliance with all applicable airworthiness directives, and when the inspections are repetitive, to take appropriate steps to prevent inadvertent noncompliance.

CESSNA INSPECTION PROGRAMS

In lieu of the 100 hour and annual inspection requirements, an airplane may be inspected in accordance with a Progressive Care Inspection Program or a PhaseCard Inspection Program. Both programs offer systems which allow the work load to be divided into smaller operations that can be accomplished in shorter time periods.

The Cessna Progressive Care Inspection Program allows an airplane to be inspected and maintained in four operations. The four operations are recycled each 200 hours and are recorded in a specially provided Aircraft Inspection Log as each operation is conducted.

The PhaseCard Inspection Program offers a parallel system for highutilization flight operations (approximately 600 flight hours per year). This system utilizes 50 hour intervals (Phase 1 and Phase 2) to inspect high-usage systems and components. At 12 months or 600 flight hours, whichever occurs first, the airplane undergoes a complete (Phase 3) inspection.

Regardless of the inspection method selected, the owner should keep in mind that 14 CFR 43 and 14 CFR 91 establishes the requirement that properly certified agencies or personnel accomplish all required FAA inspections and most of the manufacturer recommended inspections.

(Continued Next Page)

172SPHBUS-00

U.S.

8-7

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE CESSNA MODEL 172S NAV III GFC 700 AFCS

AIRPLANE INSPECTION PERIODS (Continued)

CESSNA CUSTOMER CARE PROGRAM

Specific benefits and provisions of the Cessna Warranty plus other important benefits for you are contained in your Customer Care Program Handbook supplied with your airplane. The Customer Care Program Handbook should be thoroughly reviewed and kept in the airplane at all times.

You will also want to return to your Cessna Service Station either at 50 hours for your first Progressive Care Operation, or at 100 hours for your first 100 hour inspection depending on which program you choose to establish for your airplane. While these important inspections will be performed for you by any Cessna Service Station, in most cases you will prefer to have the Cessna Service Station from whom you purchased the airplane accomplish this work.

PILOT CONDUCTED PREVENTIVE MAINTENANCE

A certified pilot who owns or operates an airplane not used as an air carrier is authorized by 14 CFR 43 to perform limited maintenance on his airplane. Refer to 14 CFR 43 for a list of the specific maintenance operations which are allowed.

NOTE

Pilots operating airplanes of other than U.S. registry should refer to the regulations of the country of certification for information on preventive maintenance that may be performed by pilots.

A Maintenance Manual must be obtained prior to performing any preventive maintenance to ensure that proper procedures are followed. A Cessna Service Station should be contacted for further information or for required maintenance which must be accomplished by appropriately licensed personnel.
ALTERATIONS OR REPAIRS

It is essential that the FAA be contacted prior to any alterations on the airplane to ensure that airworthiness of the airplane is not violated. Alterations or repairs to the airplane must be accomplished by licensed personnel, utilizing only FAA Approved components and FAA Approved data, such as Cessna Service Bulletins.

GROUND HANDLING

TOWING

The airplane is most easily and safely maneuvered by hand with the tow bar attached to the nosewheel (the tow bar is stowed on the side of the baggage area). When towing with a vehicle, do not exceed the nose gear turning angle of 30° either side of center, or damage to the nose landing gear will result.

CAUTION

REMOVE ANY INSTALLED RUDDER LOCK BEFORE TOWING.

If the airplane is towed or pushed over a rough surface during hangaring, watch that the normal cushioning action of the nose strut does not cause excessive vertical movement of the tail and the resulting contact with low hangar doors or structure. A flat nose tire or deflated strut will also increase tail height.

PARKING

When parking the airplane, head into the wind and set the parking brake. Do not set the parking brake during cold weather when accumulated moisture may freeze the brakes, or when the brakes are overheated. Install the control wheel lock and chock the wheels. In severe weather and high wind conditions, tie the airplane down as outlined in the following paragraph.

(Continued Next Page)

172SPHBUS-00

U.S.

8-9

CESSNA MODEL 172S NAV III GFC 700 AFCS

GROUND HANDLING (Continued)

TIEDOWN

Proper tiedown procedure is the best precaution against damage to the parked airplane by gusty or strong winds. To tiedown the airplane securely, proceed as follows:

- 1. Set the parking brake and install the control wheel lock.
- 2. Install a surface control lock over the fin and rudder.
- 3. Tie sufficiently strong ropes or chains (700 pounds tensile strength) to the wing, tail and nose tiedown fittings and secure each rope or chain to a ramp tiedown.
- 4. Install a pitot tube cover.

JACKING

When a requirement exists to jack the entire airplane off the ground, or when wing jack points are used in the jacking operation, refer to the Maintenance Manual for specific procedures and equipment required.

Individual main gear may be jacked by using the jack pad which is incorporated in the main landing gear strut step bracket. When using the individual gear strut jack pad, flexibility of the gear strut will cause the main wheel to slide inboard as the wheel is raised, tilting the jack. The jack must then be lowered for a second jacking operation. Do not jack both main wheels simultaneously using the individual main gear jack pads.

CAUTION

DO NOT APPLY PRESSURE ON THE ELEVATOR OR HORIZONTAL STABILIZER SURFACES. WHEN PUSHING ON THE TAILCONE, ALWAYS APPLY PRESSURE AT A BULKHEAD TO AVOID BUCKLING THE SKIN.

If nose gear maintenance is required, the nosewheel may be raised off the ground by pressing down on a tailcone bulkhead, just forward of the horizontal stabilizer, and allowing the tail to rest on the tail tiedown ring.

GROUND HANDLING (Continued)

JACKING (Continued)

To assist in raising and holding the nosewheel off the ground, ground anchors should be utilized at the tail tiedown point.

NOTE

Ensure that the nose will be held off the ground under all conditions by means of suitable stands or supports under weight supporting bulkheads near the nose of the airplane.

LEVELING

Longitudinal leveling of the airplane is accomplished by placing a level on leveling screws located on the left side of the tailcone. Deflate the nose tire and/or lower or raise the nose strut to properly center the bubble in the level. Corresponding points on both upper door sills may be used to level the airplane laterally.

FLYABLE STORAGE

Engines in airplanes that are flown every 30 days or less may not achieve normal service life because of internal corrosion. Corrosion occurs when moisture from the air and the products of combustion combine to attack cylinder walls and bearing surfaces during periods when the airplane is not flown.

The minimum recommended operating frequency for the engine is one continuous flight hour (not counting taxi, takeoff and landing time) with oil temperatures of 165°F to 200°F every 30 days or less (depending on location and storage conditions). Airplanes operated close to oceans, lakes, rivers and in humid regions are in greater need of engine preservation than airplanes operated in arid regions. Appropriate engine preservation procedures must be practiced by the owner or operator of the airplane based on present environmental conditions and the frequency of airplane activity.

NOTE

The engine manufacturer does not recommend pulling the engine through by hand during storage periods.

(Continued Next Page)

172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

GROUND HANDLING (Continued)

FLYABLE STORAGE (Continued)

If the airplane is to remain inactive for more than 30 days, consult the latest revision of Textron Lycoming Service Letter L180 (www.lycoming.textron.com).

It is recommended when storing the airplane for any period of time to keep fuel tanks full to minimize condensation in tanks. Keep the battery fully charged to prevent the electrolyte from freezing in cold weather. Refer to the Maintenance Manual for proper airplane storage procedures.

SERVICING

In addition to the Preflight Inspection covered in Section 4 of this POH, complete servicing, inspection and test requirements for your airplane are detailed in the Maintenance Manual. The Maintenance Manual outlines all items which require attention at specific intervals plus those items which require servicing, inspection, and/or testing at special intervals.

Since Cessna Service Stations conduct all service, inspection, and test procedures in accordance with applicable Maintenance Manuals, it is recommended that you contact a Cessna Service Station concerning these requirements and begin scheduling your airplane for service at the recommended intervals.

Cessna Progressive Care ensures that these requirements are accomplished at the required intervals to comply with the 100 hour or annual inspection as previously covered.

Depending on various flight operations, your local government aviation agency may require additional service, inspections, or tests. For these regulatory requirements, owners should check with local aviation officials where the airplane is being operated.

For quick and ready reference, quantities, materials and specifications for frequently used service items are as follows.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

OIL

OIL SPECIFICATION

MIL-L-6082 or SAE J1966 Aviation Grade Straight Mineral Oil: Used when the airplane was delivered from the factory and should be used to replenish the supply during the first 25 hours. This oil should be drained and the filter changed after the first 25 hours of operation. Refill the engine with MIL-L-6082 or SAE J1966 Aviation Grade Straight Mineral Oil and continue to use until a total of 50 hours has accumulated or oil consumption has stabilized.

MIL-L-22851 or SAE J1899 Aviation Grade Ashless Dispersant Oil: Oil conforming to Textron Lycoming Service Instruction No 1014, and all revisions and supplements thereto, **must be used** after first 50 hours or oil consumption has stabilized.

RECOMMENDED VISCOSITY FOR TEMPERATURE RANGE

Multiviscosity or straight grade oil may be used throughout the year for engine lubrication. Refer to the following table for temperature versus viscosity ranges.

Temperature	MIL-L-6082 or SAE J1966 Straight Mineral Oil SAE Grade	MIL-L-22851 or SAE J1899 Ashless Dispersant Oil SAE Grade
Above 27°C (80°F)	60	60
Above 16°C (60°F)	50	40 or 50
-1°C (30°F) to 32°C (90°F)	40	40
-18°C (0°F) to 21°C (70°F)	30	30, 40 or 20W-40
Below -12°C (10°F)	20	30 or 20W-30
-18°C (0°F) to 32°C (90°F)	20W-50	20W-50 or 15W-50
All Temperatures		15W-50 or 20W-50

NOTE

When operating temperatures overlap, use the lighter grade of oil.

(Continued Next Page)

172SPHBUS-00

U.S.

8-13

CESSNA MODEL 172S NAV III GFC 700 AFCS

OIL (Continued)

CAPACITY OF ENGINE SUMP

The engine has a total capacity of 9 quarts, with the oil filter accounting for approximately 1 quart of that total. The engine oil sump has a capacity of 8 quarts. The engine must not be operated on less than 5 quarts (as measured by the dipstick). For extended flights, the engine should be filled to capacity.

OIL AND OIL FILTER CHANGE

After the first 25 hours of operation, drain the engine oil sump and replace the filter. Refill sump with straight mineral oil and use until a total of 50 hours has accumulated or oil consumption has stabilized; then change to ashless dispersant oil. Ashless dispersant oil (and oil filter) should be changed at time intervals set forth by the engine manufacturer.

NOTE

During the first 25 hour oil and filter change, a general inspection of the overall engine compartment is required. Items which are not normally checked during a preflight inspection should be given special attention. Hoses, metal lines and fittings should be inspected for signs of oil and fuel leaks, and checked for abrasions, chafing, security, proper routing and support, and evidence of deterioration. Inspect the intake and exhaust systems for cracks, evidence of leakage, and security of attachment. Engine controls and linkages should be checked for freedom of movement through their full range, security of attachment and evidence of wear. Inspect wiring for security, chafing, burning, defective insulation, loose or broken terminals, heat deterioration, and corroded terminals. Check the alternator belt in accordance with Maintenance Manual instructions, and retighten if necessary. A periodic check of these items during subsequent servicing operations is recommended.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

FUEL

APPROVED FUEL GRADES (AND COLORS)

100LL Grade Aviation Fuel (Blue)

100 Grade Aviation Fuel (Green)

NOTE

Isopropyl alcohol or Diethylene Glycol Monomethyl Ether (DiEGME) may be added to the fuel supply in quantities not to exceed 1% (alcohol) or 0.15% (DiEGME) of total volume. Refer to Fuel Additives in later paragraphs for additional information.

FUEL CAPACITY

56.0 U.S. Gallons Total: 28.0 U.S. Gallons per tank.

NOTE

- To ensure maximum fuel capacity when refueling and minimize crossfeeding, the fuel selector valve should be placed in either the LEFT or RIGHT position and the airplane parked in a wings level, normal ground attitude. Refer to Figure 1-1 for a definition of normal ground attitude.
- Service the fuel system after each flight, and keep fuel tanks full to minimize condensation in the tanks.

(Continued Next Page)

172SPHBUS-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL (Continued)

FUEL ADDITIVES

Strict adherence to recommended preflight draining instructions as called for in Section 4 will eliminate any free water accumulations from the tank sumps. While small amounts of water may still remain in solution in the gasoline, it will normally be consumed and go unnoticed in the operation of the engine.

One exception to this can be encountered when operating under the combined effect of: (1) use of certain fuels, with (2) high humidity conditions on the ground (3) followed by flight at high altitude and low temperature. Under these unusual conditions, small amounts of water in solution can precipitate from the fuel stream and freeze in sufficient quantities to induce partial icing of the engine fuel system.

While these conditions are quite rare and will not normally pose a problem to owners and operators, they do exist in certain areas of the world and consequently must be dealt with, when encountered.

Therefore, to help alleviate the possibility of fuel icing occurring under these unusual conditions, it is permissible to add isopropyl alcohol or Diethylene Glycol Monomethyl Ether (DiEGME) compound to the fuel supply.

The introduction of alcohol or DiEGME compound into the fuel provides two distinct effects: (1) it absorbs the dissolved water from the gasoline and (2) alcohol has a freezing temperature depressant effect.

NOTE

When using fuel additives, it must be remembered that the final goal is to obtain a correct fuel to additive ratio in the tank, and not just with fuel coming out of the refueling nozzle. For example, adding 15 gallons of correctly proportioned fuel to a tank which contains 20 gallons of untreated fuel will result in a lower than acceptable concentration level to the 35 gallons of fuel which now reside in the tank.

(Continued Next Page)

8-16

FUEL (Continued)

FUEL ADDITIVES (Continued)

Alcohol, if used, is to be blended with the fuel in a concentration of 1% by volume. Concentrations greater than 1% are not recommended since they can be detrimental to fuel tank materials.

The manner in which the alcohol is added to the fuel is significant because alcohol is most effective when it is completely dissolved in the fuel. To ensure proper mixing, the following is recommended:

- 1. For best results, the alcohol should be added during the fueling operation by pouring the alcohol directly on the fuel stream issuing from the fueling nozzle.
- 2. An alternate method that may be used is to premix the complete alcohol dosage with some fuel in a separate clean container (approximately 2-3 gallon capacity) and then transferring this mixture to the tank prior to the fuel operation.

(Continued Next Page)

172SPHBUS-00

U.S.

8-17

CESSNA MODEL 172S NAV III GFC 700 AFCS





172SPHBUS-00

FUEL (Continued)

FUEL ADDITIVES (Continued)

Diethylene Glycol Monomethyl Ether (DiEGME) compound must be carefully mixed with the fuel in concentrations between 0.10% (minimum) and 0.15% (maximum) of total fuel volume. Refer to Figure 8-1 for a DiEGME-to-fuel mixing chart.

WARNING

ANTI-ICING ADDITIVE IS DANGEROUS TO HEALTH WHEN BREATHED AND/OR ABSORBED INTO THE SKIN.

CAUTION

MIXING OF DIEGME WITH FUEL IS EXTREMELY IMPORTANT. A CONCENTRATION IN EXCESS OF THAT RECOMMENDED (0.15% BY VOLUME MAXIMUM) MAY RESULT IN DETRIMENTAL EFFECTS TO THE FUEL TANK AND SEALANT, AND DAMAGE TO O-RINGS AND SEALS USED IN THE FUEL SYSTEM AND ENGINE COMPONENTS. A CONCENTRATION OF LESS THAN THAT RECOMMENDED (0.10% BY TOTAL VOLUME MINIMUM) WILL RESULT IN INEFFECTIVE TREATMENT. USE ONLY BLENDING EQUIPMENT THAT IS RECOMMENDED BY THE MANUFACTURER TO OBTAIN PROPER PROPORTIONING.

Prolonged storage of the airplane will result in a water buildup in the fuel which leeches out the additive. An indication of this is when an excessive amount of water accumulates in the fuel tank sumps. The concentration can be checked using a differential refractometer. It is imperative that the technical manual for the differential refractometer be followed explicitly when checking the additive concentration.

(Continued Next Page)

172SPHBUS-00

U.S.

8-19

CESSNA MODEL 172S NAV III GFC 700 AFCS

FUEL (Continued)

FUEL CONTAMINATION

Fuel contamination is usually the result of foreign material present in the fuel system, and may consist of water, rust, sand, dirt, microbes or bacterial growth. In addition, additives that are not compatible with fuel or fuel system components can cause the fuel to become contaminated.

Before each flight and after each refueling, use a clear sampler cup and drain at least a cupful of fuel from each fuel tank drain location and from the fuel strainer quick drain valve to determine if contaminants are present, and to ensure the airplane has been fueled with the proper grade of fuel.

If contamination is detected, drain **all** fuel drain points again, including the fuel reservoir tank and fuel selector drain valves, and then gently rock the wings and lower the tail to the ground to move any additional contaminants to the sampling points. Take repeated samples from all fuel drain points until **all** contamination has been removed. If, after repeated sampling, evidence of contamination still exists, the airplane should not be flown. Tanks should be drained and system purged by qualified maintenance personnel. All evidence of contamination must be removed before further flight. If the airplane has been serviced with the improper fuel grade, defuel completely and refuel with the correct grade. Do not fly the airplane with contaminated or unapproved fuel.

In addition, Owners/Operators who are not acquainted with a particular fixed base operator should be assured that the fuel supply has been checked for contamination and is properly filtered before allowing the airplane to be serviced. Fuel tanks should be kept full between flights, provided weight and balance considerations will permit, to reduce the possibility of water condensing on the walls of partially filled tanks.

To further reduce the possibility of contaminated fuel, routine maintenance of the fuel system should be performed in accordance with the airplane Maintenance Manual. Only the proper fuel, as recommended in this POH, should be used, and fuel additives should not be used unless approved by Cessna and the Federal Aviation Administration.

SECTION 8 AIRPLANE HANDLING, SERVICE AND MAINTENANCE

LANDING GEAR

Consult the following table for servicing information on the landing gear.

COMPONENT	SERVICING CRITERIA	
Nose Wheel (5.00-5, 6-Ply Rated Tire)	45.0 PSI	
Main Wheel (6.00-6, 6-Ply Rated Tire)	42.0 PSI	
Brakes	MIL-H-5606	
Nose Gear Shock Strut	MIL-H-5606; 45.0 PSI *	

* Keep strut filled with MIL-H-5606 hydraulic fluid per filling instructions placard, and with no load on the strut, inflate with air to 45.0 PSI. Do not over inflate.

CESSNA MODEL 172S NAV III GFC 700 AFCS

CLEANING AND CARE

WINDSHIELD AND WINDOWS

The plastic windshield and windows should be cleaned with an airplane windshield cleaner. Apply the cleaner sparingly with soft cloths, and rub with moderate pressure until all dirt, oil scum and bug stains are removed. Allow the cleaner to dry, then wipe it off with soft flannel cloths.

CAUTION

NEVER USE GASOLINE, BENZENE, ALCOHOL, ACETONE, FIRE EXTINGUISHER, ANTI-ICE FLUID, LACQUER THINNER OR GLASS CLEANER TO CLEAN THE PLASTIC. THESE MATERIALS WILL ATTACK THE PLASTIC AND MAY CAUSE IT TO CRAZE.

If a windshield cleaner is not available, the plastic can be cleaned with soft cloths moistened with Stoddard solvent to remove oil and grease. Follow by carefully washing with a mild detergent and plenty of water. Rinse thoroughly, then dry with a clean moist chamois.

Do not rub the plastic with a dry cloth since this builds up an electrostatic charge which attracts dust. Waxing with a good commercial wax will finish the cleaning job. A thin, even coat of wax, polished out by hand with clean soft flannel cloths, will fill in minor scratches and help prevent further scratching.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated since the cover may scratch the plastic surface.

CLEANING AND CARE (Continued)

PAINTED SURFACES

The painted exterior surfaces of your new Cessna have a durable, long lasting finish.

Generally, the painted surfaces can be kept bright by washing with water and mild soap, followed by a rinse with water and drying with cloths or a chamois. Harsh or abrasive soaps or detergents which cause corrosion or scratches should never be used. Remove stubborn oil and grease with a cloth moistened with Stoddard solvent. Take special care to make sure that the exterior graphics are not touched by the solvent. For complete care of exterior graphics, refer to the Maintenance Manual.

To seal any minor surface chips or scratches and protect against corrosion, the airplane should be waxed regularly with a good automotive wax applied in accordance with the manufacturer's instructions. If the airplane is operated in a seacoast or other salt water environment, it must be washed and waxed more frequently to assure adequate protection. Special care should be taken to seal around rivet heads and skin laps, which are the areas most susceptible to corrosion. A heavier coating of wax on the leading edges of the wings and tail and on the cowl nose cap and propeller spinner will help reduce the abrasion encountered in these areas. Reapplication of wax will generally be necessary after cleaning with soap solution or after chemical deicing operations.

When the airplane is parked outside in cold climates and it is necessary to remove ice before flight, care should be taken to protect the painted surfaces during ice removal with chemical liquids. Isopropyl alcohol will satisfactorily remove ice accumulations without damaging the paint. However, keep the isopropyl alcohol away from the windshield and cabin windows since it will attack the plastic and may cause it to craze.

CESSNA MODEL 172S NAV III GFC 700 AFCS

CLEANING AND CARE (Continued)

PROPELLER CARE

Preflight inspection of propeller blades for nicks, and wiping them occasionally with an oily cloth to clean off grass and bug stains will assure long blade life. Small nicks on the propeller, particularly near the tips and on the leading edges, should be dressed out as soon as possible since these nicks produce stress concentrations, and if ignored, may result in cracks or failure of the propeller blade. Never use an alkaline cleaner on the blades; remove grease and dirt with Stoddard solvent.

ENGINE CARE

The engine may be cleaned, using a suitable solvent, in accordance with instructions in the Maintenance Manual. Most efficient cleaning is done using a spray type cleaner. Before spray cleaning, ensure that protection is afforded for components which might be adversely affected by the solvent. Refer to the airplane Maintenance Manual for proper lubrication of controls and components after engine cleaning. The induction air filter should be replaced when its condition warrants, not to exceed 500 hours.

CLEANING AND CARE (Continued)

INTERIOR CARE

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

Blot up any spilled liquid promptly with cleansing tissue or rags. Do not pat the spot; press the blotting material firmly and hold it for several seconds. Continue blotting until no more liquid is taken up. Scrape off sticky materials with a dull knife, then spot clean the area.

Oily spots may be cleaned with household spot removers, used sparingly. Before using any solvent, read the instructions on the container and test it on an obscure place on the fabric to be cleaned. Never saturate the fabric with a volatile solvent; it may damage the padding and backing materials.

Soiled upholstery and carpet may be cleaned with foam type detergent, used according to the manufacturer's instructions. To minimize wetting the fabric, keep the foam as dry as possible and remove it with a vacuum cleaner.

For complete information related to interior cleaning, refer to the Maintenance Manual.

AVIONICS CARE

The Garmin GDU displays have an anti-reflective coating that is very sensitive to skin oils, waxes, ammonia, and abrasive cleaners. Clean the displays as described in the G1000 Cockpit Reference Guide.

172SPHBUS-00

SECTION 9 SUPPLEMENTS

SUPPLEMENTS

INTRODUCTION

The supplements in this section contain amended operating limitations, operating procedures, performance data and other necessary information for airplanes conducting special operations for both standard and optional equipment installed in the airplane. Operators should refer to each supplement to ensure that all limitations and procedures appropriate for their airplane are observed.

A non FAA Approved Log Of Approved Supplements is provided for convenience only. This log is a numerical list of all FAA Approved supplements applicable to this airplane by name, supplement number and revision level. This log should be used as a checklist to ensure all applicable supplements have been placed in the Pilot's Operating Handbook (POH). Supplements for both standard and installed optional equipment must be maintained to the latest revision. Those supplements applicable to optional equipment which is not installed in the airplane, do not have to be retained.

Each individual supplement contains its own Log of Effective Pages. This log lists the page number and revision level of every page in the supplement. The log also lists the dates on which revisions to the supplement occurred. Supplement page numbers will include an S and the supplement number preceding the page number.

The part number of the supplement provides information on the revision level. Refer to the following example:

172SPHBUS -S1 -00 Revision Level of Supplement Supplement Number Cessna 172S, Nav III GFC 700 AFCS, U.S. Pilot's Operating Handbook (Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On)

LOG OF APPROVED SUPPLEMENTS

NOTE

It is the airplane owner's responsibility to make sure that he or she has the latest revision to each supplement of a Pilot's Operating Handbook, and the latest issued "Log Of Approved Supplements". This "Log Of Approved Supplements" was the latest version as of the date it was shipped by Cessna; however, some changes may have occurred, and the owner should verify this is the latest, most up-to-date version by contacting Cessna Propeller Aircraft Customer Services at (316) 517-5800.

Supplement	Name	Revision	Equipment
Number		Level	Installed
1	Artex ME406 Emergency Locator	0	
	Transmitter (ELT)		×
2	Artex C406-N Emergency Locator		
	Transmitter (ELT)	0	
3	Bendix/King KR87 Automatic	0	
	Direction Finder (ADF)	0	
4	Winterization Kit	0	
5	JAR-OPS Operational Eligibility	0	
6	Canadian Certified Airplanes	1	
7	Brazilian Certified Airplanes	1	
8	Argentine Certified Airplanes	0	
9	Observer Seat Kit	0	
10	Japanese Registered Airplanes	0	
11	Garmin G1000 Synthetic Vision Technology (SVT)	0	



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10648, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 1

ARTEX ME406 EMERGENCY LOCATOR TRANSMITTER (ELT)

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Artex ME406 Emergency Locator Transmitter (ELT) is installed.

APPROVED BY

AA APPROVED UNDER 14 CRR PART 21 SUBPART J Comma Ahonat Co. Delegation Option Authorization DOA-250564-CE



Member of GAMA

DATE OF APPROVAL 20 December 2007

20 DECEMBER 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S1-00

SUPPLEMENT 1

ARTEX ME406 EMERGENCY LOCATOR TRANSMITTER (ELT)

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status

Date

Original Issue

20 December 2007

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S1-1 thru S1-8	Original	0

FAA APPROVED 172SPHBUS-S1-00

S1-2

Number Title

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Airplane SerialRevisionIncorporatedEffectivityIncorporatedin Airplane

FAA APPROVED 172SPHBUS-S1-00 SECTION 9 - SUPPLEMENTS SUPPLEMENT 1 CESSNA MODEL 172S NAV III GFC 700 AFCS

ARTEX ME406 EME TRANSMITTER (ELT)

EMERGENCY

LOCATOR

GENERAL

The Artex ME406 Emergency Locator Transmitter (ELT) installation uses a solid-state 2-frequency transmitter powered by an internal lithium battery. The ME406 is also equipped with an instrument panelmounted remote switch assembly, that includes a red warning light, and an external antenna mounted on the top of the tailcone. The remote switch assembly is installed along the upper right instrument panel and controls ELT operating modes from the flight crew station. When the remote switch is set to the ARM position, the transmitter is energized only when the internal "G" switch senses longitudinal inertia forces per TSO-C91a/TSO-C126. When the remote switch is set to the ON position, the transmitter is immediately energized.

The ME406 transmitter unit is located in the tailcone along the right side behind the baggage compartment aft panel. On the ELT transmitter unit is a panel containing an ARM/ON switch and a transmitter warning light.

The ELT installation uses two different warnings to tell the pilot when the ELT is energized. The aural warning is an unusual sound that is easily heard by the pilot. The visual warning is a flashing red light directly above the remote switch that shows the pilot that the ELT has been activated.

When the ME406 is energized, the ELT transmits the standard swept tone signal on the international VHF frequency of 121.5 MHz until battery power is gone. The 121.5 MHz signal is mainly used to pinpoint the beacon during search and rescue operations, and is monitored by general aviation, commercial aircraft, and government agencies.

In addition, for the first 24 hours of the ELT being energized, a 406.028 MHz signal is transmitted at 50 second intervals. This transmission lasts 440 milliseconds and contains identification data programmed into the ELT and is received by COSPAS/SARSAT satellites. The transmitted data may include the Aircraft ID, ELT Serial Number, Country Code, and COSPAS/SARSAT ID.

(Continued Next Page)

S1-4

ARTEX ME406 ELT CONTROL PANEL



0718T1107

- 1. ELT PANEL SWITCH (2-Position Toggle Switch):
 - a. ARM (OFF) Turns OFF and ARMS transmitter for automatic activation if "G" switch senses a predetermined deceleration level.
 - b. ON Activates transmitter instantly. The ON position bypasses the automatic activation switch. The RED warning light on ELT panel and on the remote switch assembly mounted on the instrument panel should come on.
- 2. TRANSMITTER WARNING LIGHT Light comes on RED to indicate the transmitter is transmitting a distress signal.
- 3. ANTENNA RECEPTACLE Connects to the antenna mounted on top of tailcone.
- 4. REMOTE CABLE JACK Connects to the ELT remote switch assembly located on the upper right instrument panel.
- 5. REMOTE SWITCH ASSEMBLY (2-Position Rocker Switch):
 - a. ARM (OFF) Turns OFF and ARMS transmitter for automatic activation if "G" switch senses a predetermined deceleration level.
 - b. ON Remotely activates the transmitter for test or emergency situations. The RED warning light above the rocker switch comes on to indicate that the transmitter is transmitting a distress signal.

Figure S1-1

FAA APPROVED 172SPHBUS-S1-00

SECTION 9 - SUPPLEMENTS SUPPLEMENT 1

CESSNA MODEL 172S NAV III GFC 700 AFCS

OPERATING LIMITATIONS

There are no additional airplane operating limitations when the Artex ME406 ELT is installed.

The airplane owner or operator must register the ME406 ELT with the applicable civil aviation authority before use to make sure that the identification code transmitted by the ELT is in the COSPAS/SARSAT database. Refer to www.cospas-sarsat.org for registration information.

Refer to 14 CFR 91.207 for ELT inspection requirements. The ME406 must be inspected and tested by an approved technician using the correct test equipment under the appropriate civil aviation authorities approved conditions.

EMERGENCY PROCEDURES

If a forced landing is necessary, set the remote switch to the ON position before landing. This is very important in remote or mountainous terrain. The red warning light above the remote switch will flash and the aural warning will be heard.

After a landing when search and rescue aid is needed, use the ELT as follows:

NOTE

The ELT remote switch assembly could be inoperative if damaged during a forced landing. If inoperative, the inertia "G" switch will activate automatically. However, to turn the ELT OFF and ON again requires manual switching of the ELT panel switch which is located on the ELT unit.

- 1. MAKE SURE THE ELT IS ENERGIZED:
 - If the red warning light above the remote switch is not a. flashing, set the remote switch to the ON position.
 - b. Listen for the aural warning. If the COM radio(s) operate and can be energized safely (no threat of fire or explosion), energize a COM radio and set the frequency to 121.5 MHz. The ELT tone should be heard on the COM radio if the ELT is working correctly. When done, de-energize the COM radio(s) to conserve the airplane battery power.
 - Make sure that nothing is touching or blocking the ELT C. antenna.
- AFTER RESCUE Set the remote switch to the ARM position to 2. de-energize the ELT. If the remote switch does not function, set the switch on the ME406 (in the tailcone) to the ARM position.

FAA APPROVED 172SPHBUS-S1-00

U.S.

SECTION 9 - SUPPLEMENTS SUPPLEMENT 1

CESSNA MODEL 172S NAV III GFC 700 AFCS

NORMAL PROCEDURES

When operating in a remote area or over hazardous terrain, it is recommended that the ELT be inspected by an approved technician more frequently than required by 14 CFR 91.207.

NORMAL OPERATION

1. Check that the remote switch (on the upper right instrument panel) is set to the ARM position.

Normal operation of the ME406 from the flight crew station is only to de-energize and arm the ELT after it has been accidentally energized (no emergency).

The ELT can be energized by a lightning strike or hard landing. If the red light above the remote switch is flashing and the aural warning is heard, the ELT is energized. Check for the emergency signal on a COM radio set to 121.5 MHz. To stop the transmissions, set the remote switch to the ON position momentarily and then set to the ARM position. Tell the nearest Air Traffic Control facility about the accidental transmissions as soon as possible to hold search and rescue work to a minimum.

PERFORMANCE

There is no change to the airplane performance when the Artex ME406 ELT is installed.



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAWK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10648, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 2

ARTEX C406-N EMERGENCY LOCATOR TRANSMITTER (ELT)

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Artex C406-N Emergency Locator Transmitter (ELT) is installed.

APPROVED BY

AA APPROVED UNDER 14 CFR PART 21 SUBPART J Casanta Aircnait Co. Datagator Option Authorization DOA-220504-CE



Member of GAMA

DATE OF APPROVAL 20 December 2007

20 DECEMBER 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S2-00

U.S. S2-1

SECTION 9 - SUPPLEMENTS SUPPLEMENT 2 CESSNA MODEL 172S NAV III GFC 700 AFCS

SUPPLEMENT 2

ARTEX C406-N EMERGENCY LOCATOR TRANSMITTER (ELT)

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status

Date

Original Issue

20 December 2007

LOG OF EFFECTIVE PAGES

Page	Page	Revision	
Number	Status	Number	
S2-1 thru S2-8	Original	0	

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number Title

Airplane SerialRevisionIncorporatedEffectivityIncorporatedin Airplane

SECTION 9 - SUPPLEMENTS SUPPLEMENT 2

CESSNA MODEL 172S NAV III GFC 700 AFCS

ARTEX C406-N EMERGENCY LOCATOR TRANSMITTER (ELT)

GENERAL

The Artex C406-N Emergency Locator Transmitter (ELT) installation uses a solid-state 3-frequency transmitter powered by an internal lithium battery. The navigation function of the C406-N ELT receives power from the airplane's main battery thru Avionics Bus 1 and the Essential Bus. The C406-N is also equipped with an instrument panelmounted remote switch assembly, that includes a red warning light, and an external antenna mounted on the top of the tailcone. The remote switch assembly is installed along the top right side of the instrument panel and controls ELT operating modes from the flight crew station. When the remote switch is set to the ARM position, the transmitter is energized only when the internal "G-switch" senses longitudinal inertia forces per TSO-C91a/TSO-C126. When the remote switch is set to the ON position, the transmitter is immediately energized.

The C406-N transmitter unit is located in the tailcone along the right side behind the baggage compartment aft panel. On the ELT transmitter unit is a panel containing an ON/OFF switch and a transmitter warning light.

The ELT installation uses two different warnings to tell the pilot when the ELT is energized. The aural warning is an unusual sound that is easily heard by the pilot. The visual warning is a flashing red light directly above the remote switch that shows the pilot that the ELT has been activated.

When the C406-N is energized, the ELT transmits the standard swept tone signal on the international VHF frequency of 121.5 MHz and UHF frequency of 243.0 MHz until battery power is gone. The 121.5 MHz signal is mainly used to pinpoint the beacon during search and rescue operations, and is monitored by general aviation, commercial aircraft, and government agencies.

In addition, for the first 24 hours of the ELT being energized, a 406.028 MHz signal is transmitted at 50 second intervals. This transmission lasts 440 milliseconds and contains identification data programmed into the ELT and is received by COSPAS/SARSAT satellites. The transmitted data may include the Aircraft ID, GPS coordinates, ELT Serial Number, Country Code, and COSPAS/SARSAT ID.

(Continued Next Page)

S2-4

ARTEX C406-N ELT CONTROL PANEL



0718T1106

- 1. ELT PANEL SWITCH (2-Position Toggle Switch):
 - a. OFF Turns OFF and ARMS transmitter for automatic activation if "G" switch senses a predetermined deceleration level.
 - b. ON Activates transmitter instantly. The ON position bypasses the automatic activation switch. The RED warning light on ELT panel and on the remote switch assembly mounted on the instrument panel should come on.
- 2. TRANSMITTER WARNING LIGHT Light comes on RED to indicate the transmitter is transmitting a distress signal.
- 3. REMOTE CABLE JACK Connects to the ELT remote switch assembly located on the upper right instrument panel.
- 4. ANTENNA RECEPTACLE Connects to the antenna mounted on top of tailcone.
- 5. REMOTE SWITCH ASSEMBLY (2-Position Rocker Switch):
 - a. ARM (OFF) Turns OFF and ARMS transmitter for automatic activation if "G" switch senses a predetermined deceleration level.
 - b. ON Remotely activates the transmitter for test or emergency situations. The RED warning light above the rocker switch comes on to indicate that the transmitter is transmitting a distress signal.

Figure S2-1

FAA APPROVED 172SPHBUS-S2-00

SECTION 9 - SUPPLEMENTS SUPPLEMENT 2

CESSNA MODEL 172S NAV III GFC 700 AFCS

OPERATING LIMITATIONS

There are no additional airplane operating limitations when the Artex C406-N ELT is installed.

The airplane owner or operator must register the C406-N ELT with the applicable civil aviation authority before use to make sure that the identification code transmitted by the ELT is in the COSPAS/SARSAT database. Refer to www.cospas-sarsat.org for registration information.

Refer to 14 CFR 91.207 for ELT inspection requirements. The C406-N must be inspected and tested by an approved technician using the correct test equipment under the appropriate civil aviation authorities approved conditions.

FAA APPROVED 172SPHBUS-S2-00

a 6700 A 65

EMERGENCY PROCEDURES

If a forced landing is necessary, set the remote switch to the ON position before landing. This is very important in remote or mountainous terrain. The red warning light above the remote switch will flash and the aural warning will be heard.

After a landing when search and rescue aid is needed, use the ELT as follows:

NOTE

The ELT remote switch assembly could be inoperative if damaged during a forced landing. If inoperative, the inertia "G" switch will activate automatically. However, to turn the ELT OFF and ON again requires manual switching of the ELT panel switch which is located on the ELT unit.

1. MAKE SURE THE ELT IS ENERGIZED:

- a. If the red warning light above the remote switch is not flashing, set the remote switch to the ON position.
- b. Listen for the aural warning. If the COM radio(s) operate and can be energized safely (no threat of fire or explosion), energize a COM radio and set the frequency to 121.5 MHz. The ELT tone should be heard on the COM radio if the ELT is working correctly. When done, de-energize the COM radio(s) to conserve the airplane battery power.
- c. Make sure that nothing is touching or blocking the ELT antenna.
- AFTER RESCUE Set the remote switch to the ARM position to de-energize the ELT. If the remote switch does not function, set the switch on the C406-N (in the tailcone) to the OFF position.

FAA APPROVED 172SPHBUS-S2-00

SECTION 9 - SUPPLEMENTS SUPPLEMENT 2

CESSNA MODEL 172S NAV III GFC 700 AFCS

NORMAL PROCEDURES

When operating in a remote area or over hazardous terrain, it is recommended that the ELT be inspected by an approved technician more frequently than required by 14 CFR 91.207.

NORMAL OPERATION

1. Check that the remote switch (on the right instrument panel) is set to the ARM position.

Normal operation of the C406-N from the flight crew station is only to de-energize and arm the ELT after it has been accidentally energized (no emergency).

The ELT can be energized by a lightning strike or hard landing. If the red light above the remote switch is flashing and the aural warning is heard, the ELT is energized. Check for the emergency signal on a COM radio set to 121.5 MHz. To stop the transmissions, set the remote switch to the ON position momentarily and then set to the ARM position. Tell the nearest Air Traffic Control facility about the accidental transmissions as soon as possible to hold search and rescue work to a minimum.

PERFORMANCE

There is no change to the airplane performance when the Artex C406-N ELT is installed.



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10648, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 3

BENDIX/KING KR87 AUTOMATIC DIRECTION FINDER (ADF)

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Bendix/King KR 87 Automatic Direction Finder (ADF) is installed.

APPROVED BY

AA APPROVED UNDER 14 OFR PART 21 SUBPART J Casans Alvent Co.



Member of GAMA

DATE OF APPROVAL 20 December 2007

20 DECEMBER 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S3-00

U.S. S3-1
SUPPLEMENT 3

BENDIX/KING KR87 AUTOMATIC DIRECTION FINDER (ADF)

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Date 20 December 2007

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S3-1 thru S3-12	Original	0

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity Incorporated

Incorporated in Airplane

FAA APPROVED 172SPHBUS-S3-00

U.S.

S3-3

CESSNA MODEL 172S NAV III GFC 700 AFCS

BENDIX/KING KR87 AUTOMATIC DIRECTION FINDER (ADF)

GENERAL

The Bendix/King Digital ADF is a panel-mounted, digitally tuned automatic direction finder. It is designed to provide continuous 1-kHz digital tuning in the frequency range of 200-kHz to 1799-kHz and eliminates the need for mechanical band switching. The system has a receiver, a built-in electronic timer, a bearing pointer shown on the G1000 Horizontal Situation Indicator (HSI), and a KA-44B combined loop and sense antenna. Controls and displays for the Bendix/King Digital ADF are shown and described in Figure S3-1. The Garmin GMA 1347 Audio Panel is used to control audio output. Audio panel operation is described in the Garmin G1000 Cockpit Reference Guide.

The Bendix/King Digital ADF can be used for position plotting and homing procedures, and for aural reception of amplitude modulated (AM) signals.

The flip-flop frequency display allows switching between preselected standby and active frequencies by pushing the frequency transfer button. Both preselected frequencies are stored in a nonvolatile memory circuit (no battery power required) and displayed in large, easy-to-read, self-dimming gas discharge numbers. The active frequency is continuously displayed in the left window, while the right window will display either the standby frequency or the selected readout from the built-in electronic timer.

The built-in electronic timer has two timing functions that operate independently. An automatic flight timer starts when the unit is turned on. This timer counts up to 59 hours and 59 minutes. An elapsed timer will count up or down for up to 59 minutes and 59 seconds. When a preset time interval has been programmed and the countdown reaches :00, the display will flash for 15 seconds. Since both the flight timer and elapsed timer operate independently, it is possible to monitor either one without disrupting the other. The pushbutton controls are internally lighted. The light intensity is controlled by the AVIONICS dimmer control.

(Continued Next Page)

CESSNA MODEL 172S NAV III GFC 700 AFCS

B4218

BENDIX/KING KR87 AUTOMATIC DIRECTION FINDER (ADF)





0585T1043 0585T1065

Figure S3-1

FAA APPROVED 172SPHBUS-S3-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

GENERAL (Continued)

- ANT/ADF MODE ANNUNCIATOR Antenna (ANT) is selected when the ADF button is in the OUT position. This mode improves the audio reception and is usually used for station identification. The bearing pointer is deactivated and will park in the 90° relative position. Automatic Direction Finder (ADF) mode is selected by pushing the ADF button. This mode activates the bearing pointer and will point in the direction of the station relative to the aircraft heading.
- ACTIVE FREQUENCY DISPLAY The frequency to which the ADF is tuned is displayed here. The active ADF frequency can be changed directly when either of the timer functions is selected.
- BFO (Beat Frequency Oscillator) ANNUNCIATOR The BFO mode is activated and annunciated by pushing the BFO button. When BFO mode is active, the carrier wave and its morse code identifier can be heard.

NOTE

CW signals (Morse Code) are unmodulated and no audio will be heard without use of BFO. This type of signal is not used in the United States air navigation. It is used in some foreign countries and marine beacons.

- 4. STANDBY FREQUENCY/FLIGHT TIME OR ELAPSED TIME DISPLAY - When FRQ is shown, the STANDBY frequency is shown in the right display. The STANDBY frequency is selected using the frequency select knobs. The selected STANDBY frequency is put into the active frequency window by pushing the frequency transfer button. Either the standby frequency, the flight timer, or the elapsed time is shown in this position. The flight timer and elapsed timer replace the standby frequency which goes into blind memory to be called back at any time by pushing the FRQ button. Flight time or elapsed time are shown and annunciated by depressing the FLT/ET button.
- 5. FLIGHT TIMER AND ELAPSED TIMER MODE ANNUNCIATION - Either the elapsed time (ET) or flight time (FLT) mode is annunciated here.

(Continued Next Page)

S3-6

GENERAL (Continued)

- 6. FREQUENCY SELECT KNOBS Selects the standby frequency when FRQ is displayed and directly selects the active frequency whenever either of the time functions is selected. The frequency selector knobs may be turned either clockwise or counterclockwise. The small knob is pulled out to tune the 1's. The small knob is pushed in to tune the 10's. The outer knob tunes the 100's with rollover into the 1000's up to 1799. These knobs are also used to set the desired time when the elapsed timer is used in the countdown mode.
- 7. ON/OFF/VOLUME CONTROL SWITCH (ON/OFF/VOL) -Controls power and audio output level. Turn the control switch clockwise from the OFF position to energize the receiver and increase audio volume. The KR87 has audio muting which causes the audio output to be muted unless the receiver is locked on a valid station.
- SET/RESET ELAPSED TIMER BUTTON (SET/RST) The SET/ RST button resets the elapsed timer whether it is being displayed or not.
- FLIGHT TIMER/ELAPSED TIMER MODE SELECTOR BUTTON (FLT/ET) - The FLT/ET button selects either Flight Timer mode or Elapsed Timer mode when pushed.
- FREQUENCY TRANSFER BUTTON (FRQ) The FRQ transfer button interchanges the active and standby frequencies when pushed.
- 11. BFO (Beat Frequency Oscillator) BUTTON The BFO button selects the BFO mode when pushed in. (See note under item 3).
- 12. ADF BUTTON The ADF button selects either the ANT mode or the ADF mode. The ANT mode is selected when the ADF button is in the out position. The ADF mode is selected when the ADF button is pushed in.
- 13. LUBBER LINE Indicates magnetic heading of the airplane.
- 14. ROTATING COMPASS ROSE (HSI COMPASS CARD) The rotating compass rose turns as the heading of the airplane changes. The magnetic heading of the airplane is under the lubber line.
- 15. BEARING POINTER Shows magnetic bearing to the station.
- 16. BEARING INFORMATION WINDOW Shows the type of pointer that is being used as the ADF bearing pointer. If ADF is not shown, push the BRG1 or BRG2 softkey until ADF is shown.

FAA APPROVED 172SPHBUS-S3-00

U.S.

S3-7

CESSNA MODEL 172S NAV III GFC 700 AFCS

OPERATING LIMITATIONS

Refer to Section 2 of the Pilot's Operating Handbook and FAA Approved Flight Manual (POH/AFM).

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when the Bendix/King KR 87 Automatic Direction Finder (ADF) is installed.

NORMAL PROCEDURES

TO OPERATE AS AN AUTOMATIC DIRECTION FINDER:

- 1. OFF/VOL Control ON
- 2. Frequency Selector Knobs SELECT desired frequency in the standby frequency display.
- 3. FRQ Button PUSH to move the desired frequency from the standby to the active position.
- ADF Selector Switch (on audio control panel) SELECT as desired.
- 5. OFF/VOL Control SET to desired volume level and identify that desired station is being received.
- 6. PFD Softkey (on PFD) PUSH to show BRG1 and BRG2 softkeys.
- 7. BRG1 or BRG2 Softkey (on PFD) PUSH to show ADF in Bearing Information Window.
- 8. ADF Button SELECT ADF mode and note magnetic bearing on HSI.

(Continued Next Page)

NORMAL PROCEDURES (Continued)

ADF TEST (PREFLIGHT or IN FLIGHT):

- 1. ADF Button SELECT ANT mode and note pointer moves to 90° position.
- ADF Button SELECT ADF mode and note the pointer moves without hesitation to the station bearing. Excessive pointer sluggishness, wavering or reversals indicate a signal that is too weak or a system malfunction.

TO OPERATE BFO:

- 1. OFF/VOL Control ON
- 2. BFO Button PRESS ON
- 3. ADF Selector Buttons (on audio control panel) SET to desired mode.
- 4. VOL Control ADJUST to desired listening level.

NOTE

A 1000-Hz tone and Morse Code identifier is heard in the audio output when a CW signal is received.

TO OPERATE FLIGHT TIMER:

- 1. OFF/VOL Control ON
- 2. FLT/ET Mode Button PRESS (once or twice) until FLT is annunciated. Timer will already be counting since it is activated by turning the unit on.
- 3. OFF/VOL Control OFF and then ON if it is desired to reset the flight timer.

TO OPERATE AS A COMMUNICATIONS RECEIVER ONLY:

- 1. OFF/VOL Control ON
- 2. ADF Button SELECT ANT mode
- 3. Frequency Selector Knobs SELECT desired frequency in the standby frequency display.
- 4. FRQ Button PRESS to move the desired frequency from the standby to the active position.
- 5. ADF Selector Buttons (on audio control panel) SET to desired mode.
- 6. VOL Control ADJUST to desired listening level.

(Continued Next Page)

FAA APPROVED 172SPHBUS-S3-00

U.S.

S3-9

CESSNA MODEL 172S NAV III GFC 700 AFCS

NORMAL PROCEDURES (Continued)

TO OPERATE ELAPSED TIME TIMER-COUNT UP MODE:

- 1. OFF/VOL Control ON
- 2. FLT/ET Mode Button PRESS (once or twice) until ET is annunciated.
- 3. SET/RST Button PRESS momentarily to reset elapsed timer to zero.

NOTE

The Standby Frequency which is in memory while Flight Time or Elapsed Time modes are being displayed may be called back by pushing the FRQ button, then transferred to active by pushing the FRQ button again.

TO OPERATE ELAPSED TIME TIMER COUNT DOWN MODE:

- 1. OFF/VOL Control ON
- 2. FLT/ET Mode Button PRESS (once or twice) until ET is annunciated.
- 3. SET/RST Button PRESS until the ET annunciation begins to flash.
- 4. FREQUENCY SELECTOR KNOBS SET desired time in the elapsed time display. The small knob is pulled out to tune the 1's. The small knob is pushed in to tune the 10's. The outer knob tunes minutes up to 59 minutes.

NOTE

Selector knobs remain in the time set mode for 15 seconds after the last entry or until the SET/RST, FLT/ET or FRQ button is pressed.

(Continued Next Page)

NORMAL PROCEDURES (Continued)

TO OPERATE ELAPSED TIME TIMER COUNT DOWN MODE: (Continued)

5. SET/RST Button - PRESS to start countdown. When the timer reaches 0, it will start to count up as display flashes for 15 seconds.

NOTE

While FLT or ET are displayed, the active frequency on the left side of the window may be changed, by using the frequency selector knobs, without any effect on the stored standby frequency or the other modes.

ADF OPERATION NOTES:

ERRONEOUS ADF BEARING DUE TO RADIO FREQUENCY PHENOMENA:

In the U.S., the FCC, which assigns AM radio frequencies, occasionally will assign the same frequency to more than one station in an area. Certain conditions, such as Night Effect, may cause signals from such stations to overlap. This should be taken into consideration when using AM broadcast stations for navigation.

Sunspots and atmospheric phenomena may occasionally distort reception so that signals from two stations on the same frequency will overlap. For this reason, it is always wise to make positive identification of the station being tuned, by switching the function selector to ANT and listening for station call letters.

In the vicinity of electrical storms, an ADF indicator pointer tends to swing from the station tuned toward the center of the storm.

(Continued Next Page)

FAA APPROVED 172SPHBUS-S3-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS

NORMAL PROCEDURES (Continued)

ADF OPERATION NOTES: (Continued)

ELECTRICAL STORMS:

In the vicinity of electrical storms, an ADF indicator pointer tends to swing from the station tuned toward the center of the storm.

NIGHT EFFECT:

This is a disturbance particularly strong just after sunset and just after dawn. An ADF indicator pointer may swing erratically at these times. If possible, tune to the most powerful station at the lowest frequency. If this is not possible, take the average of pointer oscillations to determine station bearing.

MOUNTAIN EFFECT:

Radio waves reflecting from the surface of mountains may cause the pointer to fluctuate or show an erroneous bearing. This should be taken into account when taking bearings over mountainous terrain.

COASTAL REFRACTION:

Radio waves may be refracted when passing from land to sea or when moving parallel to the coastline. This also should be taken into account.

PERFORMANCE

There is no change in airplane performance when the Bendix/King KR 87 Automatic Direction Finder (ADF) is installed. However, the installation of an externally mounted antenna or related external antennas, will result in a minor reduction in cruise performance.



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10648, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 4

WINTERIZATION KIT

SERIAL NO.

REGISTRATION NO._

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Winterization Kit is installed.

APPROVED BY

AA APPROVED UNDER 14 CFR PART 21 SUBPART J Catanta Atomit Co. Dategaton Option Authorization DOA-200504-CE



Member of GAMA

DATE OF APPROVAL 20 December 2007

20 DECEMBER 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S4-00

U.S. S4-1

SUPPLEMENT 4

WINTERIZATION KIT

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Date 20 December 2007

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S4-1 thru S4-6	Original	0

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity Incorporated Incorporated in Airplane

CESSNA MODEL 172S NAV III GFC 700 AFCS

WINTERIZATION KIT

GENERAL

B8018

The winterization kit consists of two cover plates, with placards, which attach to the air intakes in the cowling nose cap, a placard silk screened on the instrument panel, and insulation for the crankcase breather tube. This equipment should be installed for operations in temperatures consistently below 20°F (-7°C). Once installed, the crankcase breather insulation is approved for permanent use in both hot and cold weather operations.





FAA APPROVED 172SPHBUS-S4-00

OPERATING LIMITATIONS

The following information must be presented in the form of placards when the airplane is equipped with a winterization kit.

1. On each nose cap cover plate:



2. On the instrument panel below the PFD:

B7545

B8021

WINTERIZATION KIT MUST BE REMOVED WHEN OUTSIDE AIR TEMPERATURE IS ABOVE 20° F.

FAA APPROVED 172SPHBUS-S4-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when the winterization kit is installed.

NORMAL PROCEDURES

There is no change to the airplane normal procedures when the winterization kit is installed.

PERFORMANCE

There is no change to the airplane performance when the winterization kit is installed.



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK SP

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10648, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 5

JAR-OPS OPERATIONAL ELIGIBILITY

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for JAR-OPS Operational Eligibility.

APPROVED BY

AA APPROVED UNDER 14 CHR PART 21 SUBPART J Catanta Akoral Co. Delegator Option Americation DOA: 200594-CE



Member of GAMA

DATE OF APPROVAL 20 December 2007

20 DECEMBER 2007

COPYRIGHT © 2007 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S5-00

U.S. S5-1

SUPPLEMENT 5

JAR-OPS OPERATIONAL ELIGIBILITY

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Date 20 December 2007

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S5-1 thru S5-5/S5-6	Original	0

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity Incorporated Incorporated in Airplane

JAR-OPS OPERATIONAL ELIGIBILITY

GENERAL

OPERATIONAL ELIGIBILITY

The JAA TGLs noted below specify that Operational Eligibility information be included in the airplane POH/AFM or POH/AFM Supplement for convenience in the JAR-OPS approval process. This Supplement provides a consistent location for the requested information. This information does not address the operation of the airplane or equipment by the pilot.

NAVIGATION OPERATIONAL ELIGIBILITY

The GPS/GNSS receivers in the G1000 System are certified to TSO C129a Class A1 and ETSO C129a Class A1 or TSO C145a and ETSO 2C145a.

The installed performance of the G1000 System has been tested and approved for IFR enroute, terminal and non-precision (RNAV or GPS) approach operations per AC 20-138A when using GPS/GNSS with the correct navigation database.

The G1000 System meets the requirements for GPS/GNSS as a Primary Means of Navigation for Oceanic/Remote Operations (RNP-10) per AC 20-138A, FAA Notice N8110.60, FAA Order 8400-12A and FAA Order 8700-1. Both GPS/GNSS receivers are required to be operating and receiving usable signals except for routes requiring only one Long Range Navigation sensor.

The G1000 System has been shown to be eligible for BRNAV (RNP-5) and PRNAV (RNP-1) Enroute and Terminal navigation per JAA TGL-2 (ACJ20X4), JAA TGL-10 and AC 90-96A provided that the G1000 is receiving usable navigation information from at least one GPS receiver. Eligibility does not constitute Operational Approval.

(Continued Next Page)

GENERAL (Continued)

SSR MODE S ENHANCED SURVEILLANCE OPERATIONAL ELIGIBILITY

The GTX 33 Transponder is certified to TSO C112a and ETSO 2C112a. The installed performance of the GTX 33 has been tested and approved per AC 20-131A, Draft AC-131B and AC 23-8B.

The GTX 33 is able to respond to interrogations in Modes A, C and is fully compliant with the requirements of Mode S Elementary Surveillance per TGL 13 Rev 1 and Draft TGL 13 Rev 2. Extended Squitter functionality is supported by the GTX 33. This does not constitute airworthiness or operational approval for Extended Squitter functionality.

OPERATING LIMITATIONS

There is no change to the airplane operating limitations for JAR-OPS Operational Eligibility. JAR-OPS may require separate airspace operating limitations.

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures for JAR-OPS Operational Eligibility.

NORMAL PROCEDURES

There is no change to the airplane normal procedures for JAR-OPS Operational Eligibility.

PERFORMANCE

There is no change to the airplane performance for JAR-OPS Operational Eligibility.

FAA APPROVED 172SPHBUS-S5-00



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 6

CANADIAN CERTIFIED AIRPLANES

SERIAL NO.

REGISTRATION NO.__

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for Canadian Certified Airplanes.

APPROVED BY

PROVED UNDER 14 CFR PART 21 SUBPART J

Member of GAMA

DATE OF APPROVAL 18 February 2008

COPYRIGHT © 2008 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

18 FEBRUARY 2008

REVISION 1 21 MAY 2008

172SPHBUS-S6-01

U.S. S6-1

CESSNA MODEL 172S NAV III GFC 700 AFCS

SUPPLEMENT 6

CANADIAN CERTIFIED AIRPLANES

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Date

Supplement Status Original Issue Revision 1

18 February 2008 21 May 2008

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
* S6-1 thru S6-2	Revised	1
S6-3	Original	0
* S6-4 thru S6-5/S6-6	Revised	1

APPROVED BY

FAAAPPROVED UNDER 14 CFR PART 21 SUBPART J Cesum Alrcast Co. Delegation Option Authorization DOA-230504-CE

DOAA RLS

DATE OF APPROVAL 21 MAY 2008

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity Incorporated

Incorporated in Airplane

CANADIAN CERTIFIED AIRPLANES

GENERAL

This supplement is required for Canadian operation of Cessna Model 172S airplanes equipped with the Nav III GFC 700 AFCS avionics option.

NOTE

In Canada, FAA operating rules (i.e., 14 CFR 91 and 14 CFR 135) and any references to such rules in the basic manual and approved supplements are not applicable. The airplane must be equipped and operated in accordance with Canadian operating requirements. Refer to the Canadian Aviation Regulations (CARs) for the operating and equipment requirements that do pertain to operations in Canada.

OPERATING LIMITATIONS

KINDS OF OPERATIONS LIMITS

The Kinds of Operations Equipment List (KOEL) may not necessarily apply in Canada. Refer to the Canadian Aviation Regulations (CARs) for the equipment requirements that pertain to operations in Canada.

EMERGENCY LOCATOR TRANSMITTER

The Artex ME406 Emergency Locator Transmitter equipped with a Lithium Sulphur Dioxide battery is not approved for Canadian Certified Airplanes.

The Artex ME406 Emergency Locator Transmitter equipped with a Lithium Manganese Dioxide battery is approved for Canadian Certified Airplanes.

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures for Canadian Certified Airplanes.

NORMAL PROCEDURES

There is no change to the airplane normal procedures for Canadian Certified Airplanes.

PERFORMANCE

There is no change to the airplane performance for Canadian Certified Airplanes.



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 7 BRAZILIAN CERTIFIED AIRPLANES

SERIAL NO.

REGISTRATION NO._

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when used for Brazilian Certified Airplanes and is approved by the U.S. Federal Aviation Administration (FAA) on behalf of the "Agência Nacional de Aviação Civil" (ANAC) for Brazilian Registered Airplanes, in accordance with the "Regulamento Brasileiro de Homologação Aeronáutica" (RBHA) 21, Section 21.29.

APPROVED BY

FAA.APPROVED UNDER 14 CFR PART 21 SUBPART J Cessons Alicosifi Co. Delegation Option Authorization DOA-230504-CE



Member of GAMA

DATE OF APPROVAL D3 MHRCH 2008

COPYRIGHT © 2008 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

3 MARCH 2008

REVISION 1 - 11 MAY 2009

172SPHBUS-S7-01

U.S. S7-1

CESSNA MODEL 172S NAV III GFC 700 AFCS

SUPPLEMENT 7

BRAZILIAN CERTIFIED AIRPLANES

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Revision 1 Date 3 March 2008 11 May 2009

LOG OF EFFECTIVE PAGES

Page Number	Page Status	Revision Number
* S7-1 thru S7-2	Revised	1
S7-3 thru S7-4	Original	0
* S7-5/S7-6	Revised	1

APPROVED BY

00138-CE Ris

DATE OF APPROVAL // MAY 2009

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number Title

Airplane Serial Effectivity

al <u>Revision</u> Incorporated Incorporated in Airplane

FAA APPROVED 172SPHBUS-S7-00

GENERAL

This supplement is required for Brazilian operation of Cessna Model 172S airplanes equipped with the Nav III GFC 700 AFCS avionics option.

OPERATING LIMITATIONS

There is no change to the airplane operating limitations when used for Brazilian Certified Airplanes.

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when used for Brazilian Certified Airplanes.

NORMAL PROCEDURES

There is no change to the airplane normal procedures when used for Brazilian Certified Airplanes.

PERFORMANCE

There is no change to the airplane performance when used for Brazilian Certified Airplanes.

LOG OF ANAC APPROVED SUPPLEMENTS

The following list contains ANAC accepted supplements. Refer to Log of Approved Supplements in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for revision status.

Supplement	Name	Equipment
Number		Installed
1	Artex ME406 Emergency Locator Transmitter (ELT)	
2	Artex C406-N Emergency Locator Transmitter (ELT)	
3	Bendix/King KR 87 Automatic Direction Finder (ADF)	_
4	Winterization Kit	
5	Reserved	
6	Reserved	
7	Brazilian Certified Airplanes	
8	Reserved	
9	Reserved	
10	Reserved	
11	Garmin G1000 Synthetic Vision Technology (SVT)	



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 8 ARGENTINE CERTIFIED AIRPLANES

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when used for Argentine Certified Airplanes. This Airplane Flight Manual Supplement is approved in accordance with Section 21.29 of DNAR 21 for Argentine registered airplanes and is approved by the US Federal Aviation Administration (FAA) on behalf of the Dirección Nacional de Aeronavegabilidad (D.N.A.).

APPROVED BY

FAA.APPROVED UNDER 14 CFR PART 21 SUBPART J Cesses Aircraft Co. Deleasition Oction Authorization DOA-230594-CE

Member of GAMA

DATE OF APPROVAL 08 September 2008

8 SEPTEMBER 2008

COPYRIGHT © 2008 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S8-00

SUPPLEMENT 8

ARGENTINE CERTIFIED AIRPLANES

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Date

8 Se

8 September 2008

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S8-1 thru S8-15/S8-16	Original	0

FAA APPROVED 172SPHBUS-S8-00

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number <u>Title</u>

tle

Airplane Serial Effectivity <u>Revision</u> Incorporated Incorporated in Airplane

CESSNA MODEL 172S NAV III GFC 700 AFCS

GENERAL

This supplement is required for Argentine operation of Cessna Model 172S airplanes equipped with the Nav III GFC 700 AFCS avionics option. The information herein supplements the information of the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. For limitations, procedures and performance information not contained in the supplement, consult the basic FAA Approved Airplane Flight Manual.

OPERATING LIMITATIONS

GLOBAL POSITIONING SYSTEM (G.P.S.)

If the GPS is installed: Pilot is not authorized to use the Global Positioning System (GPS) for precision approach and landing.

EMERGENCY LOCATOR TRANSMITTER (E.L.T.)

The Emergency Locator Transmitter (ELT) must comply with RAAC 91.207.

KINDS OF OPERATIONS LIMITS

The necessary equipment for the different kind of operations must comply with the applicable regulations for Argentina.
SECTION 9 - SUPPLEMENTS SUPPLEMENT 8

PLACARDS

The following information must be displayed in the form of composite or individual placards.

 In full view of the pilot: (The "DAY-NIGHT-VFR-IFR" entry, shown on the example below, will vary with installed equipment).

The markings and placards installed in this airplane contain operating limitations which must be complied with when operating this airplane in the Normal Category. Other operating limitations which must be complied with when operating this airplane in this category or in the Utility Category are contained in the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. Normal Category - No acrobatic maneuvers, including spins, approved. Utility Category - No acrobatic maneuvers approved, except those listed in the Pilot's Operating Handbook. Baggage compartment and rear seat must not be occupied. Spin Recovery - Opposite rudder- forward elevator-neutralize controls. Flight into known icing conditions prohibited. This airplane is certified for the following flight operations as of date of original airworthiness certificate: DAY - NIGHT - VFR- IFR Las marcas y placas instaladas en este avión contienen limitaciones operativas que deben ser cumplidas al operar este avión en la Categoría Normal. En el Manual de Operaciones del Piloto y en el Manual de Vuelo del Avión aprobado por la DNA están contenidas otras limitaciones operativas que se deben cumplir al operar el avión en esta categoría o en la categoría utilitarios. Categoría Normal - No están aprobadas las maniobras acrobáticas, incluido tirabuzón. Categoria Utilitarios - No están aprobadas las maniobras acrobáticas, excepto aquellas que se encuentran en el Manual de Operaciones del Piloto. No se deben ocupar los compartimentos para equipaje ni los asientos traseros. Salida de tirabuzón - Timón contrario, elevador hacia delante, centrar los comandos. Está prohibido el vuelo en condiciones conocidas de formación de hielo. Este avión está certificado para las siguientes operaciones de vuelo a partir de la fecha del certificado de aeronavegabilidad original: DÍA - NOCHE - VER- IER

(Continued Next Page)

FAA APPROVED 172SPHBUS-S8-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

2. On control lock:

B6143



¡ADVERTENCIA!

TRABA DE CONTROL

QUITAR ANTES DE ENCENDER EL MOTOR

(Continued Next Page)

S8-6

B7652

SECTION 9 - SUPPLEMENTS SUPPLEMENT 8

PLACARDS (Continued)

3. On the fuel selector valve:



DESPEGUE ATERRIZAJE AMBOS TODAS LAS ALTITUDES 200 LTS. DE VUELO

SELECTOR DE COMBUSTIBLE

IZQUIERDA 100 LTS. VUELO HORIZONTAL SOLAMENTE DERECHA 100 LTS. VUELO HORIZONTAL SOLAMENTE

(Continued Next Page)

FAA APPROVED 172SPHBUS-S8-00

U.S.

S8-7

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

4. Near both fuel tank filler caps:

B7645

FUEL 100LL / 100 MIN. GRADE AVIATION GASOLINE CAP. 26.5 U.S. GAL. (100 LITRES) USABLE CAP. 17.5 U.S. GAL. (66 LITRES) USABLE TO BOTTOM OF FILLER INDICATOR TAB.

NAFTA DE AVIACIÓN GRADO 100LL/100 MIN.

CAP. 100 LTS (26.5 GALONES ESTADOUNIDENSES)

CAP. UTILIZABLE DE 66 LTS (17.5 GALONES ESTADOUNIDENSES)

UTILIZABLE HASTA LA PARTE INFERIOR DE LA ALETA INDICADORA DE LLENADO.

(Continued Next Page)

SECTION 9 - SUPPLEMENTS SUPPLEMENT 8

PLACARDS (Continued)

5. On flap control indicator:



(Continued Next Page)

FAA APPROVED 172SPHBUS-S8-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

6. In baggage compartment:

B7647

120 POUNDS MAXIMUM BAGGAGE FORWARD OF BAGGAGE DOOR LATCH

50 POUNDS MAXIMUM BAGGAGE AFT OF BAGGAGE DOOR LATCH

MAXIMUM 120 POUNDS COMBINED FOR ADDITIONAL LOADING INSTRUCTIONS SEE WEIGHT AND BALANCE DATA

54 KG MÁXIMO

EQUIPAJE ADELANTE DE LA TRABA DE LA PUERTA DE EQUIPAJE

22 KG MÁXIMO

EQUIPAJE POSTERIOR A LA TRABA DE LA PUERTA DE EQUIPAJE

MÁXIMO: 54 KG COMBINADOS

PARA INSTRUCCIONES ADICIONALES DE CARGA VER DATOS DE PESO Y BALANCEO

(Continued Next Page)

B6148

B7648

SECTION 9 - SUPPLEMENTS SUPPLEMENT 8

PLACARDS (Continued)

7. A calibration card must be provided to indicate the accuracy of the magnetic compass in 30° increments.

Se debe proporcionar una tarjeta de calibración para indicar la precisión de la brújula magnética en incrementos de 30°.



8. Molded on the oil filler cap/dipstick:



ACEITE 8 QTS

(Continued Next Page)

FAA APPROVED 172SPHBUS-S8-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

PLACARDS (Continued)

9. Silk-screened on the instrument panel directly above the PFD:

MANEUVERING SPEED: 105 KIAS

VELOCIDAD DE MANIOBRA -105 KIAS

10. Silk-screened on the upper right instrument panel:

B6151

B7938

SMOKING PROHIBITED

PROHIBIDO FUMAR

11. On auxiliary power plug door and second placard on battery box:

B6152

CAUTION 24 VOLTS D.C. THIS AIRCRAFT IS EQUIPPED WITH ALTERNATOR AND A NEGATIVE GROUND SYSTEM. OBSERVE PROPER POLARITY REVERSE POLARITY WILL DAMAGE ELECTRICAL COMPONENTS.

ADVERTENCIA 24 VOLTIOS C.C.

ESTA AERONAVE ESTÁ EQUIPADA CON ALTERNADOR Y UN SISTEMA DE CONEXIÓN A MASA NEGATIVO

RESPETAR LA POLARIDAD APROPIADA

LA POLARIDAD INVERSA DAÑARÁ LOS COMPONENTES ELÉCTRICOS

(Continued Next Page)

S8-12

SECTION 9 - SUPPLEMENTS SUPPLEMENT 8

PLACARDS (Continued)

12. On the upper right side of the aft cabin partition:

B7651

EMERGENCY LOCATOR TRANSMITTER INSTALLED AFT OF THIS PARTITION. MUST BE SERVICED IN ACCORDANCE WITH 14 CFR 91.207

TRANSMISOR LOCALIZADOR DE EMERGENCIA

INSTALADO EN LA PARTE POSTERIOR DE ESTE TABIQUE

SERVICE EN CONFORMIDAD CON RAAC 91.207

13. On the center overhead flood light control switch:



PROYECTOR DE ATERRIZAJE

CESSNA MODEL 172S NAV III GFC 700 AFCS

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when used for Argentine Certified Airplanes.

NORMAL PROCEDURES

There is no change to the airplane normal procedures when used for Argentine Certified Airplanes.

PERFORMANCE

There is no change to the airplane performance when used for Argentine Certified Airplanes.

LOG OF D.N.A. ACCEPTED SUPPLEMENTS

The following list contains D.N.A. accepted supplements. Refer to Log of Approved Supplements in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for revision status.

Supplement Number	ent Name Equipment r Installed					
1	Artex ME406 Emergency Locator Transmitter (ELT)					
2	Artex C406-N Emergency Locator Transmitter (ELT)					
3	Bendix/King KR 87 Automatic Direction Finder (ADF)					
4	Winterization Kit					
5	Reserved					
6	Reserved					
7	Reserved					
8	Argentine Certified Airplanes					



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 9

OBSERVER SEAT KIT

SERIAL NO.

REGISTRATION NO.

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Observer Seat Kit is installed.

APPROVED BY

ROVED UNDER 14 CFR PART 21 SUBPART J Canana Alexand Co. DOL TROBALCE

4 NOVEMBER 2008



Member of GAMA

DATE OF APPROVAL 04 November 2008

COPYRIGHT © 2008 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S9-00

U.S. S9-1

SUPPLEMENT 9

OBSERVER SEAT KIT

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Date

Supplement Status Original Issue

4 November 2008

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S9-1 thru S9-8	Original	0

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity

Incorporated

Incorporated in Airplane

OBSERVER SEAT KIT

GENERAL

SEATS

The observer seat is installed in the center of the aircraft, aft of the pilot and front seat passenger seats. The seat is adjustable forward and aft. The angle of the seat back is infinitely adjustable.

Forward and aft adjustment is made using the handle located below the center of the seat frame. To position the seat, lift the handle, slide the seat into position, release the handle and check that the seat is locked in place. To adjust the seat back angle, pull up on the release button, located in center front of seat, just under the seat bottom, position the seat back to the desired angle, and release the button. When the seat is not occupied, the seat back will automatically fold forward whenever the release button is pulled up.

INTEGRATED SEAT BELT/SHOULDER HARNESS

The observer seat is equipped with an integrated seat belt/shoulder harness assembly. The design incorporates an overhead inertia reel for the shoulder portion, and a retractor assembly for the lap portion of the belt. This design allows for complete freedom of movement of the upper torso area while providing restraint in the lap belt area. In the event of a sudden deceleration, reels lock up to provide positive restraint for the user.

To use the integrated seat belt/shoulder harness, grasp the link with one hand, and, in a single motion, extend the assembly and insert into the buckle. Positive locking has occurred when a distinctive "snap" sound is heard.

(Continued Next Page)

GENERAL (Continued)

INTEGRATED SEAT BELT/SHOULDER HARNESS (Continued)

Proper locking of the lap belt can be verified by ensuring that the belt is allowed to retract into the retractor and the lap belt is snug and low on the waist as worn normally during flight. No more than one additional inch of belt should be able to be pulled out of the retractor once the lap belt is in place on the occupant. If more than one additional inch of belt can be pulled out of the retractor, the occupant is too small for the installed restraint system and the seat should not be occupied until the occupant is properly restrained.

Removal is accomplished by pressing the release button on the buckle and pulling out and up on the harness. Spring tension on the inertia reel will automatically stow the harness.

OPERATING LIMITATIONS

WEIGHT LIMITS

MAXIMUM WEIGHT IN BAGGAGE COMPARTMENT - UTILITY CATEGORY:

The baggage compartment must be empty and observer seat must not be occupied.

MANEUVER LIMITS

UTILITY CATEGORY

In the utility category, the observer seat must not be occupied and the baggage compartment must be empty.

For additional limitations refer to Section 2 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual (POH/AFM).

FAA APPROVED 172SPHBUS-S9-00

U.S.

S9-5

CESSNA MODEL 172S NAV III GFC 700 AFCS

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when the Observer Seat Kit is installed.

NORMAL PROCEDURES

There is no change to the airplane normal procedures when the Observer Seat Kit is installed.

PERFORMANCE

There is no change in airplane performance when the Observer Seat Kit is installed.



NOTE

Line representing pilot and front passenger's center of gravity, on adjustable seats, is positioned for an average occupant. Line representing rear passenger's center of gravity, on adjustable seat, is positioned for an average occupant. Refer to the Loading Arrangements diagram for forward and aft limits of occupant C.G. range.

Figure S9-1

FAA APPROVED 172SPHBUS-S9-00

U.S.

CESSNA MODEL 172S NAV III GFC 700 AFCS





0585T1016

*Pilot, front seat passenger, and rear passenger's center of gravity, on adjustable seats, is positioned for an average occupant. Numbers in parentheses indicate forward and aft limits of occupant center of gravity range.

**Arm measured to the center of the areas shown.

NOTE

- The usable fuel C.G. arm is located at FS 48.00.
- The aft baggage wall (approximate FS 108.00) or aft baggage wall (approximate FS 142.00) can be used as a convenient interior reference point for determining the location of baggage area fuselage stations.
- To achieve an airplane loading within the utility category, it may be necessary to remove the observer seat assembly from the airplane. Refer to Figure 6-9 for applicable weight and arm.

Figure S9-2

FAA APPROVED 172SPHBUS-S9-00



Pilot's Operating Handbook And FAA Approved Airplane Flight Manual SKYHAVVK

CESSNA MODEL 172S

NAV III AVIONICS OPTION - GFC 700 AFCS Serials 172S10468, 172S10507, 172S10640 and 172S10656 and On

SUPPLEMENT 11

GARMIN G1000 SYNTHETIC VISION TECHNOLOGY

SERIAL NO.

REGISTRATION NO.__

This supplement must be inserted into Section 9 of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Garmin G1000 Synthetic Vision Technology is installed.

APPROVED BY

aproved Under 14 OFR Part 183 Subpart D DA-100129-CE

Member of GAMA

DATE OF APPROVAL 09 March 2009 9 MARCH 2009

COPYRIGHT © 2009 CESSNA AIRCRAFT COMPANY WICHITA, KANSAS, USA

172SPHBUS-S11-00

U.S. S11-1

SUPPLEMENT 11

GARMIN G1000 SYNTHETIC VISION TECHNOLOGY

Use the Log of Effective Pages to determine the current status of this supplement.

Pages affected by the current revision are indicated by an asterisk (*) preceding the page number.

Supplement Status Original Issue Date 9 March 2009

LOG OF EFFECTIVE PAGES

Page	Page	Revision
Number	Status	Number
S11-1 thru S11-5/S11-6	Original	0

SERVICE BULLETIN CONFIGURATION LIST

The following is a list of Service Bulletins that are applicable to the operation of the airplane, and have been incorporated into this supplement. This list contains only those Service Bulletins that are currently active.

Number

Title

Airplane Serial Revision Effectivity Incorporated

Incorporated in Airplane

FAA APPROVED 172SPHBUS-S11-00

CESSNA MODEL 172S NAV III GFC 700 AFCS

GARMIN G1000 SYNTHETIC VISION TECHNOLOGY

GENERAL

The Garmin G1000 Synthetic Vision Technology (SVT) is primarily composed of a computer-generated, forward looking attitude aligned view of the topography immediately in front of the airplane from the pilot's perspective. The SVT information is shown on the Primary Flight Display (PFD) and offers a three dimensional view of potentially hazardous terrain, obstacles and traffic complete with the requisite red or yellow shading overlaid. For complete system description and operation, refer to the Garmin G1000 Cockpit Reference Guide (CRG).

NOTE

- Not all airport runways are depicted with SVT.
- All SVT pathways are disabled.

OPERATING LIMITATIONS

The G1000 limitations listed in Section 2, of the POH apply when using SVT. In addition to, SVT is not available in locations north of 75° North latitude or south of 60° South latitude due to the absence of terrain data in these geographical areas.

Airplane maneuvering in any flight phase shall not be based solely on information from the G1000 SVT. SVT shall not be used as the primary means of terrain, obstacle or traffic avoidance.

The G1000 SVT shall not be used for primary flight guidance.

Descent below published IFR minimums shall not be predicated upon the use of G1000 SVT.

The current Garmin G1000 Cockpit Reference Guide Part number for SVT that must be available to the pilot during flight is displayed on the MFD AUX group, SYSTEM STATUS page.

EMERGENCY PROCEDURES

There is no change to the airplane emergency procedures when the Garmin G1000 Synthetic Vision Technology is installed.

NORMAL PROCEDURES

There is no change to the airplane normal procedures when the Garmin G1000 Synthetic Vision Technology is installed.

PERFORMANCE

There is no change to the airplane performance when the Garmin G1000 Synthetic Vision Technology is installed.

· 유규 에너님 방송 200 이 나서 비가 가장

30-00 P 10 P 20

FAA APPROVED AIRPLANE FLIGHT MANUAL SUPPLEMENT

to

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

for

Cessna Aircraft Company

Skyhawk Models: 172R, 172S

Skylane Models 182S, 182T, T182T

Stationair Models 206H, T206H

Airplane Reg. No. _____ Airpla

Airplane S/N:

This supplement must be attached to the FAA-Approved Cessna Airplane Models 172R, 172S, 182S, 182T, T182T, 206H, and T206H associated Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Airplane is modified by the installation of AmSafe Aviation Inflatable Restraint (AAIR[®]) System, V23 Version in accordance with STC No. SA01700LA.

The information contained herein supplements or supersedes the basic manual only in those areas listed herein. For limitations, procedures, and performance information not contained in this supplement, consult the associated Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED

Manager, Flight Test Branch, ANM-160L Federal Aviation Administration Los Angeles Aircraft Certification Office Transport Airplane Directorate

m 28, 2007 Date

Title (Page 1 of 5)

AFM Supplement for AmSafe Aviation Inflatable Restraint On Cessna 172,182, and 206 STC <u>SA01700LA</u>

LOG OF REVISIONS

REVNO	EFFECTED PAGES	DATE	DESCRIPTION	FAA APPROVAL
IR	Title (1) 11-24-04 Initial Release Original sign Log Page (2) 11-24-04 Manager, Fil 3 11-24-04 Federal Avia 4 11-24-04 Transport Ali		Orioinal signed P. Power Manager, Flight Test Branch, ANM-160L Federal Aviation Administration Los Angeles Aircraft Cetification Office Transport Airplane Directorate Date: November 24, 2004	
A	Log Page (2) 3 4	12-21-04 12-21-04 12-21-04	Added information in SECTION 1and a limitation in SECTION 2. Corrected Moment Arm for system installations in all models.	Original signed by P. Power Manager, Flight Test Branch, ANM-160L Federal Aviation Administration Los Angeles Aircraft Certification Office Transport Airplane Directorate Date: December 21, 2004
В	Log Page (2) 4	4-14-05 4-14-05	Added weight and balance information summary for Models 172, 182, and 206 without rear bench seat AAIR Systems.	Original signed by P. Power Manager, Flight Test Branch, ANM-160L Federal Aviation Administration Los Angeles Aircraft Certification Office Transport Airplane Directorate Date: April 14, 2005
C	Log Page (2) 4 5 - Added	10-26-05 10-26-05 10-26-05	Section 6 – changed paragraph to explain alternate calculation concerning new EMA. Added weight and balance information summary for Model 206 additional kits and added alternate summaries for all models with new, lighter EMA in parenthesis.	Original signed by P. Power Manager, Flight Test Branch, ANM-160L Federal Aviation Administration Los Angeles Aircraft Certification Office Transport Airplane Directorate Date: October 26, 2005
D	Title (1) Log Page (2) 3 4 5	6-28-07 6-28-07 6-28-07 6-28-07 6-28-07	Updated Title by removing POH part numbers and added Title and page to footer. Section 2 - First paragraph – deleted part numbers from first sentence and deleted reference to part numbers above in last sentence. Third paragraph – sentence was "The restraint in an empty co-pilot or passenger seat must not, "Added warning label for orientation of airbag and information or additional Child Seat Buckle for Middle Seats of 206. Section 6 – deleted bolded empty weight in all summaries and deleted last paragraph. Whole Document – updated changed Company name from AMSAFE, Inc. to AMSAFE, Inc.	Manager, Flight fest Branch, ANM-160L, Federal Aviagen Administration Los Angeles Aircraft Certification Office Transport Alplane Directorate Date: <u>Trans 1.8, 2007</u>

Page 2 of 5

AFM Supplement for AmSafe Aviation Inflatable Restraint On Cessna 172,182, and 206 STC <u>SA01700LA</u>

SECTION 1 GENERAL

The AAIR V23 is a self-contained, modular, three-point restraint system that improves protection from serious head-impact injury during a survivable airplane crash by inclusion of an inflatable airbag to the lapbelt portion of the three-point restraint. An unbuckled restraint airbag will not inflate.

SECTION 2 LIMITATIONS

A child safety seat shall not be used with the V23 AAIR System in the front seat (co-pilot). A child safety seat may be used in the rear seat positions only by attaching the child seat with an auxiliary child seat buckle. The standard inflatable restraint buckle cannot be used to secure a child safety seat.

The Auxiliary Child Seat Buckle adapter secures a Child Safety Seat to either left or right positions of the Rear Seat for all models and the Middle Seats for Model 206 (see warning label below). For the Rear Seats, it is typically stored under the cushion and is found in the center of the seat adjacent to the standard AAIR End-Release Buckle Assembly. For the Middle Seats of Model 206, it is attached at the same attachment point as the metal strap AAIR End-release Buckle Assy and may be stored under the seat cushion. Both these Child Seat Buckle adapters are identifiable by part number below and attach to the Airbag Belt portion of the Seatbelt Airbag Assembly (see diagram).

It is recommended that the restraint in an empty co-pilot or passenger seat not be buckled to prevent inflation of the lapbelt airbag in the unoccupied seat.



Representative Seatbelt Warning Label Note: Label side of belt goes towards occupant. Middle Seats for Model 206





Forward

Rear Bench Seat for Models 172, 182, and 206



7035-2090112396 7035-2100212396

FAA Approved 6-28-07

Page 3 of 5

AFM Supplement for AmSafe Aviation Inflatable Restraint On Cessna 172,182, and 206 STC SA01700LA

SECTION 3 EMERGENCY PROCEDURES

No Change

SECTION 4 NORMAL PROCEDURES

To activate the system, join (buckle) the three-point restraint in the same manner as any other three-point seatbelt. An empty co-pilot or passenger seat restraint must not be buckled.

SECTION 5 PERFORMANCE

No Change

SECTION 6 WEIGHT AND BALANCE/EQUIPMENT LIST

For complete information of the AAIR V23 System effect on weight and balance loading to the airplane, please refer to AmSafe Aviation's, Weight and Balance Information Report, Document No. E508952.

In the summary that follows, Empty Weights and Moments are given for AAIR Systems with the current EMA, P/N 508358-409 and the new, lighter-weight EMA, P/N 508358-421, useful for loading and Center of Gravity calculations. Those expressed in parentheses were calculated using the new, lighter EMA, P/N 508358-421.

Models 172R, 172S - with optional rear seat bench AAIR System

Weight-lbs.	Arm-in,	Moment-in. Ibs.	
7.638	57.928	442.454	AAIR System Difference Added (EMA, P/N 508358-409)
(7.338)		(425.075)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 172R, 172S - without optional rear seat bench AAIR System

Weight-lbs,	Arm-in.	Moment-in. Ibs.	
3.848	45.397	174.686	AAIR System Difference Added (EMA, P/N 508358-409)
(3.698)		(167.871)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 182S, 182T, T182T - with rear seat bench AAIR System

Weight-lbs.	Arm-in.	Moment-in. lbs.	
7.638	57.682	440.578	AAIR System Difference Added (EMA, P/N 508358-409)
(7.338)		(423.270)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 182S, 182T, T182T - without rear seat bench AAIR System

Weight-lbs.	Arm-in.	Moment-in lbs.	
3.848	41.798	160.838	AAIR System Difference Added (EMA, P/N 508358-409)
(3.698)		(154.569)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 206H, T206H - with optional rear seat bench AAIR System

Weight-lbs.	Arm-in.	Moment-in.lbs.	
11.54	69.782	805.284	AAIR System Difference Added (EMA, P/N 508358-409)
(11.090)		(773.882)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 206H, T206H - without optional rear seat bench AAIR System

Weight-lbs.	Arm-in.	Moment-in.lbs.	
7.75	53.852	417.350	AAIR System Difference Added (EMA, P/N 508358-409)
(7.450)		(401.197)	AAIR System Difference Added (EMA, P/N 508358-421)

FAA Approved 6-28-07

Page 4 of 5

AFM Supplement for AmSafe Aviation Inflatable Restraint On Cessna 172,182, and 206 STC <u>SA01700LA</u>

Models 206H, T206H - Pilot/Co-Pilot Seat Only AAIR System

Weight-lbs.	Arm-in.	Moment-in.lbs.	
2.575	44.583	114.802	AAIR System Difference Added (EMA, P/N 508358-409)
(2.425)		108.113)	AAIR System Difference Added (EMA, P/N 508358-421)

Models 206H, T206H - Middle Seat Only AAIR System

Weight-lbs.	Arm-in.	Moment-in.lbs.	
3.875	65.382	253.356	AAIR System Difference Added (EMA, P/N 508358-409)
(3.725)		(243.547)	AAIR System Difference Added (EMA, P/N 508358-421)

FAA Approved 6-28-07

Page 5 of 5